


**Terminal covers**

The SZ-T type terminal cover conforms to DIN 57106 and VDE 0106 Teil 100 requirements regarding worker safety. The cover increases safety during maintenance and inspection.

| Description                                                      | Type                                             | Used with                                                        |                                                              |
|------------------------------------------------------------------|--------------------------------------------------|------------------------------------------------------------------|--------------------------------------------------------------|
| For contactor                                                    | <b>SZ-T1</b>                                     | SC-03, 0, SH-4                                                   |                                                              |
|                                                                  | <b>SZ-T2</b>                                     | SC-05, SH5                                                       |                                                              |
|                                                                  | <b>SZ-T3</b>                                     | SC-4-0, 4-1                                                      |                                                              |
|                                                                  | <b>SZ-T4</b>                                     | SC-5-1, SJ-1SG                                                   |                                                              |
|                                                                  | <b>SZ-T22</b>                                    | SC-N1, N2                                                        |                                                              |
|                                                                  | <b>SZ-T23</b>                                    | SC-N2S, N3                                                       |                                                              |
|                                                                  | <b>SZ-N4T</b>                                    | SC-N4, N5A                                                       |                                                              |
|                                                                  | <b>SZ-N6T</b>                                    | SC-N6                                                            |                                                              |
|                                                                  | <b>SZ-N7T</b>                                    | SC-N7                                                            |                                                              |
|                                                                  | <b>SZ-N8T</b>                                    | SC-N8, N10                                                       |                                                              |
|                                                                  | <b>SZ-N11T</b>                                   | SC-N11, N12                                                      |                                                              |
| For starter                                                      | <b>SZ-T1</b><br><b>SZ-T12</b>                    | SW-03/3H, 0/3H                                                   |                                                              |
|                                                                  | <b>SZ-T2</b><br><b>SZ-T12</b>                    | SW-05/3H                                                         |                                                              |
|                                                                  | <b>SZ-T3</b><br><b>SZ-T13</b>                    | SW-4-0/3H, 4-1/3H<br>SJ-1SWG                                     |                                                              |
|                                                                  | <b>SZ-T4</b><br><b>SZ-T13</b>                    | SW-5-1/3H                                                        |                                                              |
|                                                                  | <b>SZ-T22</b><br><b>SZ-T16</b>                   | SW-N1/3H, N2/3H                                                  |                                                              |
|                                                                  | <b>SZ-T23</b><br><b>SZ-T17</b>                   | SW-N2S/3H, N3/3H                                                 |                                                              |
|                                                                  | <b>SZ-N4T</b><br><b>SZ-WN4T</b>                  | SW-N4/3H, N5A/3H                                                 |                                                              |
|                                                                  | <b>SZ-N6T</b><br><b>SZ-WN6T</b>                  | SW-N6/3H                                                         |                                                              |
|                                                                  | <b>SZ-N7T</b><br><b>SZ-WN7T</b>                  | SW-N7/3H                                                         |                                                              |
|                                                                  | <b>SZ-N8T</b><br><b>SZ-WN8T</b>                  | SW-N8/3H                                                         |                                                              |
|                                                                  | <b>SZ-N8T</b><br><b>SZ-WN10T</b>                 | SW-N10/3H                                                        |                                                              |
|                                                                  | <b>SZ-N11T</b><br><b>SZ-WN11T</b>                | SW-N11/3H, N12/3H                                                |                                                              |
|                                                                  | For auxiliary contact block                      | <b>SZ-T5</b>                                                     | SZ-A40, A31, A22, A222<br>SZ-A40H, A31H, A22H                |
|                                                                  |                                                  | <b>SZ-T6</b><br><b>SZ-T7</b>                                     | SZ-A20, A11, A02, A111<br>SZ-AS1, AS2<br>SZ-AS1H, AS2H, AS3H |
| <b>SZ-T12</b><br><b>SZ-T13</b><br><b>SZ-T16</b><br><b>SZ-T17</b> |                                                  | TR-0N, TK-0N<br>TR-5-1N, TK-5-1N<br>TR-N2, TK-N2<br>TR-N3, TK-N3 |                                                              |
| For thermal overload relay on-contactor mounting                 | <b>SZ-T14</b><br><b>SZ-T15</b><br><b>SZ-RN6T</b> | TR-N2H, TK-N2H<br>TR-N3H, TK-N3H<br>TR-N6H, TK-N6H               |                                                              |
| For thermal overload relay separate mounting                     | <b>SZ-T10</b><br><b>SZ-T11</b>                   | SZ-HB<br>SZ-HC                                                   |                                                              |
| Thermal overload relay base unit for separate mounting           | <b>SZ-T7</b>                                     | SZ-CD5, SZ-CD6                                                   |                                                              |

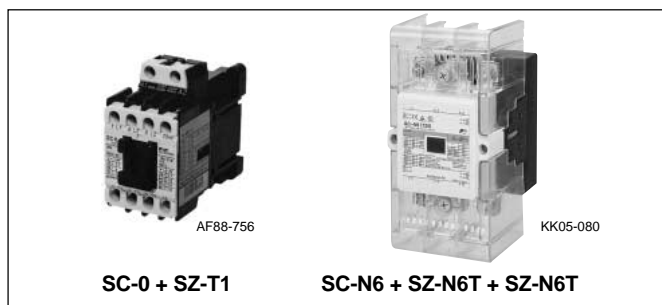

| Description                    | Type                                                                                           | Used with                                                                                 |                 |
|--------------------------------|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|-----------------|
| For reversing contactor        | <b>SZ-T1</b><br><b>SZ-T2</b><br><b>SZ-T3</b><br><b>SZ-T4</b><br><b>SZ-T22</b><br><b>SZ-T23</b> | SC-03RM, 0RM<br>SC-05RM<br>SC-4-0RM, 4-1RM<br>SC-5-1RM<br>SC-N1RM, N2RM<br>SC-N2SRM, N3RM |                 |
|                                | <b>SZ-N4RT1</b><br><b>SZ-N4RT2</b>                                                             | SC-N4RM, N5ARM                                                                            |                 |
|                                | <b>SZ-N6RT1</b><br><b>SZ-N6RT2</b>                                                             | SC-N6RM                                                                                   |                 |
|                                | <b>SZ-N7RT1</b><br><b>SZ-N7RT2</b>                                                             | SC-N7RM                                                                                   |                 |
|                                | <b>SZ-N8RT1</b><br><b>SZ-N8RT2</b>                                                             | SC-N8RM, N10RM                                                                            |                 |
|                                | <b>SZ-N11RT1</b><br><b>SZ-N11RT2</b>                                                           | SC-N11RM, N12RM                                                                           |                 |
|                                | For reversing starter                                                                          | <b>SZ-T1</b><br><b>SZ-T12</b>                                                             | SW-03RM, 0RM    |
|                                |                                                                                                | <b>SZ-T2</b><br><b>SZ-T12</b>                                                             | SW-05RM         |
|                                |                                                                                                | <b>SZ-T3</b><br><b>SZ-T13</b>                                                             | SW-4-0RM, 4-1RM |
|                                |                                                                                                | <b>SZ-T4</b><br><b>SZ-T13</b>                                                             | SW-5-1RM        |
|                                |                                                                                                | <b>SZ-T22</b><br><b>SZ-T16</b>                                                            | SW-N1RM, N2RM   |
| <b>SZ-T23</b><br><b>SZ-T17</b> |                                                                                                | SW-N2SRM, N3RM                                                                            |                 |

■ **Contactors and starters with terminal cover**

Contactors, starters, industrial relays, and thermal overload relays with a terminal cover are also available as the finger-protected type for the European market. Suffix the code /T at the end of the type number, when ordering, for this type.

**Example**

**SC-03/T** type: Contactor **SC-03**+Terminal cover **SZ-T1**  
**SW-03/3HT** type: Starter **SW-03/3H**+Terminal cover **SZ-T1**+**SZ-T12**