
 

SG1-80 w/o Mounting Bracket:

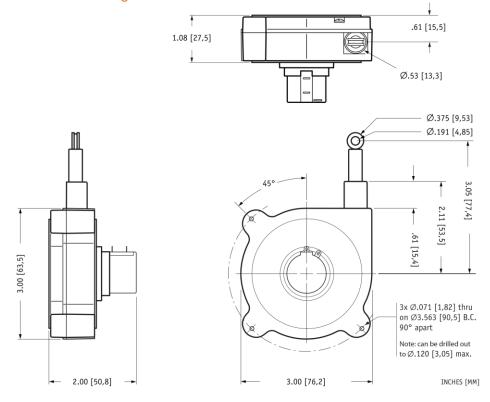




*tolerance = +.005 -.001 [+.13 -.03] **tolerance = +.005 -.005 [+.13 -.13]

 SG1-120 w/o Mounting Bracket:

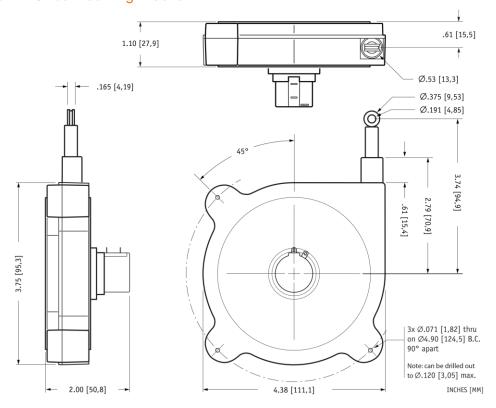





*tolerance = +.005 -.001 [+.13 -.03] **tolerance = +.005 -.005 [+.13 -.13]

SENSOR SOLUTIONS /// SG1 12//2015 Page 3

 SG1-80 w/ Mounting Bracket:




*tolerance = +.005 -.001 [+.13 -.03] **tolerance = +.005 -.005 [+.13 -.13]

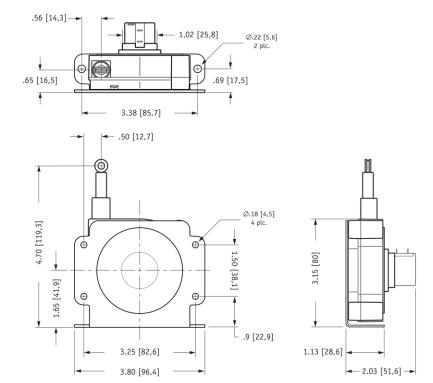


INCHES [MM]

 SG1-120 w/ Mounting Bracket:



*tolerance = +.005 -.001 [+.13 -.03] **tolerance = +.005 -.005 [+.13 -.13]

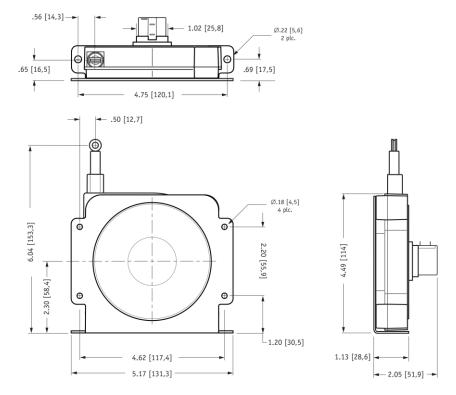

INCHES [MM]

SENSOR SOLUTIONS /// SG1 12//2015 Page 4