
# NR Series Breaker (Surface Mount Thermal Cutoff Device)

BOURNS

### Wiring Recommendations

This is not a surface mount device for reflow soldering. Therefore, Ni tab wiring should be accomplished by either resistance or laser welding. Solder connections should be avoided.

### **Typical Part Marking**

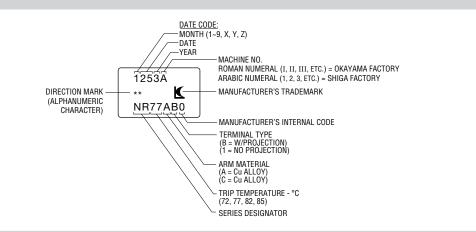

#### **Standard Packaging Specifications**

Plastic Bag	
Inner Box	
Outer Box	EQ QQQ rease may (the to 10 inner hower)

# BOURNS

Asia-Pacific: Tel: +886-2 2562-4117 • Email: asiacus@bourns.com EMEA: Tel: +36 88 520 390 • Email: eurocus@bourns.com The Americas: Tel: +1-951 781-5500 • Email: americus@bourns.com www.bourns.com

## NR Series Breaker (Surface Mount Thermal Cutoff Device)

BOURNS

### Caution when using Breaker

Before using the breaker, please fully read the DESIGN AND HANDLING CAUTIONS stated below so that there will be no breaker performance deterioration and/or damage to the breaker body or terminal.

### **DESIGN CAUTIONS**

- 1. Use within the electrical ratings specified in this data sheet. If used over the rating of voltage or current, ON-OFF life might be impacted and contact may be deteriorated due to breaker arm damage.
- 2. If used over the electrical rating, the circuit may not open safely. Please test your device for any abnormalities and confirm that the breaker will open the circuit safely in your device.
- 3. Mount the breaker on your device where heat is the highest in order to transfer it effectively to the breaker.
- 4. If the breaker is affixed with an adhesive (resin, etc.), fully test, evaluate and verify that the fixative presents no negative effects on the breaker before proceeding.
- 5. After the breaker is mounted, affix it so that the breaker body and terminals will not move. If not affixed, breaker resistance could increase or contact open due to stress during handling or vibration/shock during transportation.
- 6. Mount the breaker body and terminals in a straight and flat direction. If the body and terminals are mounted in a twisted condition, breaker resistance could increase or create body damage.
- 7. If breaker is to be resin-molded, test and evaluate to determine whether the breaker can be used effectively.
- 8. The breaker cannot be used as a repetitive ON-OFF thermostat.
- 9. The breaker is not washable. Do not wash.
- 10. The breaker is not designed nor guaranteed for flow, reflow or hand-soldering applications. If such application is required, test and evaluate in your specific application to confirm that the breaker can be used.
- 11. When mounting and after mounting the breaker, do not apply supersonic vibration. Vibration and heat may cause the breaker resistance to increase or may cause body damage. If you apply supersonic vibration after mounting the breaker, test and evaluate in your specific application to confirm that the breaker can be used.
- 12. Do not use the breaker in the following abnormal environments:
  - a) Water, oil, chemicals or organic solutions
  - b) Direct sunlight, outdoor exposure, dust
  - c) Dew condensation, allowing the breaker to get wet
  - d) Salt breeze, chlorine, hydrogen sulfide, ammonium, sulfide-oxidation, hydrogen chloride, and anywhere there is a possibility of generating corrosive gas such as ulfurous acid gas
  - e) Strong static electric charge or electromagnetic wave
- 13. Thie breaker is not designed or tested for, and should not be used in aerospace, airplane, nuclear, military, life-sustaining medical and other related equipment.