## Softstart

## **Diagram for softstarters**

**PS A18...60** 

PS D75...840


PS DH30...720


5309 698-1	Edition 4 D	ec-01	(English)




## STANDARD DIAGRAM

5366 104-1	PS A1860	Standard.
5366 104-2	PS D75840	Standard.
5366 104-3	PS D75840	Standard.
	PS DH30720	

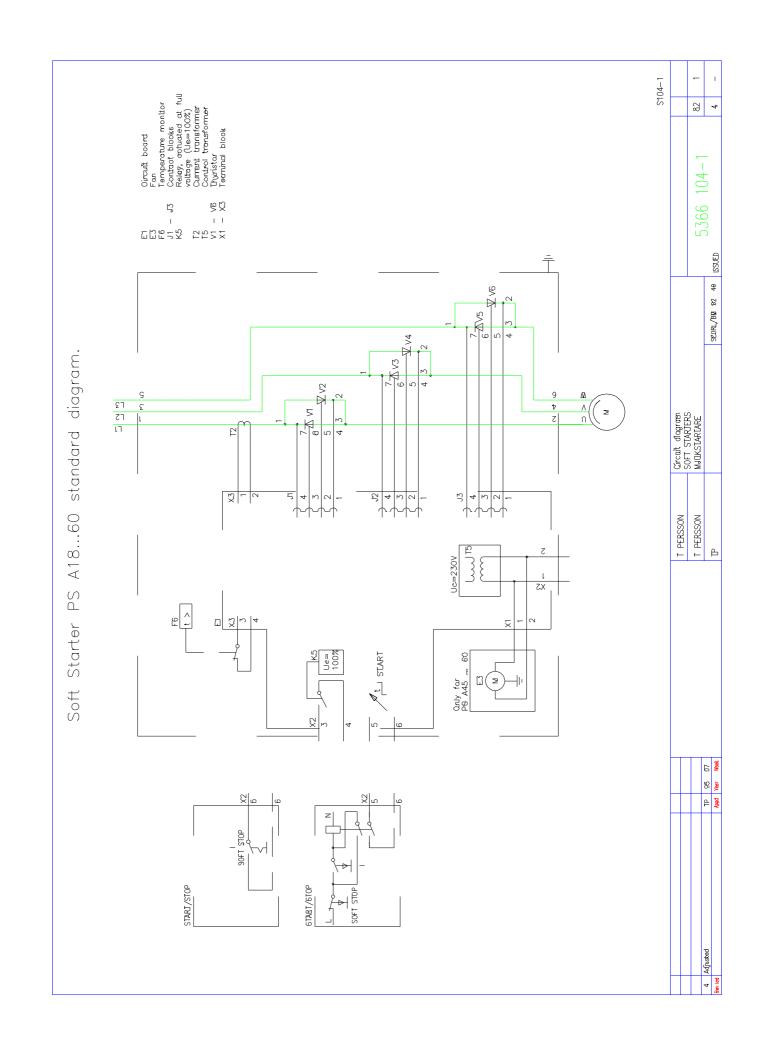

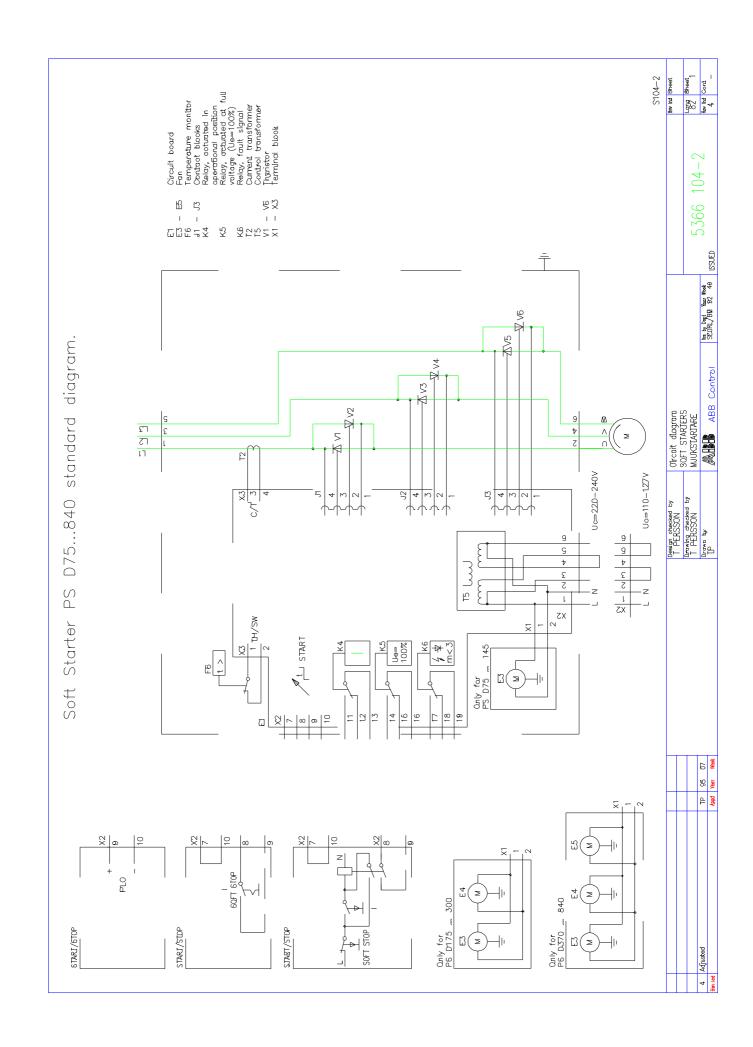


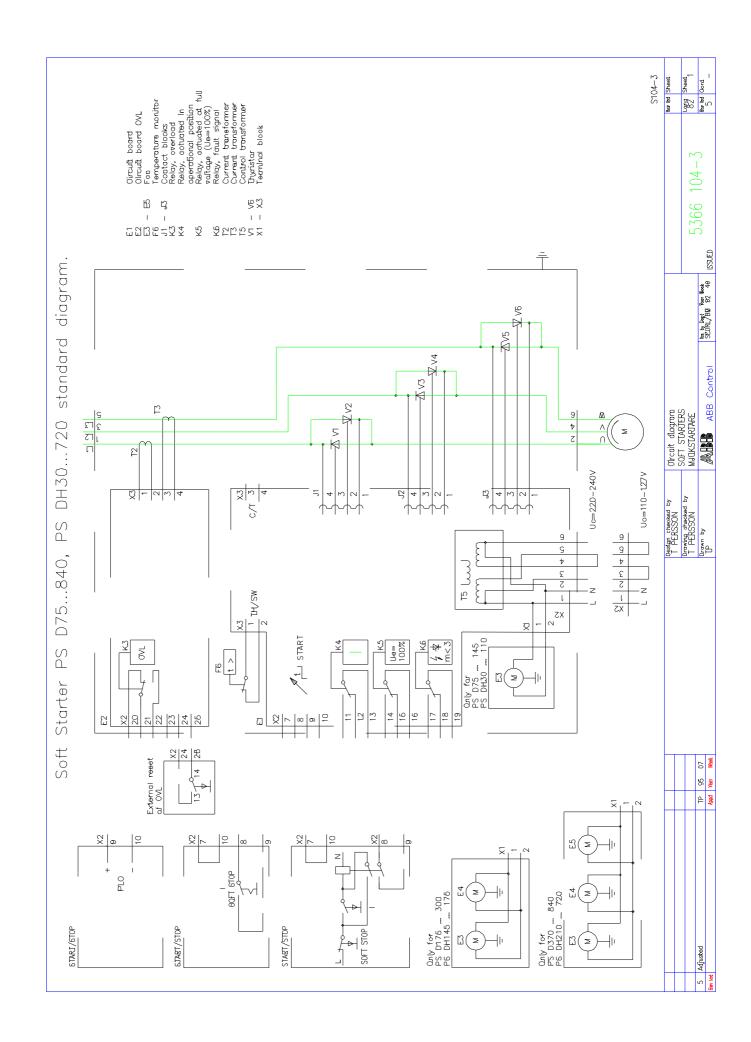



## **APPLICATION DIAGRAM**


5366 105-1 5366 105-2 5366 105-3 5366 105-4 5366 105-5	PS A1860 PS D75300 PS D370840 PS D75300 PS DH30250 PS D370840 PS DH300720	With motor protection and softstop.
5366 105-6 5366 105-7 5366 105-8 5366 105-9 5366 105-10	PS A1860 PS D75300 PS D370840 PS D75145 PS DH30110 PS D175300 PS DH145250	With softstop and By-pass. The internal overload relay is working also together with By-pass.
5366 105-11	PS D370840 PS DH300720	With softstop and By-pass. The internal overload relay is working also together with By-pass.
5366 105-12 5366 105-13 5366 105-14 5366 105-15 5366 105-16	PS A1860 PS D75300 PS D370840 PS D75145 PS DH30110 PS D175300 PS DH145250	With motor protection, softstop and By-pass. The internal overload relay is working also together with By-pass.
5366 105-17	PS D370840 PS DH300720	With motor protection, softstop and By-pass. The internal overload relay is working also together with By-pass.
5366 105-18 5366 105-19 5366 105-20 5366 105-21	PS A1860 PS D75300 PS D370840 PS D75840 PS DH30720	With reversing and softstop. With reversing and softstop. With reversing and softstop. With reversing and softstop.
5366 105-22 5366 105-23 5366 105-24 5366 105-25	PS A1860 PS D75300 PS D370840 PS D75145 PS DH30110	With reversing, By-pass and softstop.
5366 105-26	PS D175300 PS DH145250	With reversing, By-pass and softstop. The internal overload relay is working also together with By-pass.
5366 105-27	PS D370840 PS DH300720	With reversing, By-pass and softstop. The internal overload relay is working also together with By-pass.


5366 105-28	PS A1860	With pole-changing and softstop. For motor with two winding.
5366 105-29	PS D75300	With pole-changing and softstop. For motor with two winding.
5366 105-30	PS D370840	With pole-changing and softstop. For motor with two winding.
5366 105-31	PS A1860	With pole-changing, By-pass and softstop. For motor with two winding.
5366 105-32	PS D75300	With pole-changing, By-pass and softstop. For motor with two winding.
5366 105-33	PS D370840	With pole-changing, By-pass and softstop. For motor with two winding.
5366 105-34	PS A1860	With pole-changing and softstop.
		For motor with one winding (Dallander).
5366 105-35	PS D75300	With pole-changing and softstop.
5500 105-55	F3 D73300	
5366 105-36	PS D370840	For motor with one winding (Dallander). With pole-changing and softstop.
		For motor with one winding (Dallander). With pole-changing and softstop. For motor with one winding (Dallander). With pole-changing, By-pass and softstop.
5366 105-36	PS D370840	For motor with one winding (Dallander). With pole-changing and softstop. For motor with one winding (Dallander).

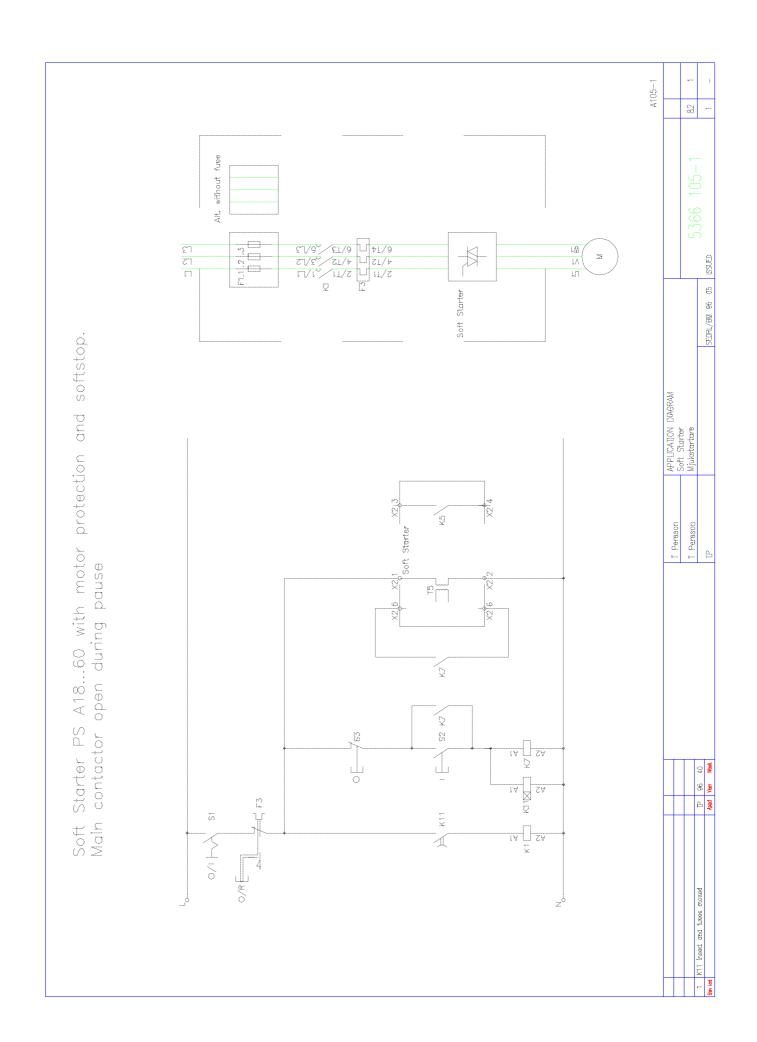


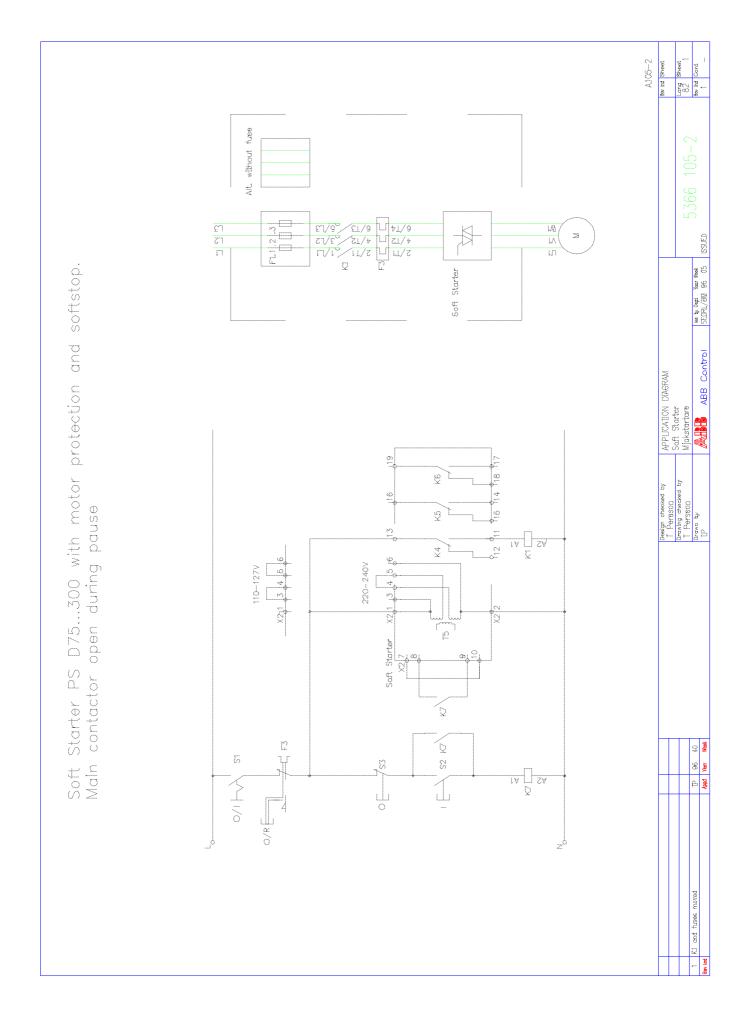


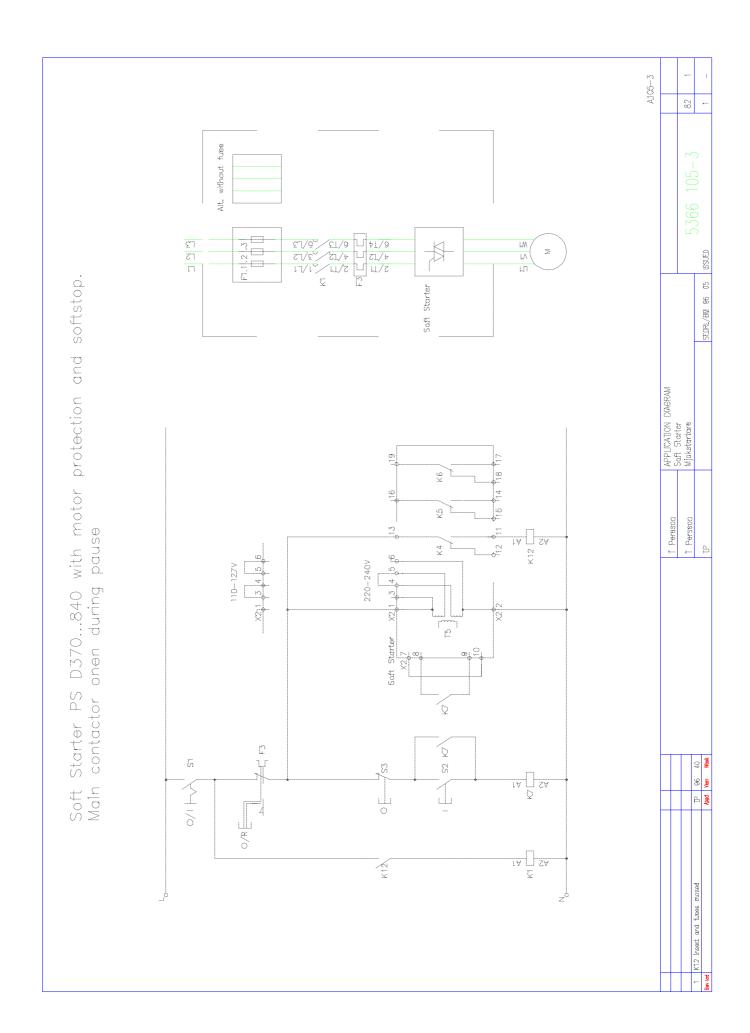


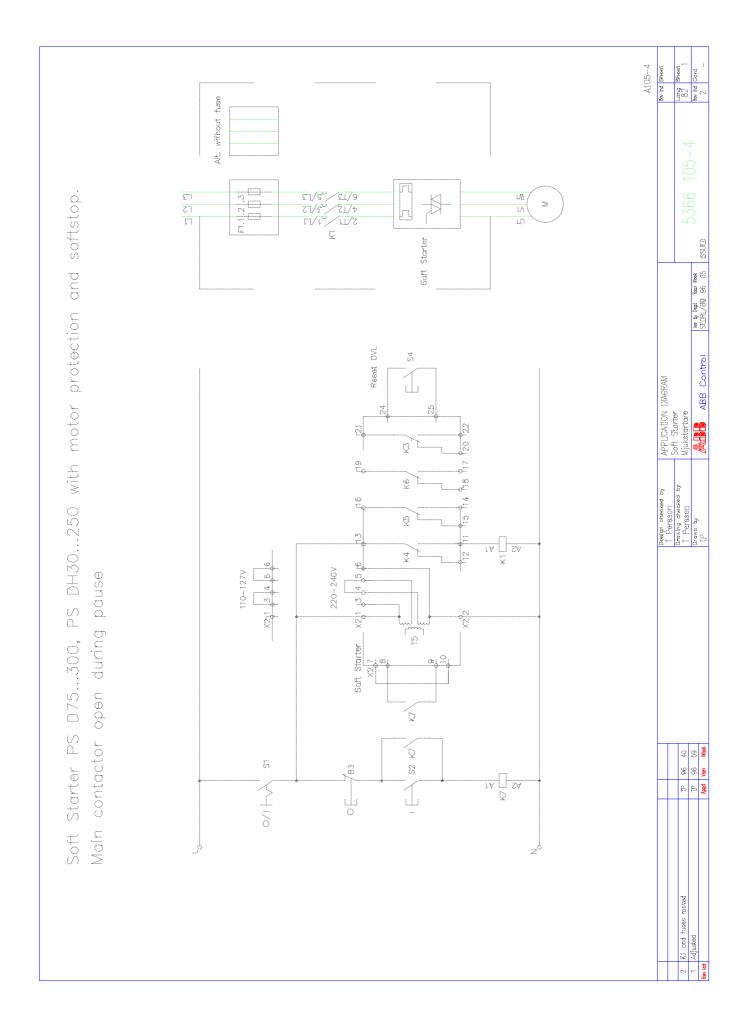


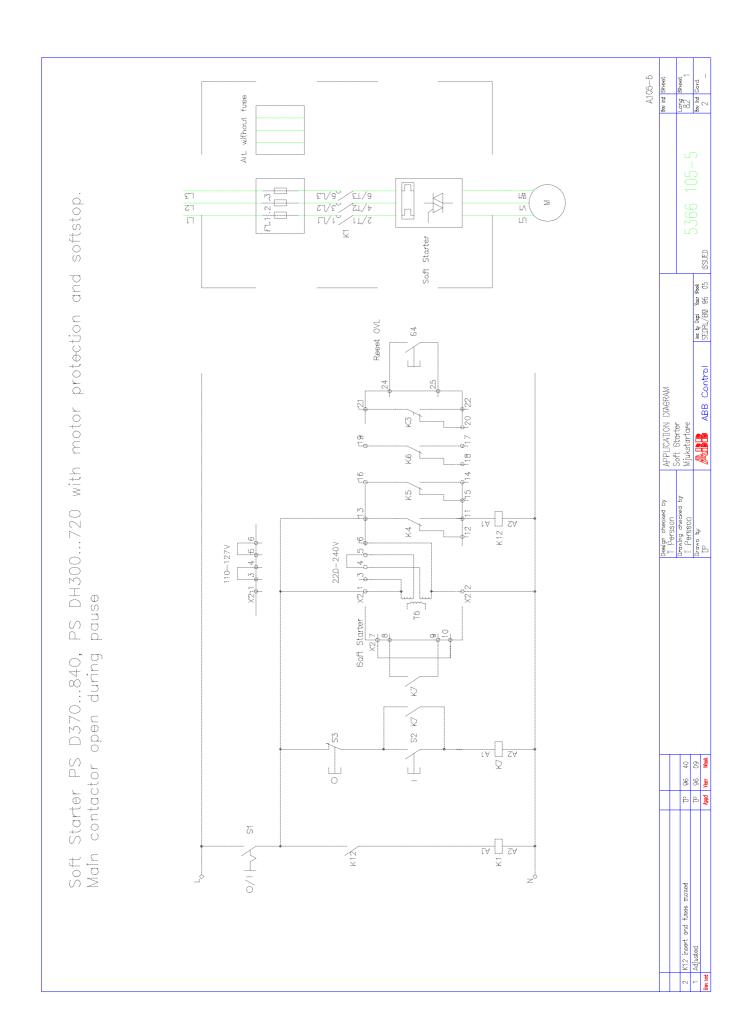


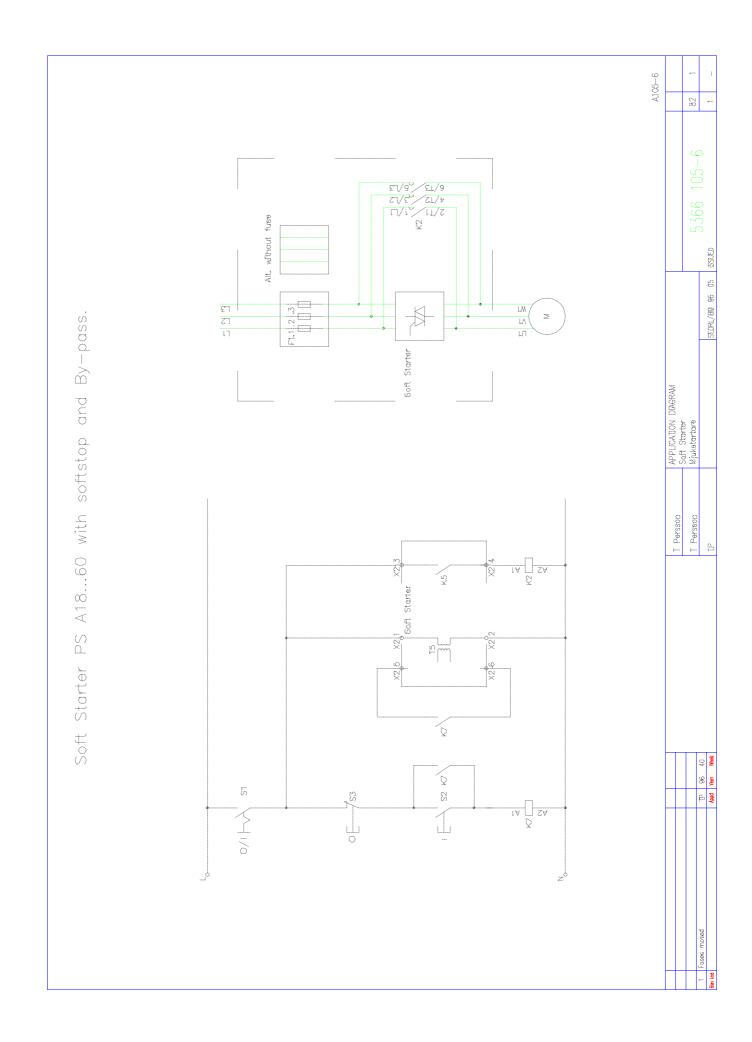


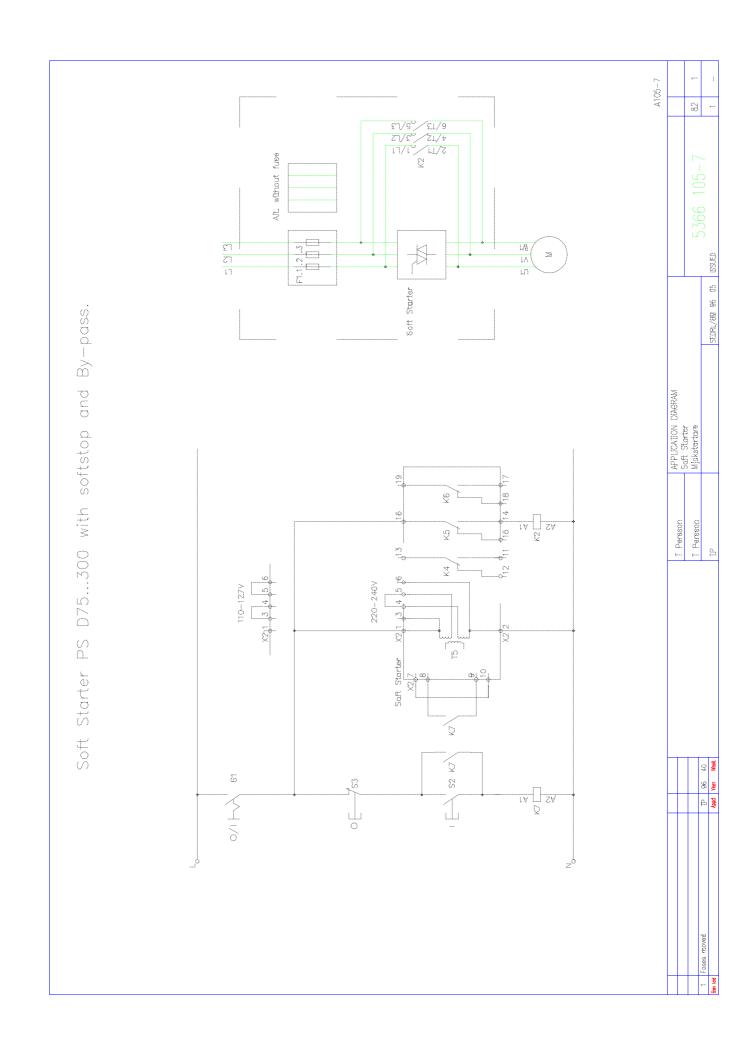


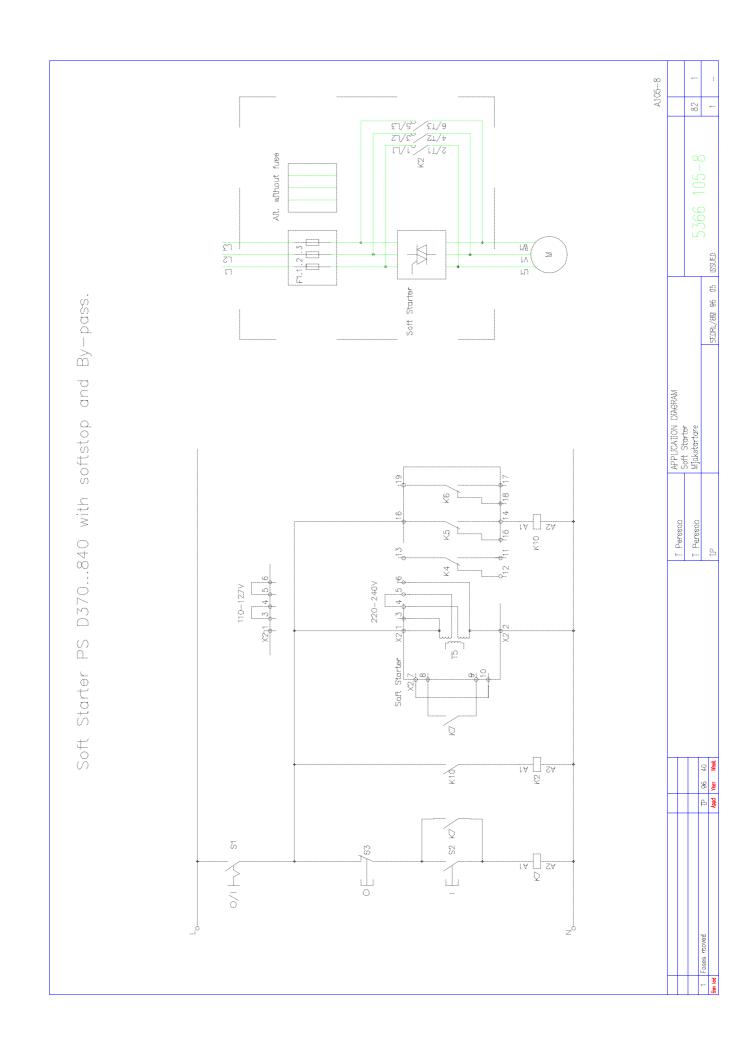


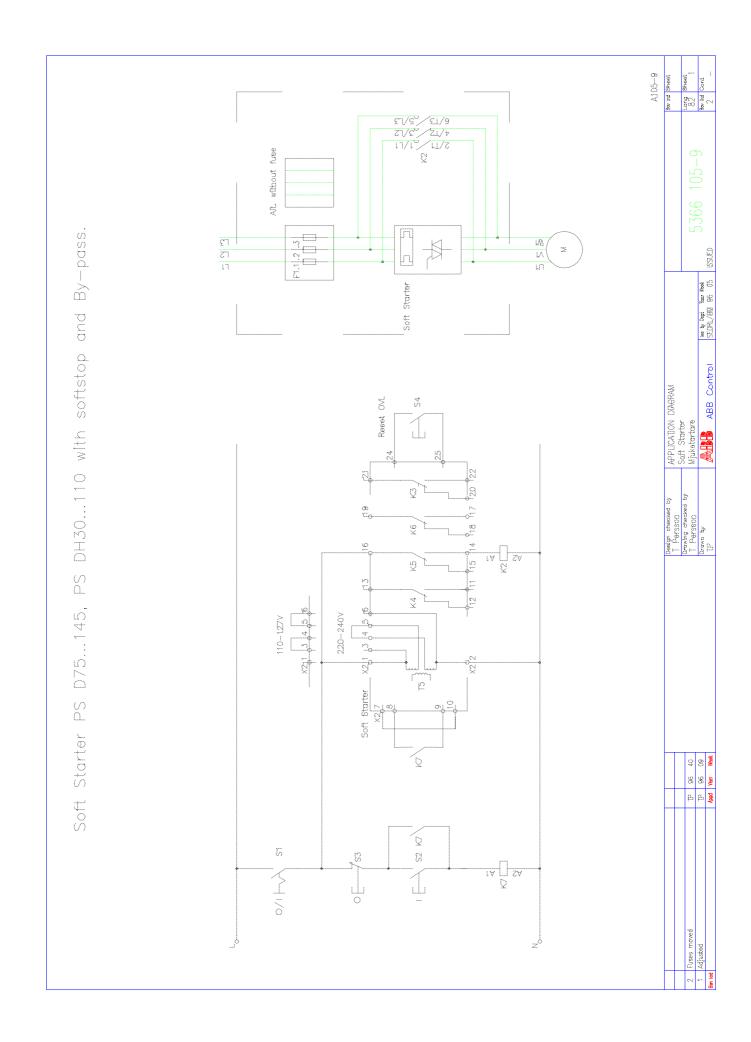


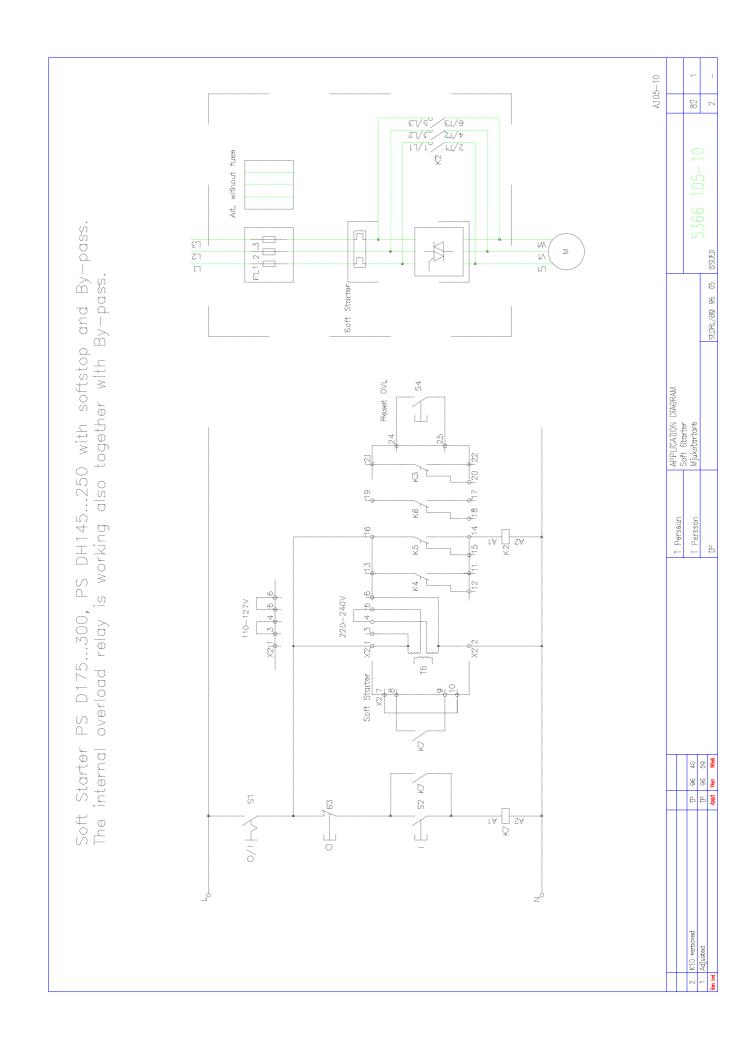


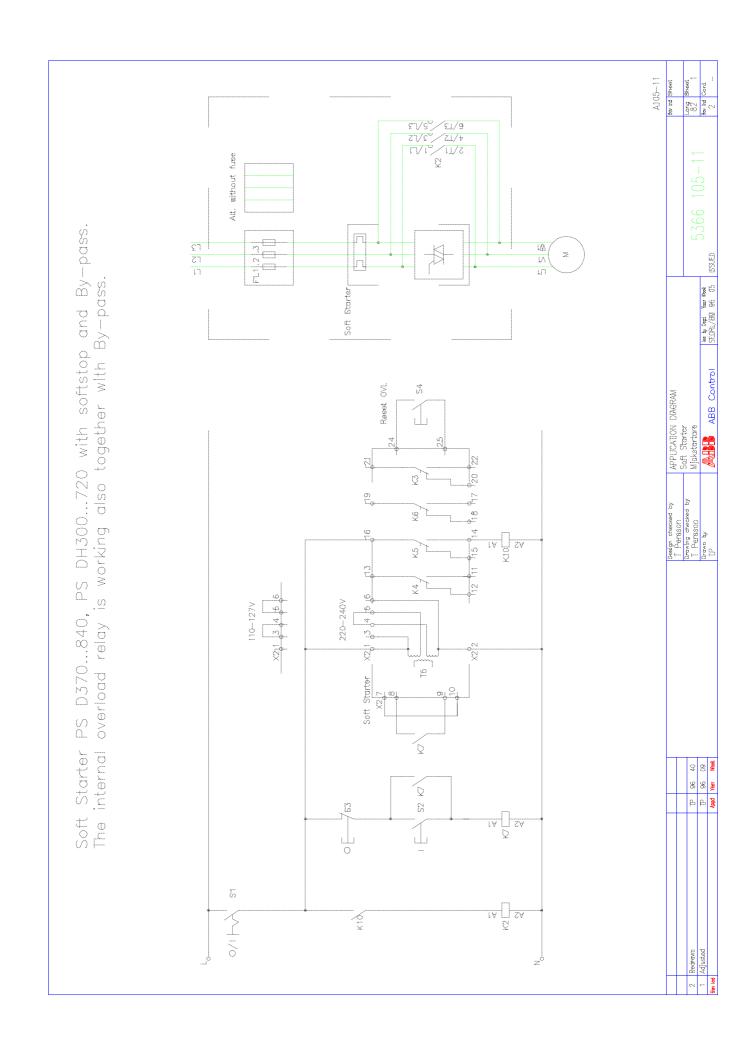


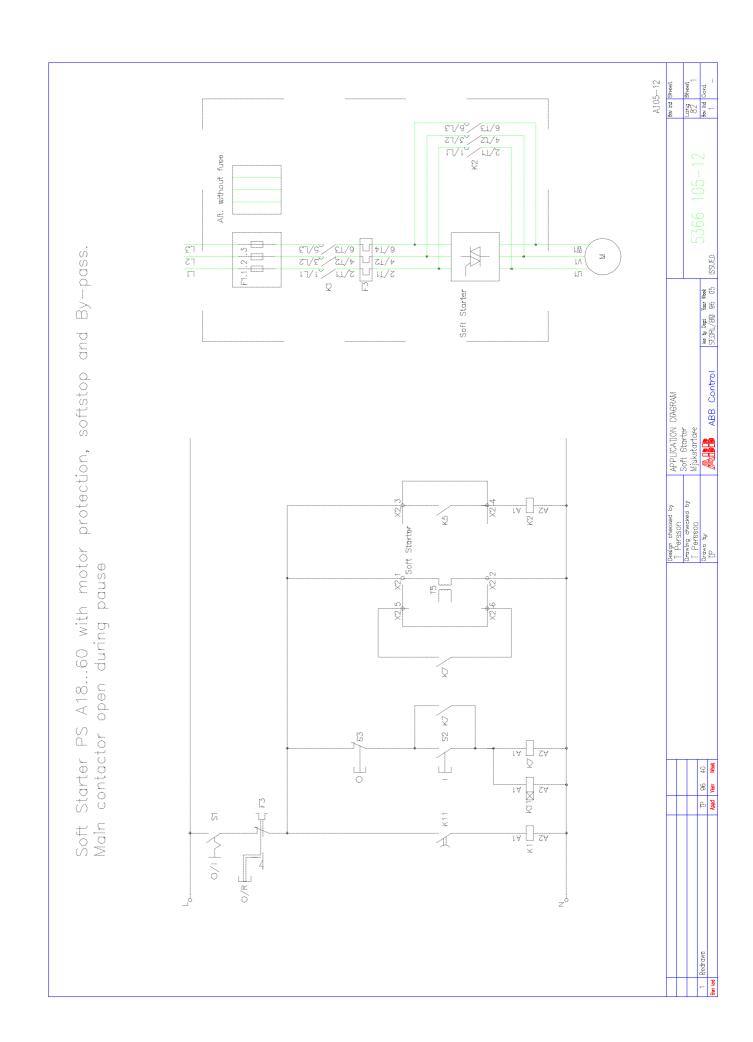


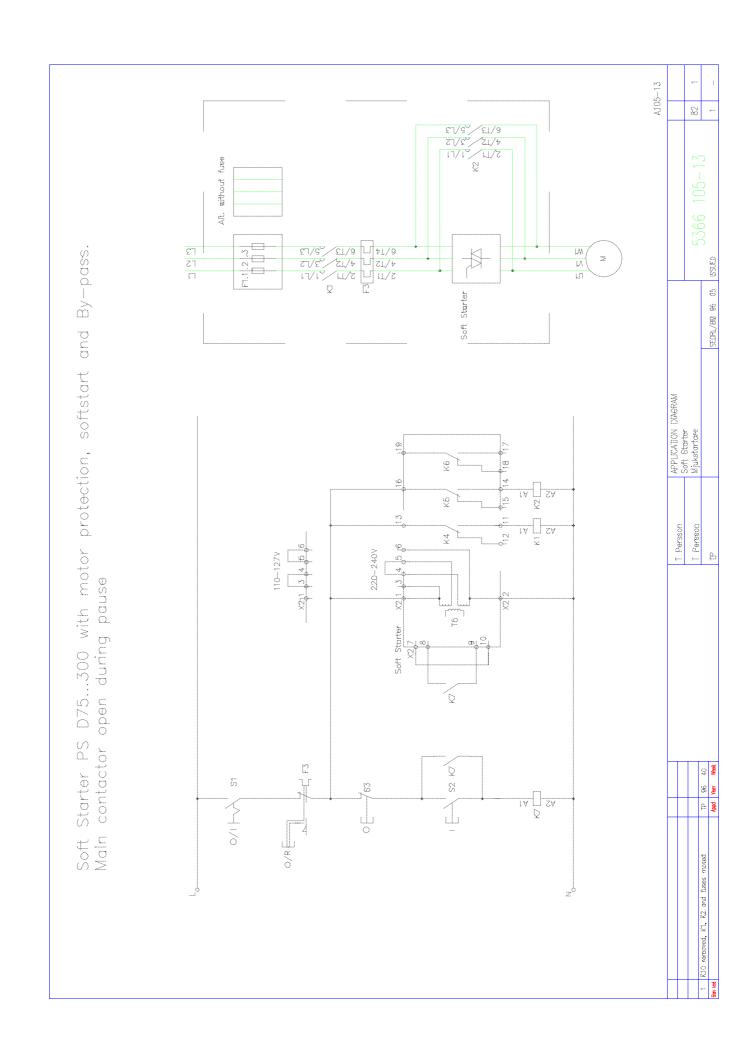


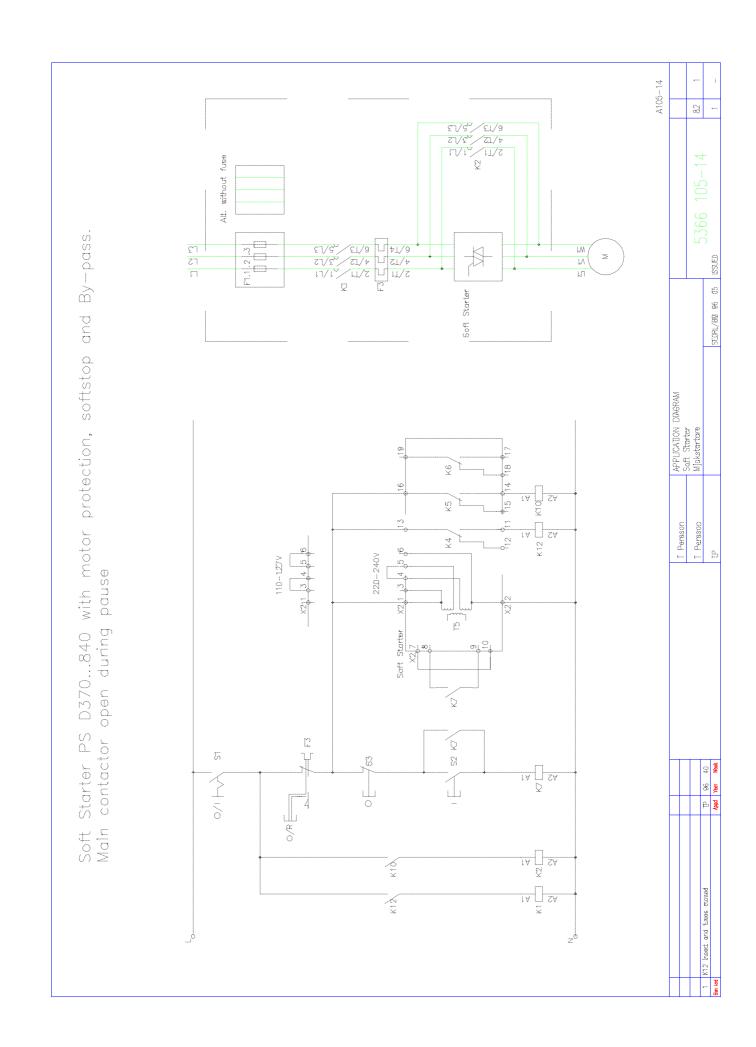


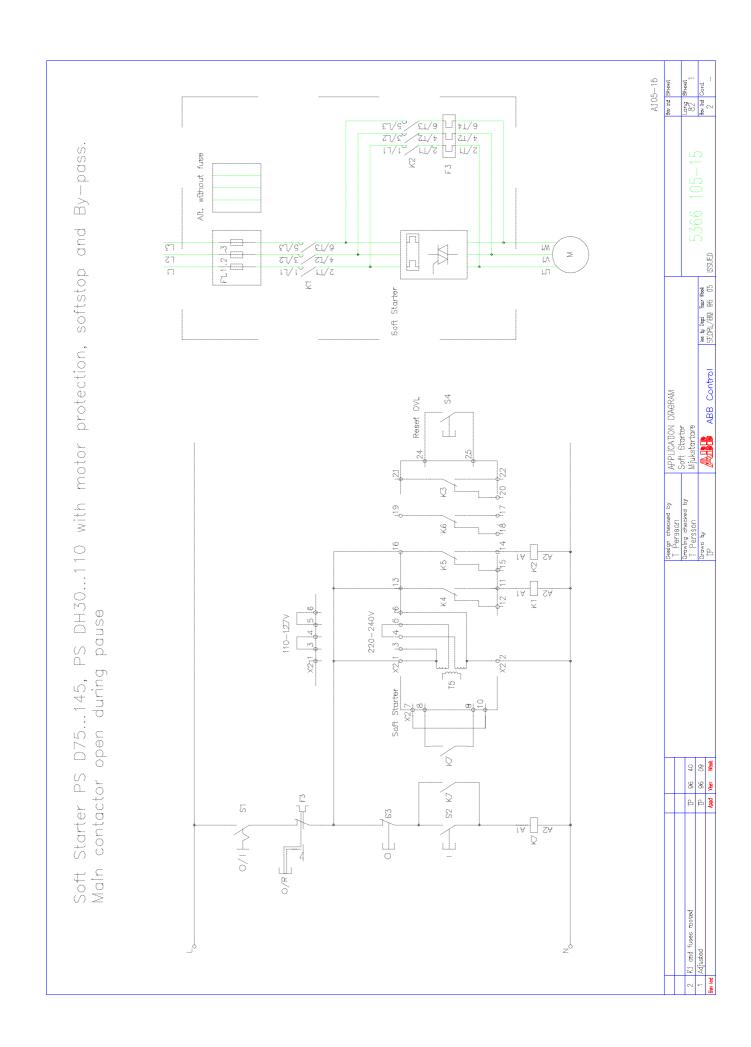


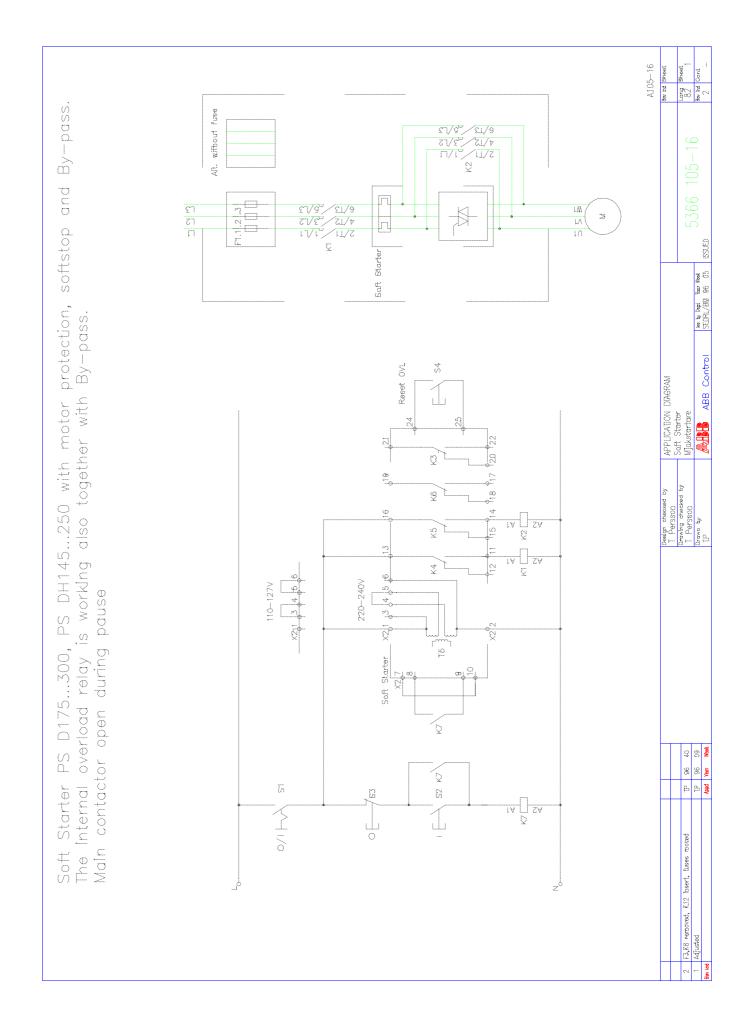


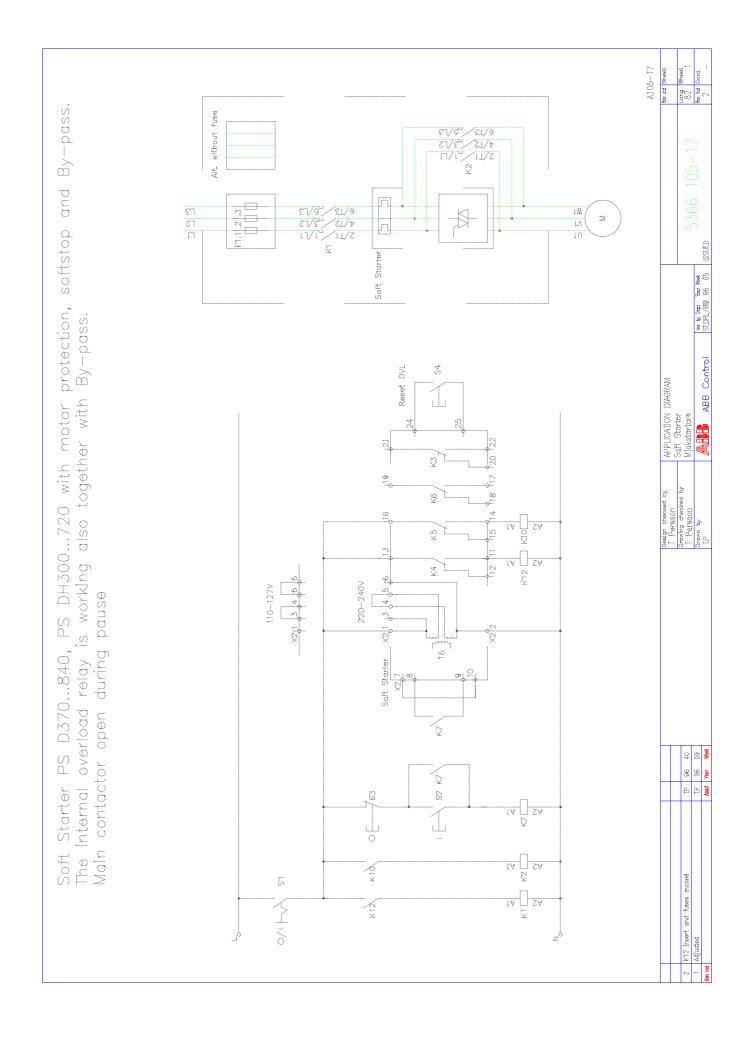


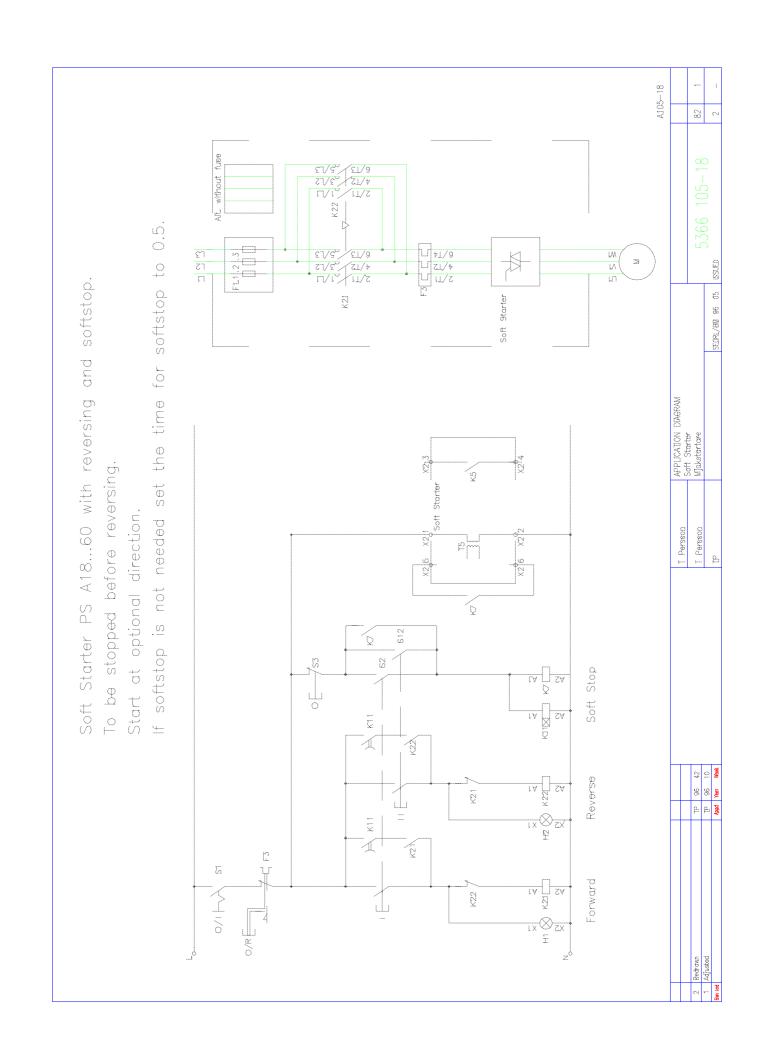


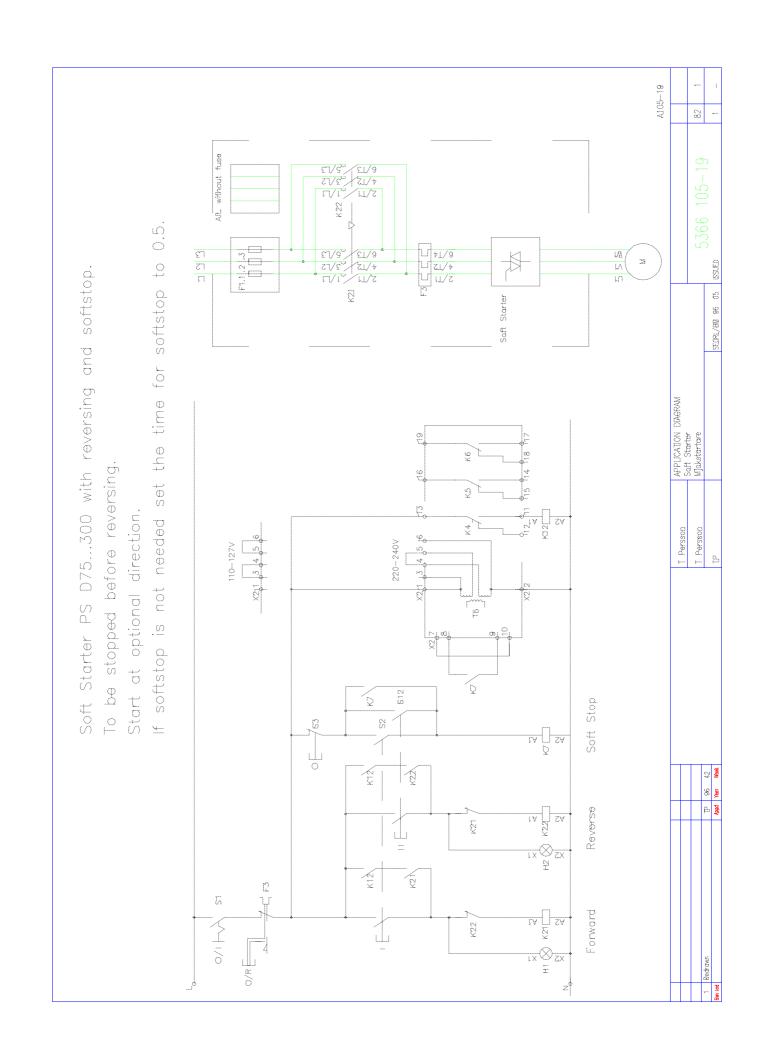


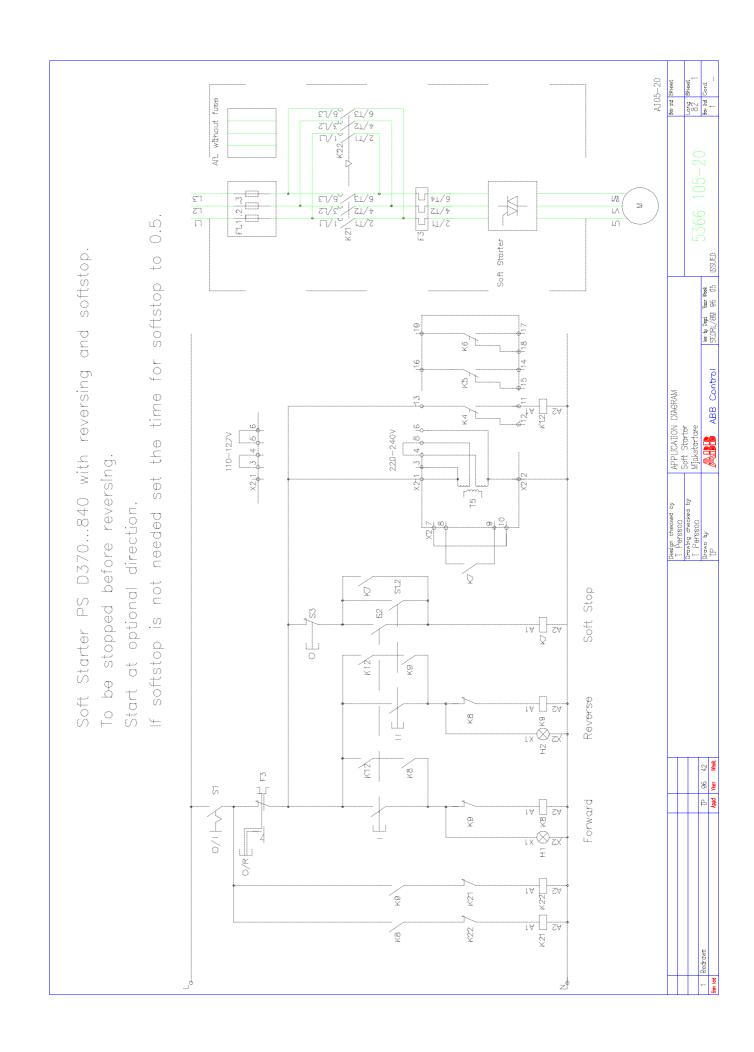


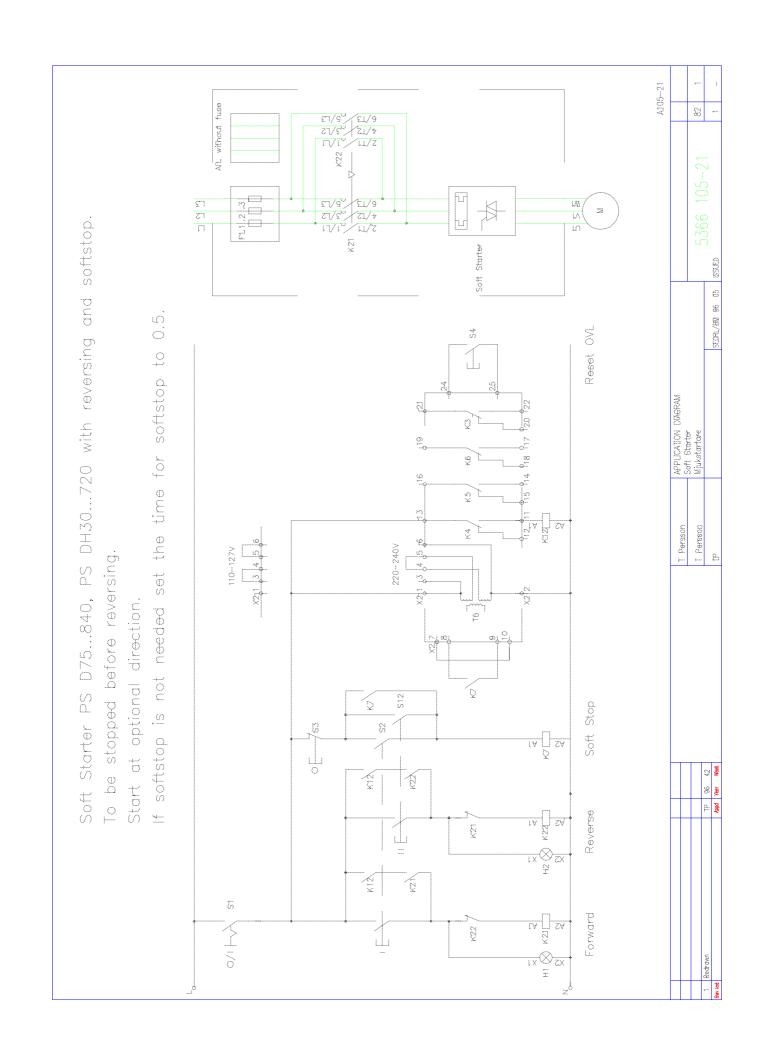


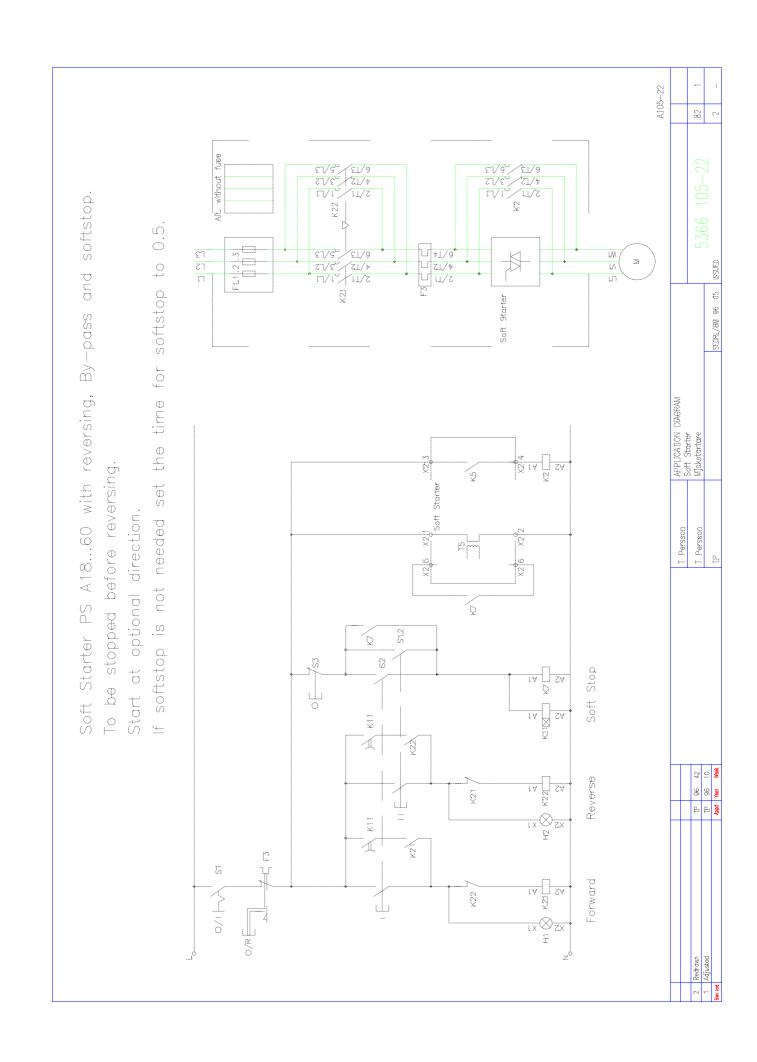


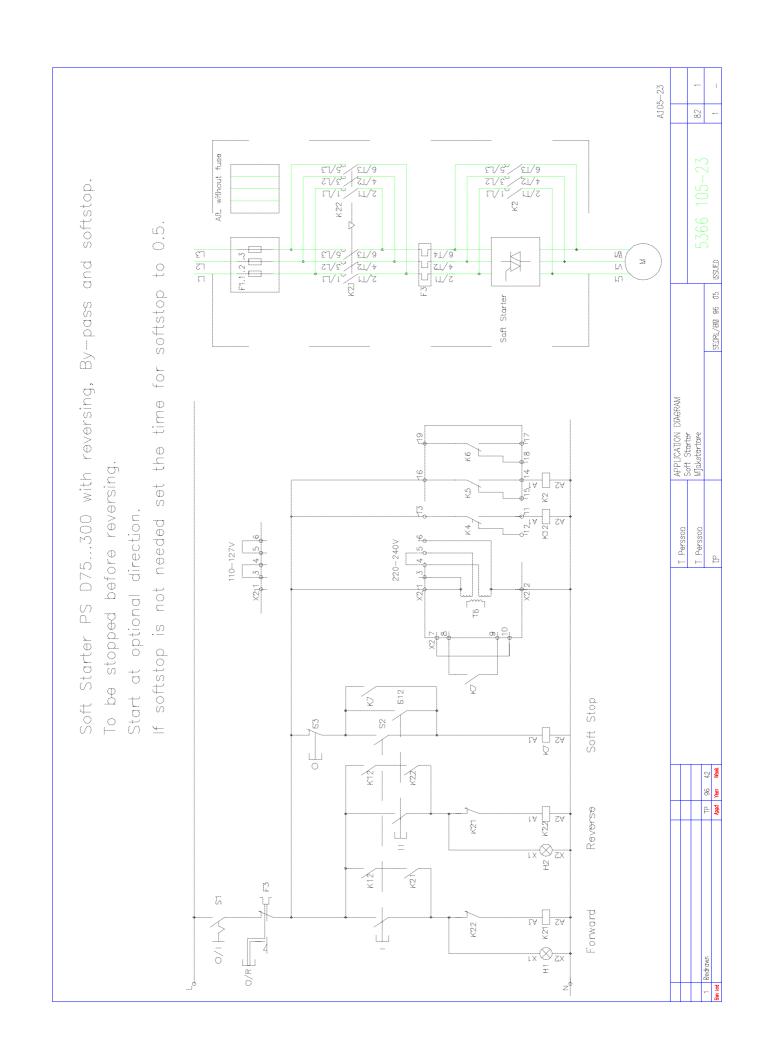


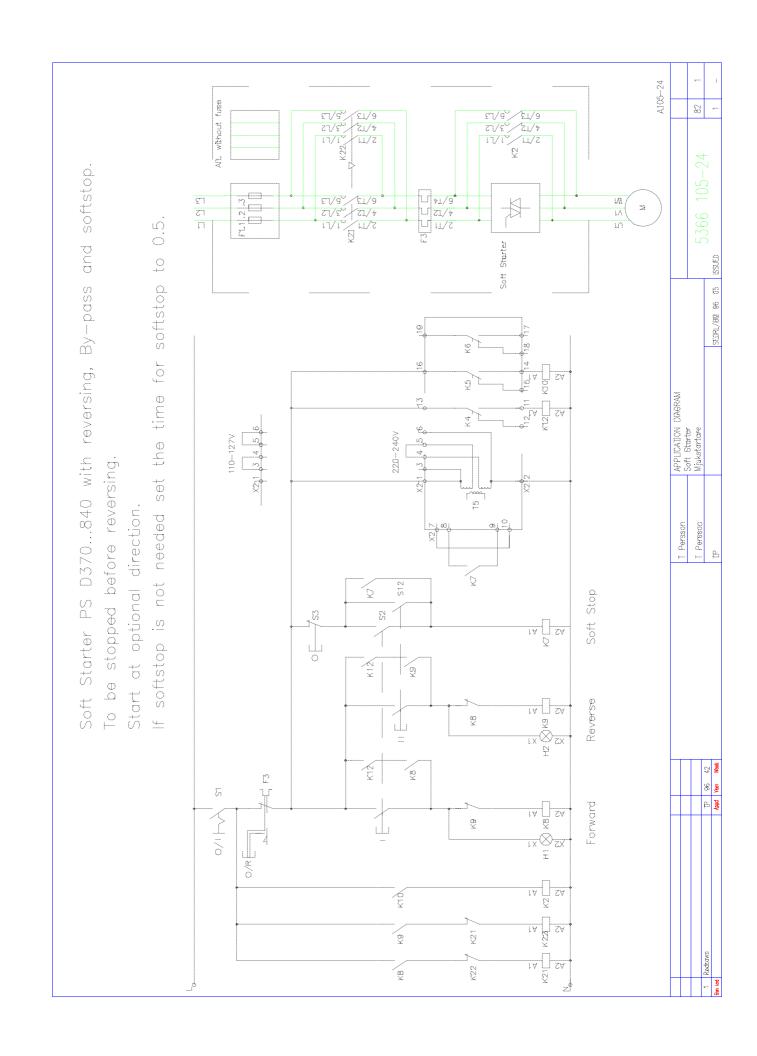


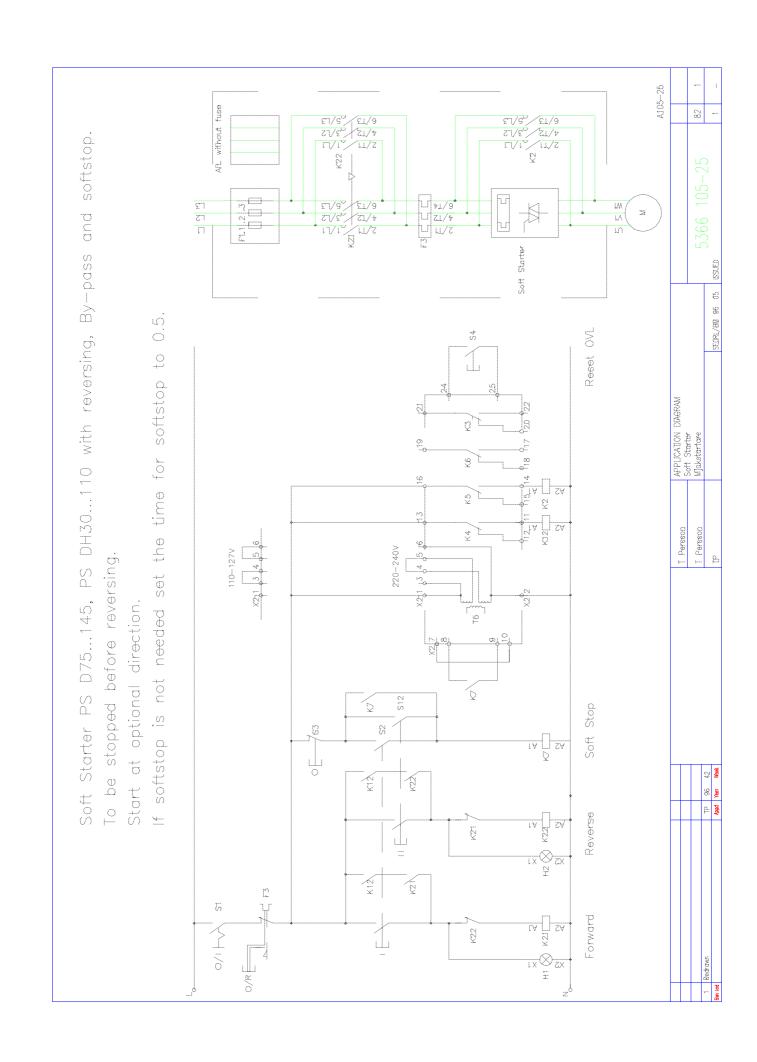


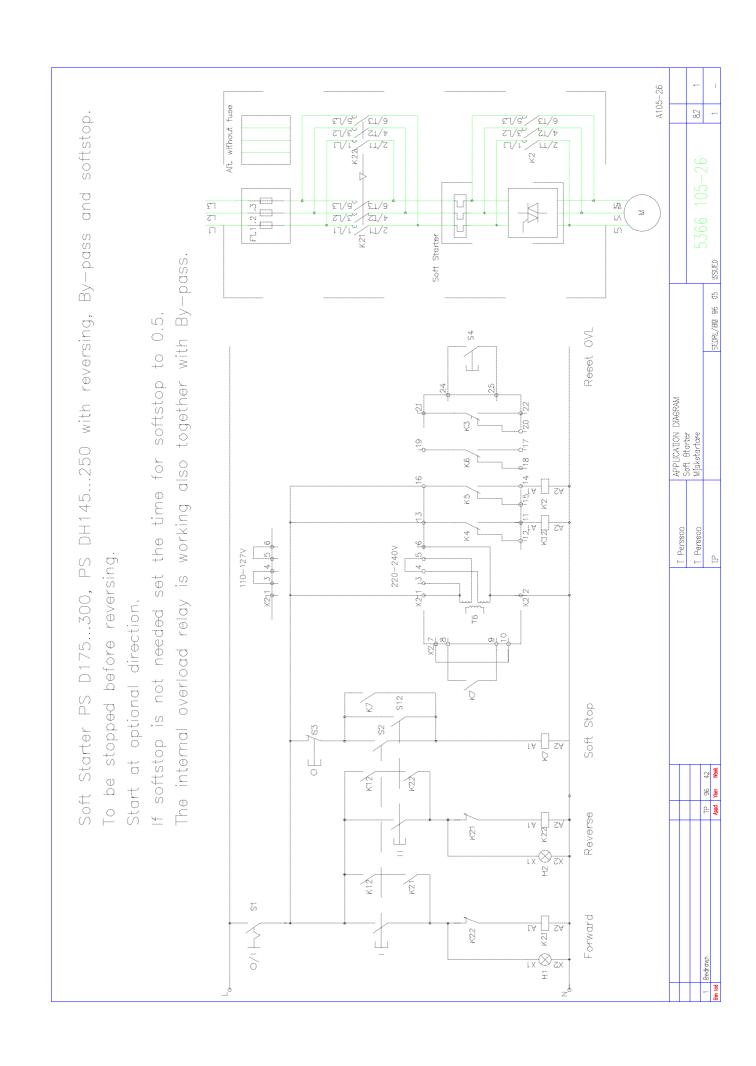


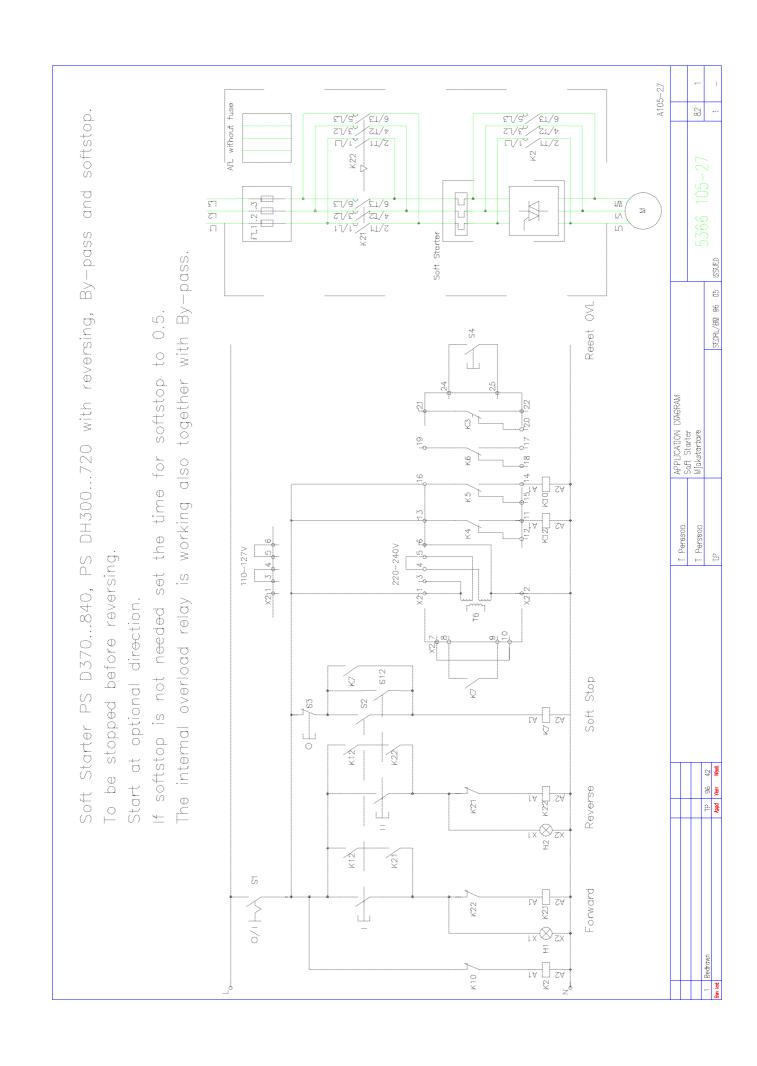


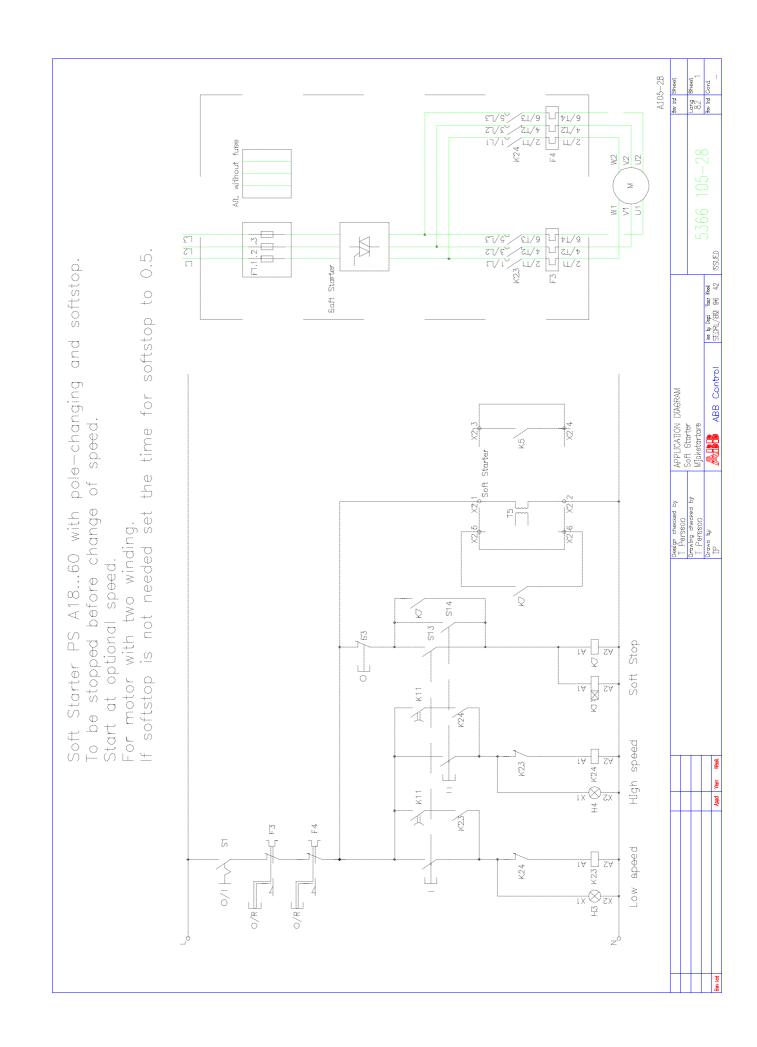


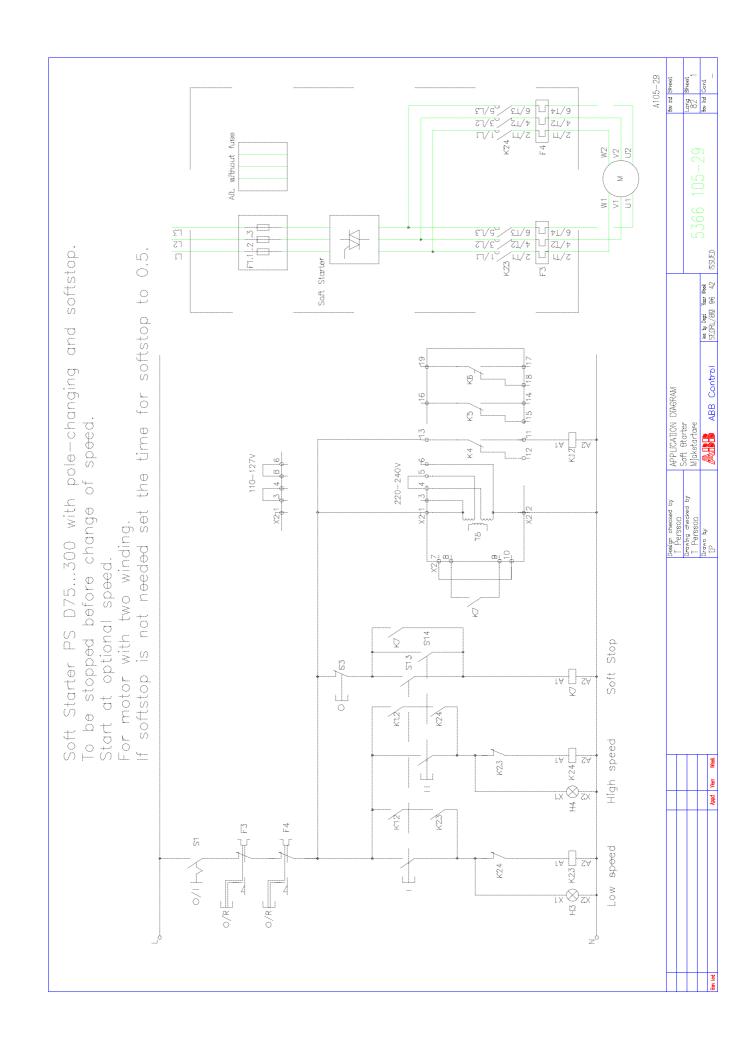


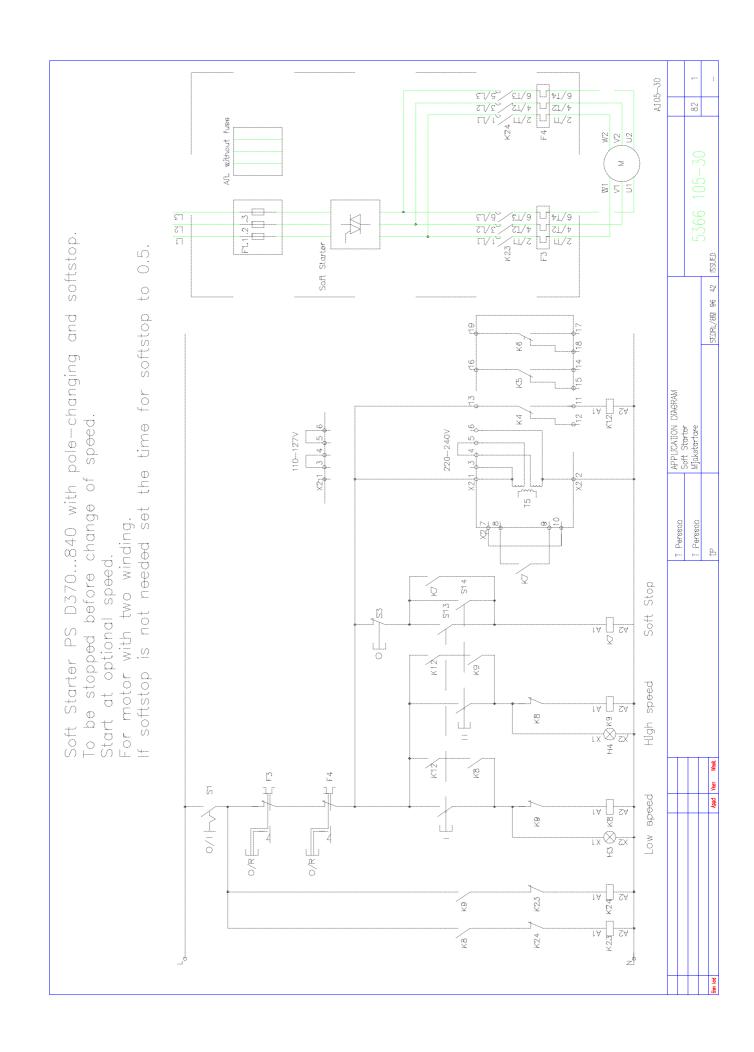


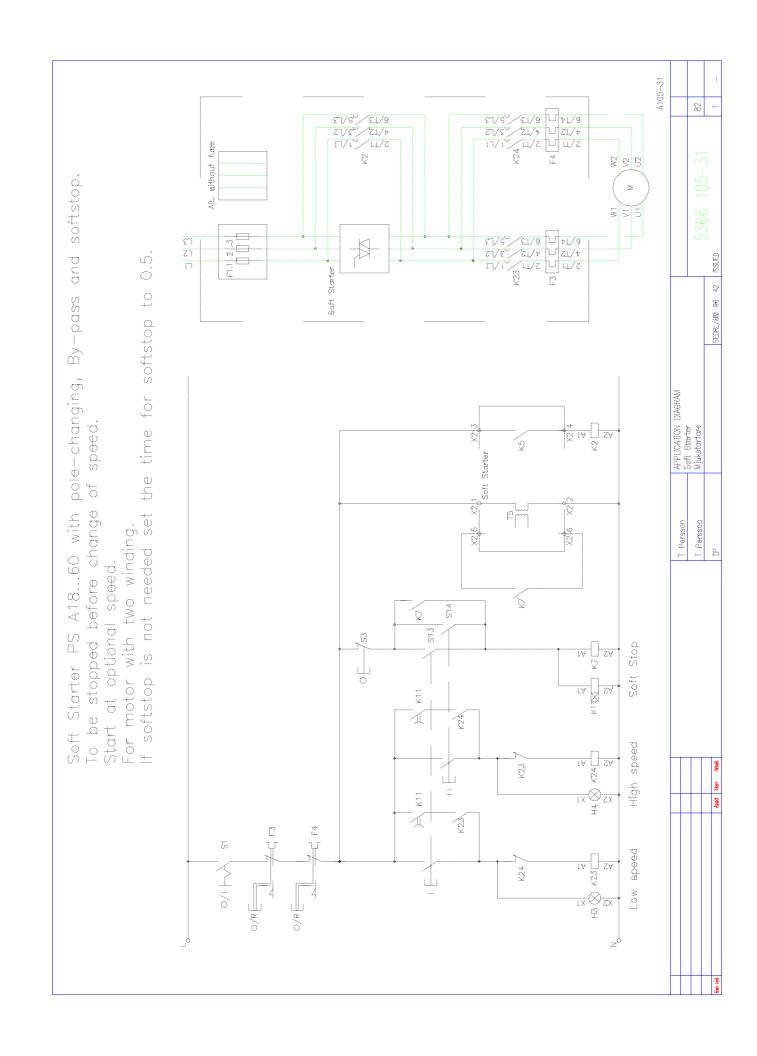


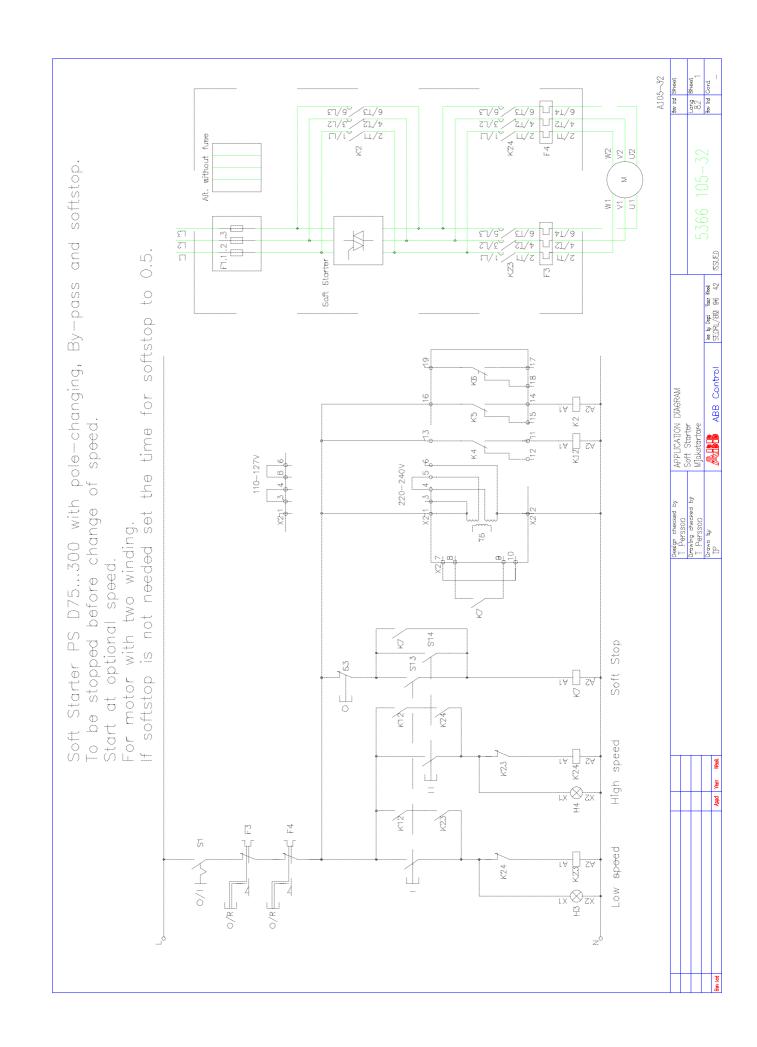


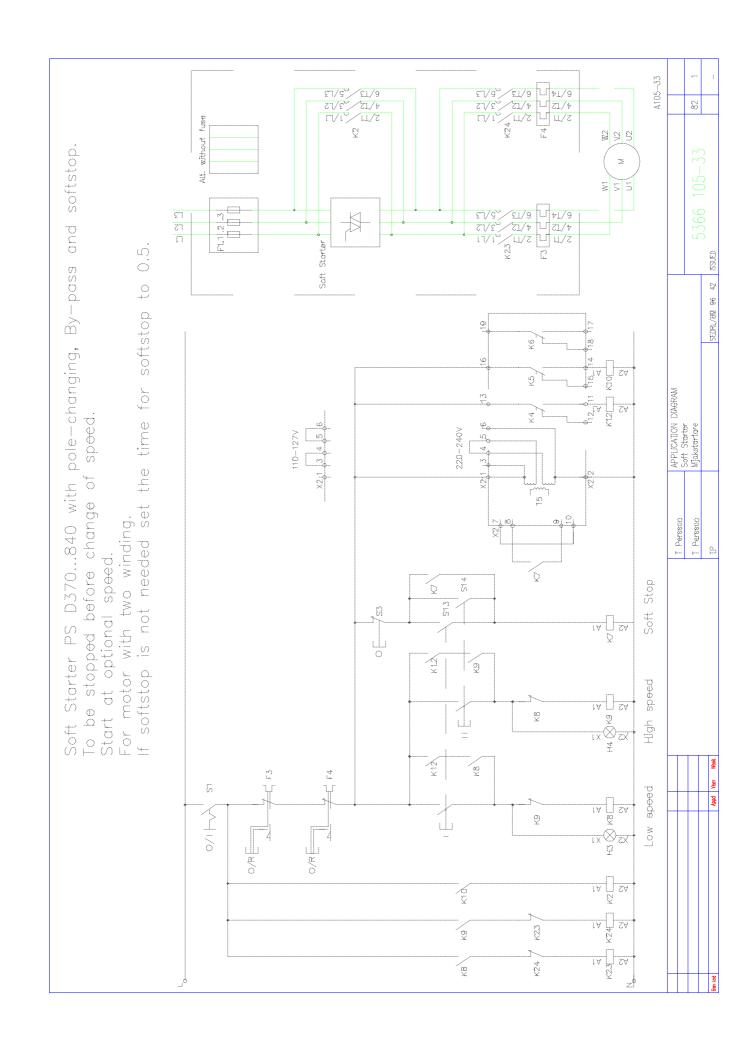


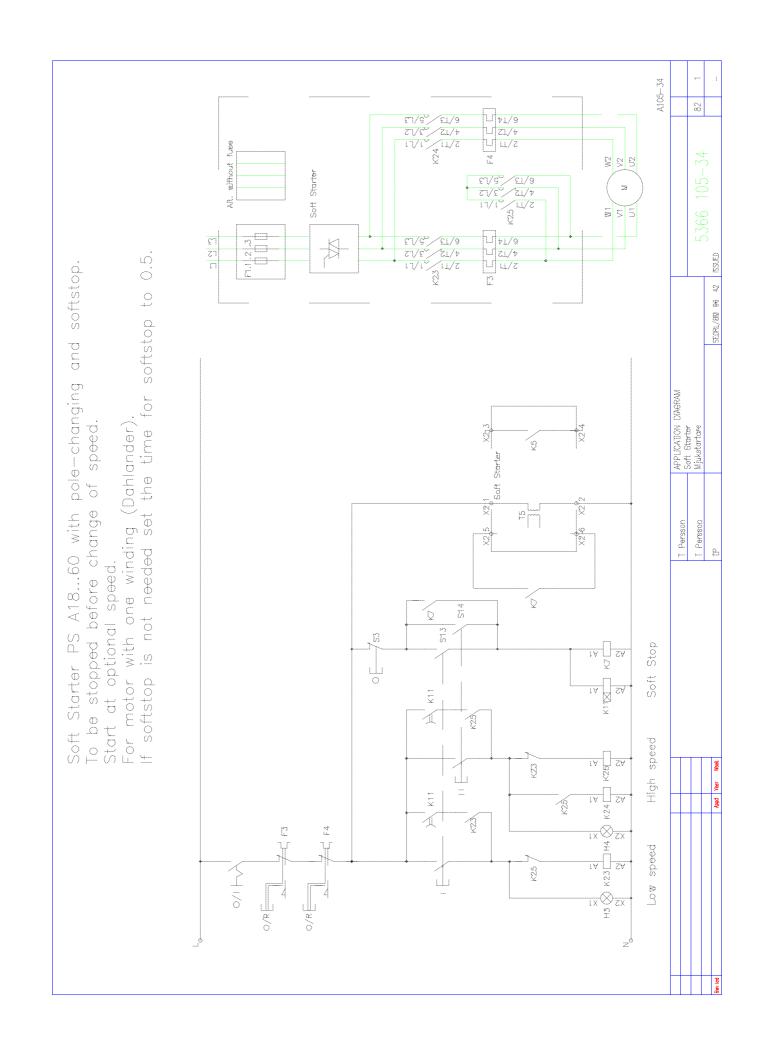


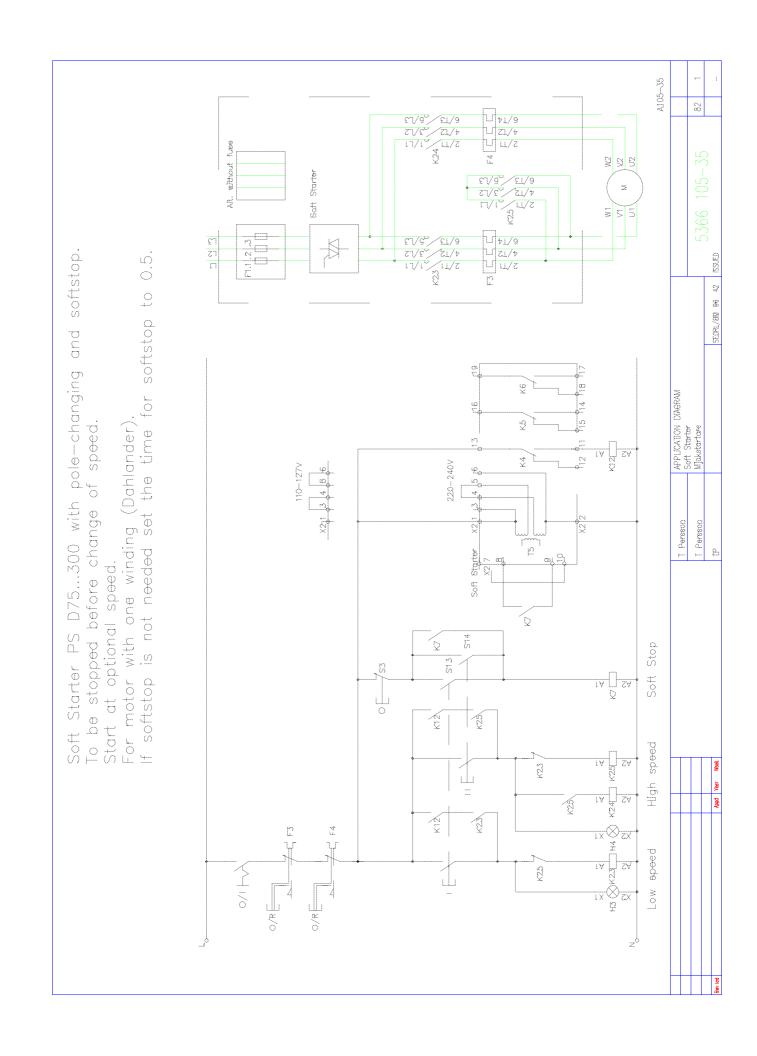

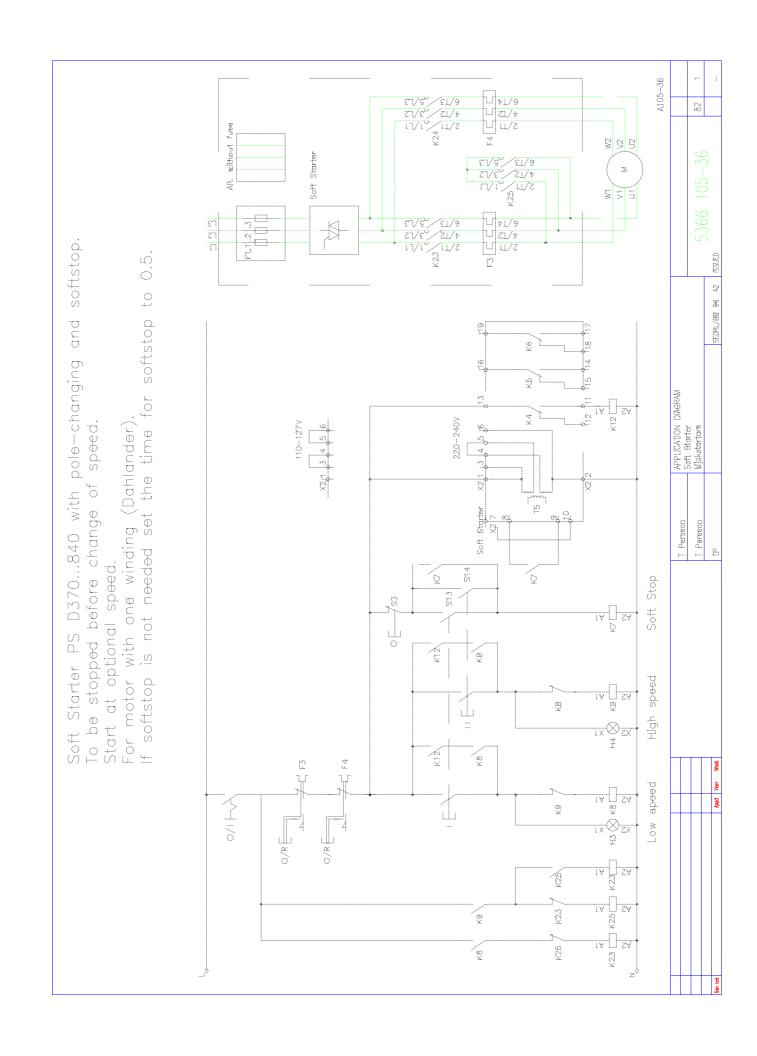

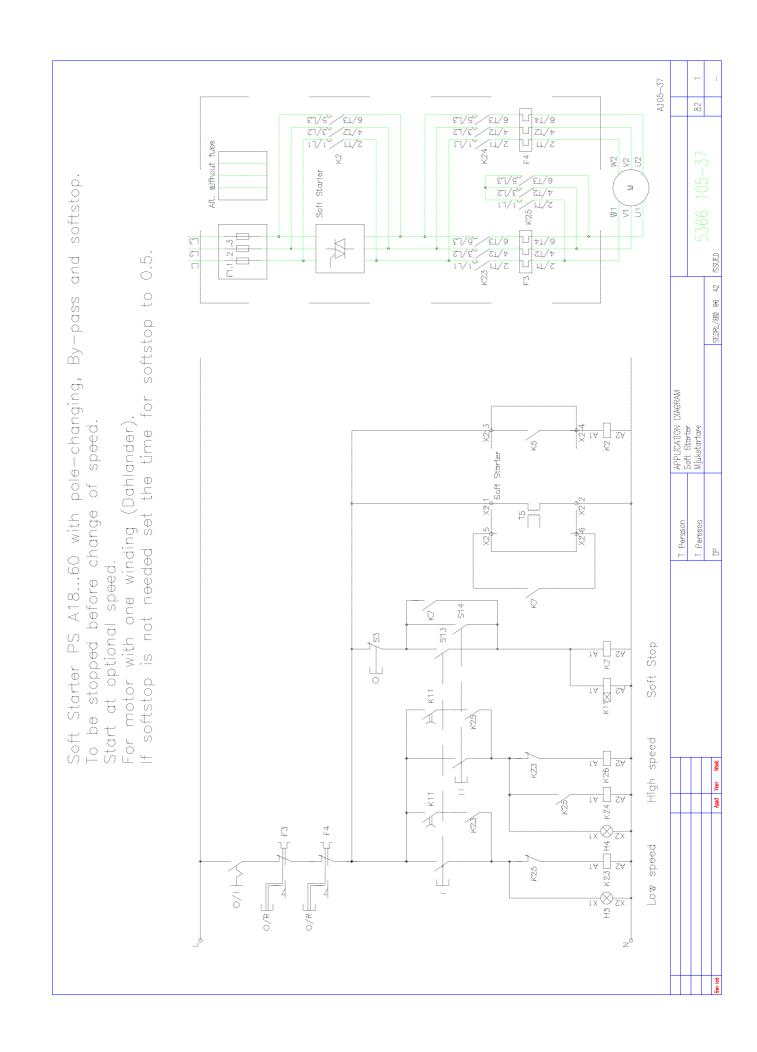


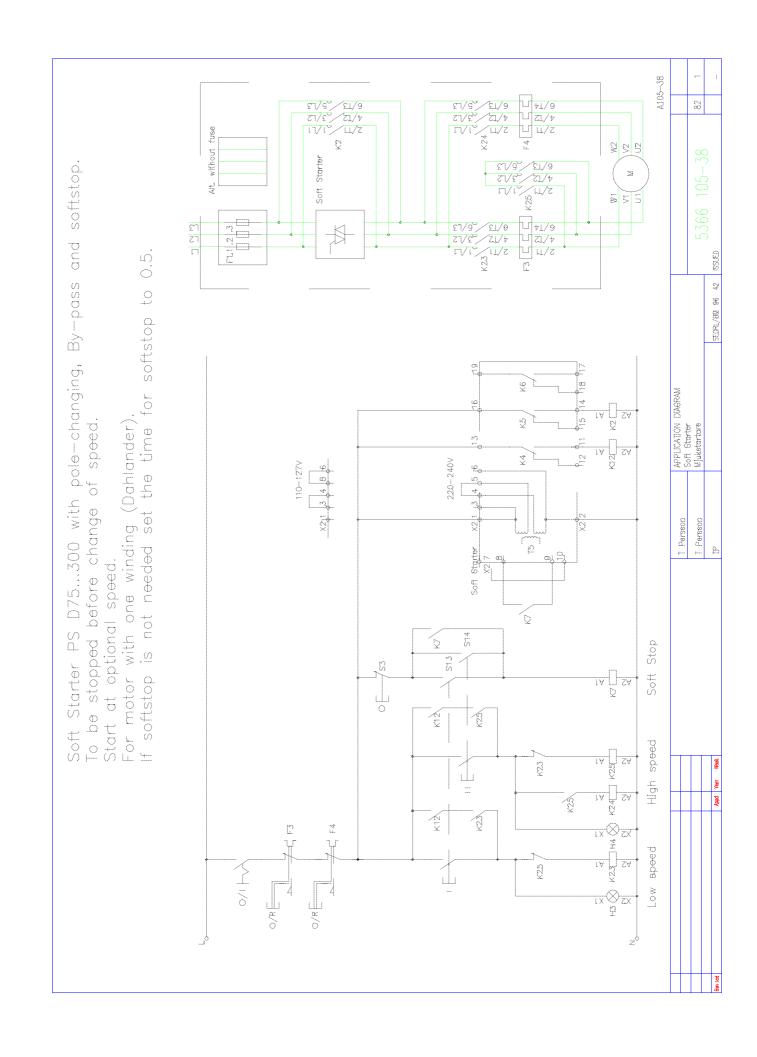


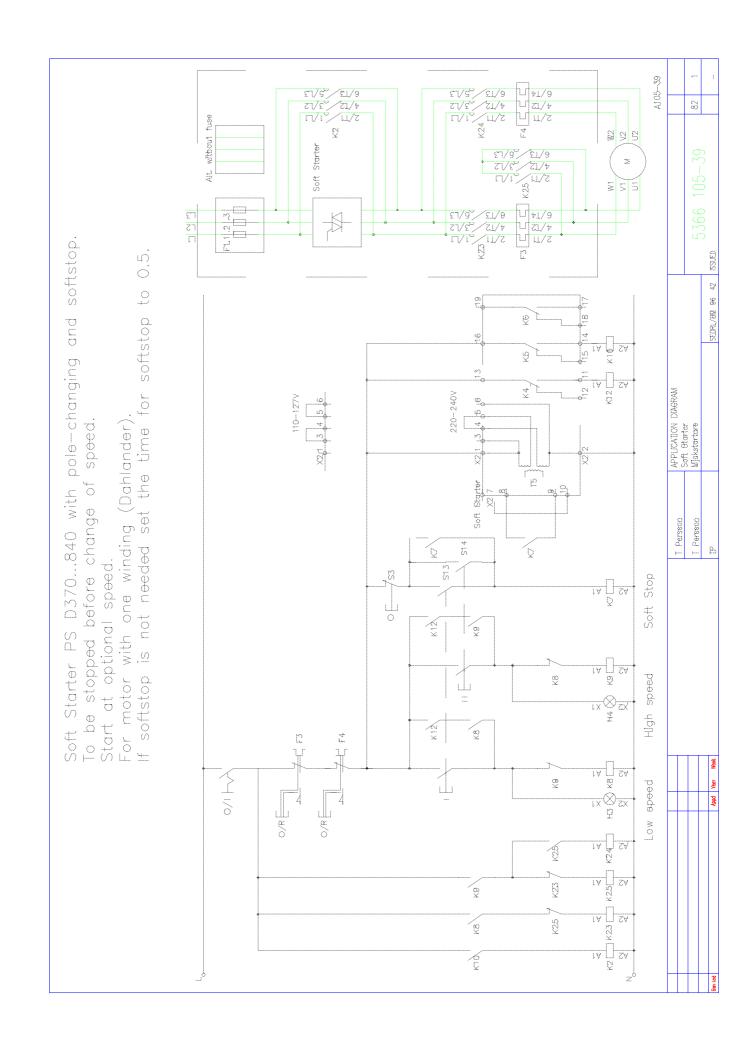


## SPECIAL APPLICATION DIAGRAM

5366 106-1 PS D75...840 Sequential start for 3 motors. 5366 106-2 PS D75...300 Start of 2 motors.

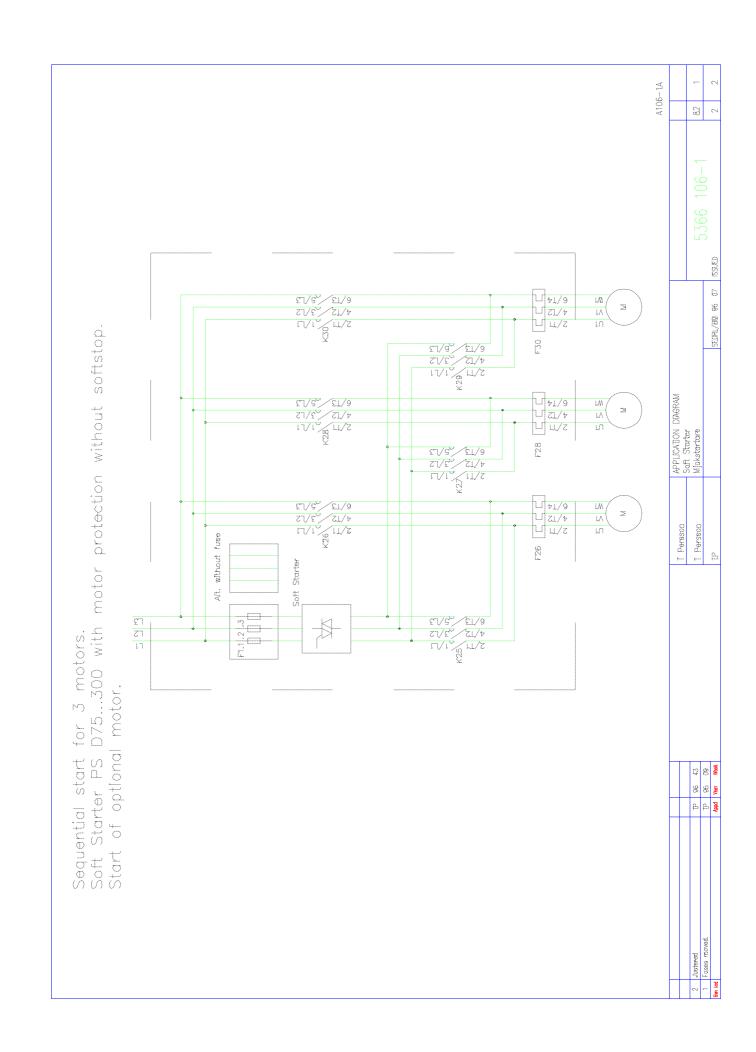


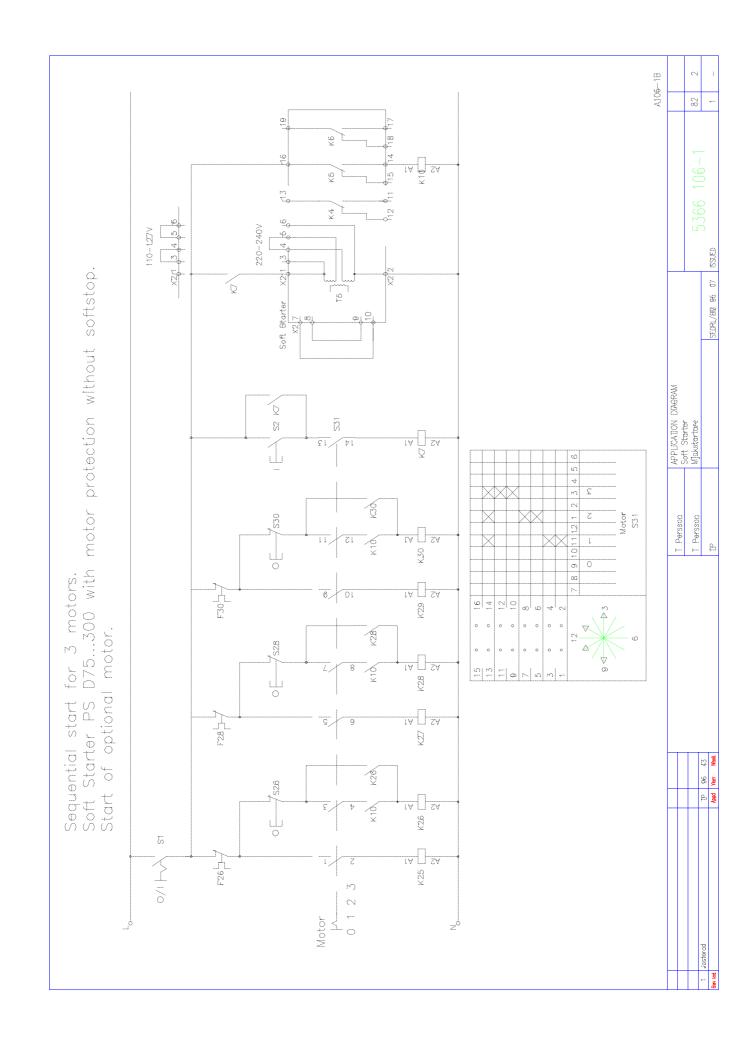

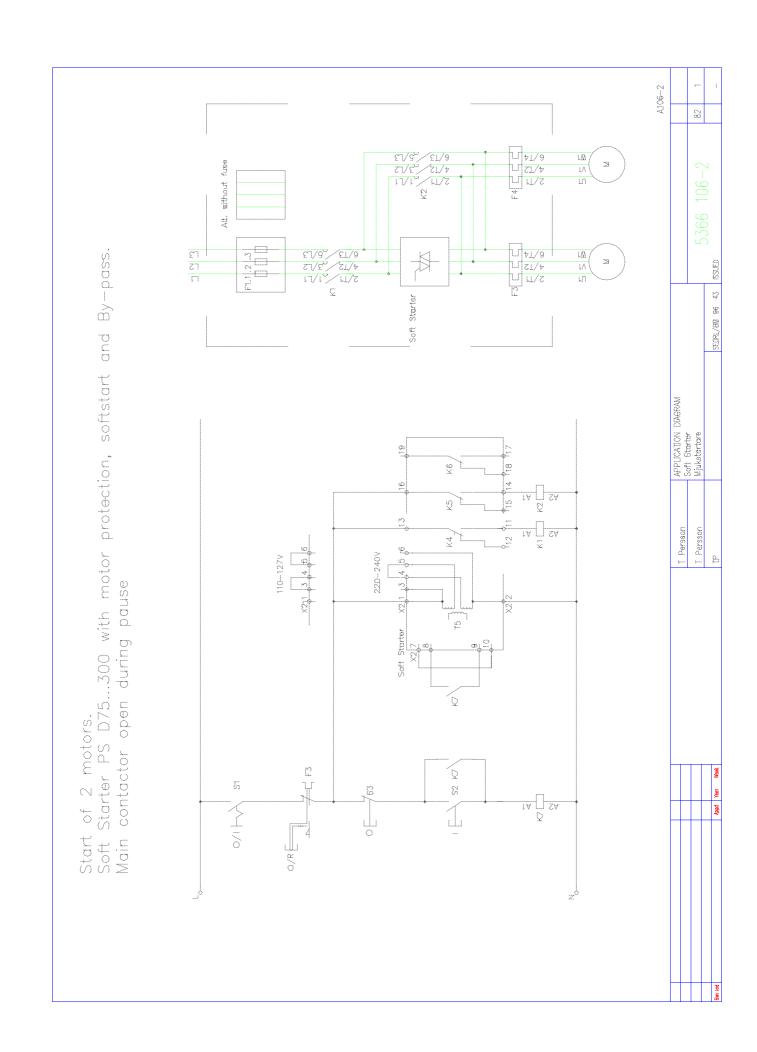

## SPECIAL DIAGRAM

5366 107-1	PS A, PS D(H)	Connection of control voltage transformer.
5366 107-2	PS A, PS D(H)	Connection of control voltage between phase and
		neutral wire.

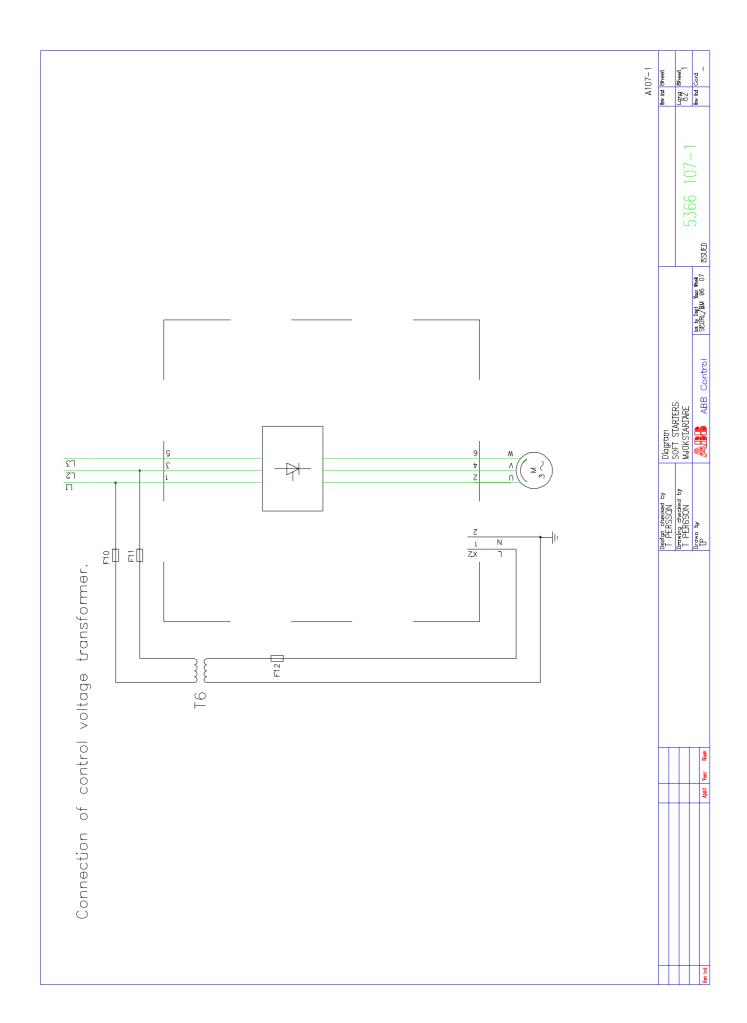

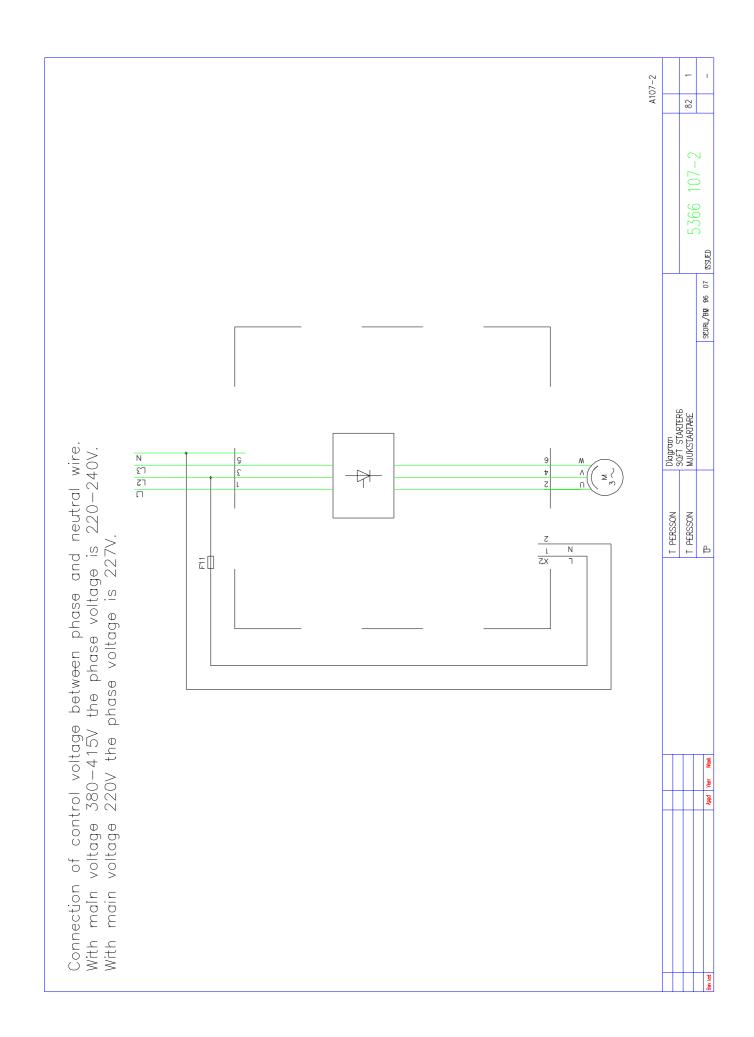




ABB Automation Technology Products AB, Control S-721 61 Västerås, SWEDEN

Telephone +46 21 32 07 00 TELEFAX +46 21 12 60 01