



## Dimensions

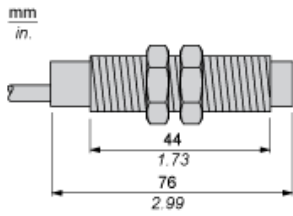

## Dimensions

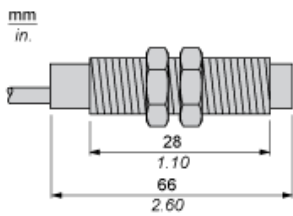


---

## Mounting

---

### Adjustment

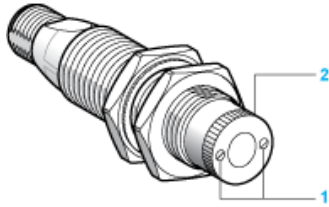

- (1) Adjust the focusing point of the laser beam by rotating the serrated sleeve
- (2) Located on the face of the sensor. Re-tighten fixing screws