


# ASI IO SV DIO 4/3 AB

## AS-Interface (AS-i) Input/Output Module With Four Digital Inputs and Three Digital Outputs (AB Slave)

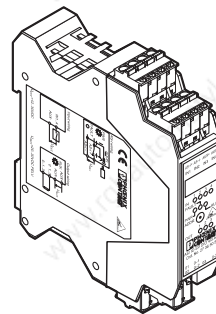

Data Sheet 696100

01/2004


6961A000

## Function

The AS-Interface (AS-i) input/output module is used to input and output digital signals in the control cabinet.

## Features

- Four digital signal inputs
- Three digital signal outputs, each with a load capacity of 0.5 A
- Diagnostics and status indicators
- External auxiliary voltage indicator
- Addressing socket
- AB slave with extended addressing options for up to 62 AS-i slaves
- Pluggable COMBICON connections
- Communication monitoring
- Inputs for mechanical contacts (acc. to EN 61131-2, type 1)
- Input supply from external auxiliary voltage
- Output supply from external auxiliary voltage

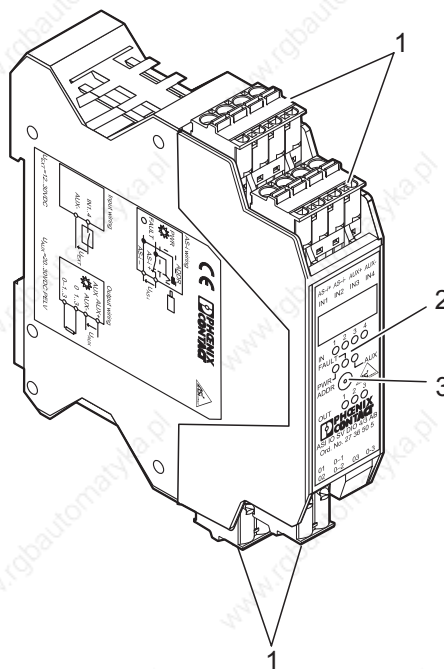


6961A001

Figure 1 Module view

The AS-Interface (AS-i) input/output module consists of the following components:

- 1 Pluggable COMBICON connections
- 2 Diagnostics and status indicators
- 3 Addressing socket

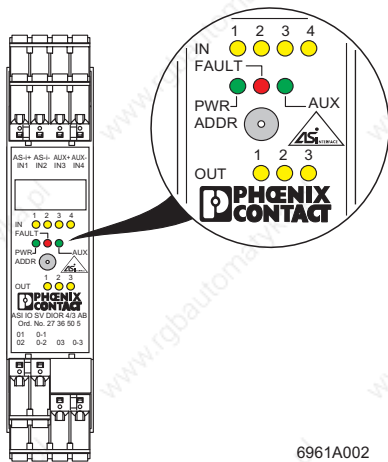


6961A002

Figure 2 Indicators of ASI IO SV DIO 4/3 AB

## Local Diagnostic and Status Indicators

Des.	Color	Meaning
<b>IN</b> 1, 2, 3, 4	Yellow LED	Input status
	ON:	Input active
	OFF:	Input not active
<b>PWR</b>	Green LED	AS-i operating voltage
	ON:	Operating voltage present
	OFF:	Operating voltage not present
<b>FAULT</b>	Red LED	Indication
	ON:	Communication error or address is 0
	Flashing:	Output overload
	OFF:	No error
<b>AUX</b>	Green/red LED	External auxiliary voltage
	Green ON:	Auxiliary voltage present
	Red ON:	Auxiliary voltage reversed
	OFF:	Auxiliary voltage not present
<b>OUT</b> 1, 2, 3	Yellow LED	State of the outputs
	ON:	Output active
	OFF:	Output not active

# Terminal Assignment

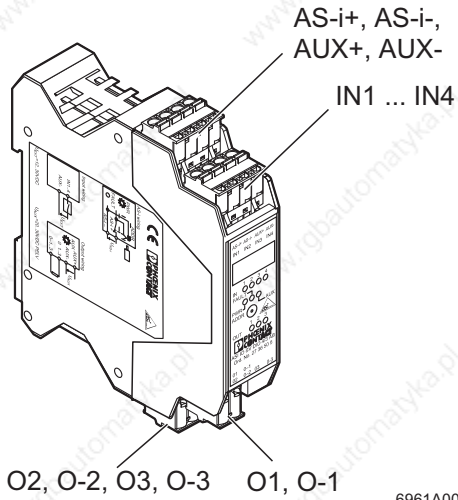

6961A003

Figure 3 Terminal assignment


Terminal Point	Assignment
IN1 ... IN4	Input N1 to IN4
O1, O2, O3	Output OUT1 to OUT3
O-1, O-2, O-3	Return line for output OUT1 to OUT3 (optional)
AS-i+	AS-i+
AS-i-	AS-i-
AUX+	External auxiliary voltage +
AUX-	External auxiliary voltage -; common return line for all inputs




**Use a PELV power supply!**

The external auxiliary voltage must be taken from a power supply with safe electrical isolation (PELV acc. to IEC 60364-4-41, 60 V DC, max.).

**AS-i wiring**

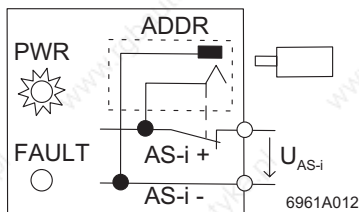


**Wiring the inputs**

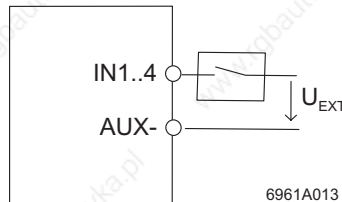

$U_{EXT} = 12 \text{ V DC to } 30 \text{ V DC}$

**Wiring the outputs**

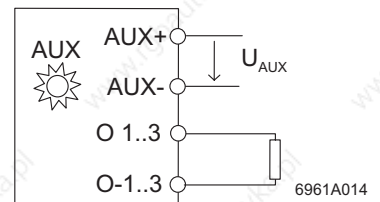

$U_{AUX} = 20 \text{ V DC to } 30 \text{ V DC PELV}$

Figure 4 Principal connection of AS-i, inputs and outputs

## Mounting and Removing

### Snapping on the AS-i module

- Place the AS-i module onto the DIN rail (A) from above and press it down firmly (B).

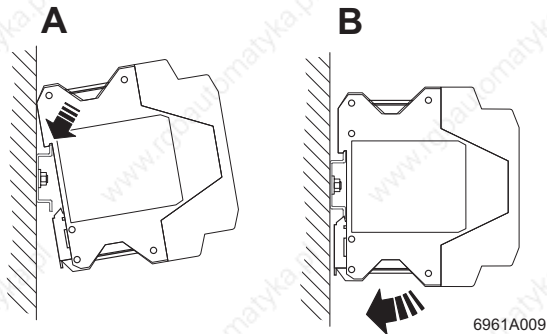


Figure 5 Snapping on the AS-i module

### Removing the AS-i module

- Use a tool to grip the module foot brackets and pull the tool upwards (A).
- Remove the AS-i module from the DIN rail (B, C).

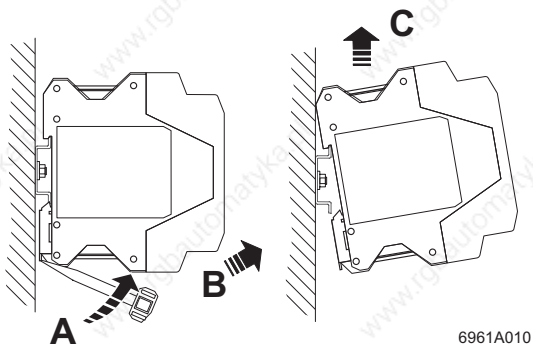


Figure 6 Removing the AS-i module

### Connecting cables



The spring-cage connections of the AS-i module are designed for solid cables or cables with ferrules. In this case, you can connect the cables without using tools.

- Strip off 8 mm from the cable.
- Connect the cable.
- Check whether the cable is mounted firmly.

### Removing cables

- Release the spring by pressing with the screwdriver (A).
- Remove the cable (B) and the screwdriver.

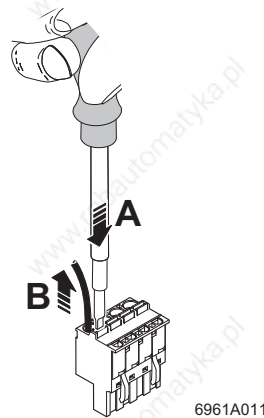


Figure 7 Removing the cable

## Connecting the Addressing Device

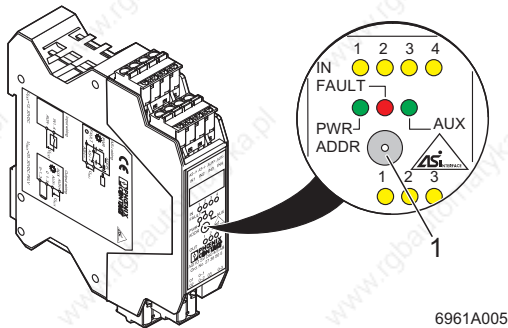


Figure 8 Addressing socket

To set the address of the module manually instead of via the master, proceed as follows:

- Connect the addressing device (Order No. 27 41 33 8) to the addressing socket (1) using an addressing cable (Order No. 27 41 34 1).
- Set the address of the module.
- Disconnect the addressing device from the module.

## Programming Data

Configuration Data	
IO Code	7 <sub>hex</sub> (7 <sub>dec</sub> )
ID code ID0	A <sub>hex</sub> (10 <sub>dec</sub> )
ID1 code ID1	7 <sub>hex</sub> (7 <sub>dec</sub> )
ID2 code ID2	E <sub>hex</sub> (14 <sub>dec</sub> )
Profile	S-7.A.E
AS-i specification	2.1 (AB slave)

Data Bit (Output Via AS-i)	
Bit	Function
D0	Input IN1 or output OUT1
D1	Input IN2 or output OUT2
D2	Input IN3 or output OUT3
D3	Input IN4

Parameter Bit (Programmable Using AS-i)	
Bit	Function
P0	Not used
P1	Not used
P2	Not used
P3	Not used

# Technical Data

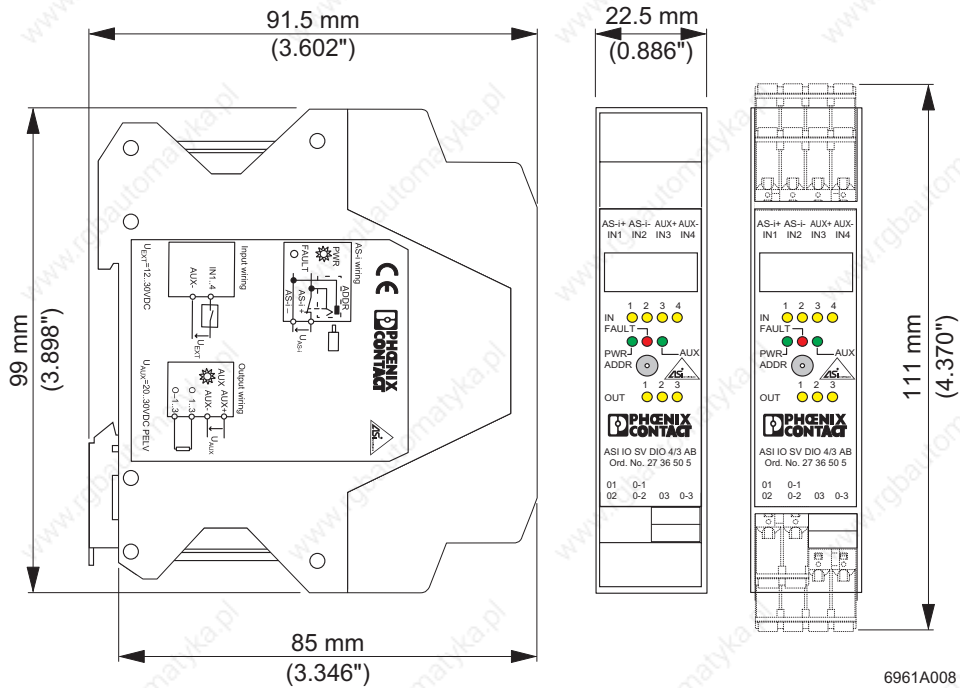



Figure 9 Module dimensions (without connector or with connectors)

<b>General Data</b>	
Order designation	ASI IO SV DIO 4/3 AB
Order No.	27 36 50 5
Housing dimensions (width x height x depth); with connectors	22.5 mm x 111 mm x 91.5 mm (0.886 in. x 4.370 in. x 3.602 in)
Housing material	PA 6.6-FR
Weight (typical)	100 g, approximately
Permissible temperature (operation)	-25 °C to +60 °C (-13°F to +140°F)
Permissible temperature (storage/transport)	-25 °C to +85 °C (-13°F to +185°F)
Permissible humidity (operation)	75% permanent, 85% occasionally no condensation
Permissible humidity (storage/transport with unused interfaces [standard packaging])	75% permanent, 85% occasionally
 For a short period, slight condensation may appear on the outside of the housing if, for example, the module is brought into a closed room from a vehicle.	
Permissible air pressure (operation)	80 kPa to 106 kPa (up to 2,000 m [9,843 ft.] above sea level)
Permissible air pressure (storage/transport)	70 kPa to 106 kPa (up to 3,000 m [9,843 ft.] above sea level)
Degree of protection	IP20 according to EN 60529
Class of protection	Class 3 according to VDE 0106, IEC 60536
Free from substances that would hinder coating with paint or varnish	Yes
<b>Connections</b>	
AS Interface	Terminal connection ≤ 2.5 mm (0.098 in.)
External auxiliary voltage	Terminal connection ≤ 2.5 mm (0.098 in.)
Inputs and outputs	Terminal connection ≤ 2.5 mm (0.098 in.)
<b>Mechanical Requirements</b>	
Vibration test sinusoidal vibrations according to EN 60068-2-6; IEC 60068-2-6	2g load, 2 hours in each space direction

<b>Power Supply</b>	
Auxiliary voltage $U_{AUX}$	20 V DC to 30 V DC PELV
AS-i voltage	26.5 V DC to 31.6 V DC
Current consumption of AS-i	$\leq 30$ mA

<b>Digital Inputs</b>	
Status indication	LED (yellow)
Number	4
Connection method	2-wire technology
Sensor voltage	Externally: 12 V DC to 30 V DC PELV acc. to IEC 60364-4-41 (60 V DC, max.)
Nominal input current	3 mA, typical
Switching Threshold	
“0“	$\leq 0.5$ mA according to EN 61131-2, type 1
“1“	$\geq 2$ mA according to EN 61131-2, type 1
Delay time	
“0“ $\leftrightarrow$ „1“	1.5 ms, typical
“1“ $\leftrightarrow$ „0“	1.5 ms, typical

<b>Digital Outputs</b>	
Status indication	LED (yellow)
Number	3
Connection method	2-wire technology
Minimum output voltage $U_{AUX}$	$U_{AUX} - 0.5$ V
Nominal current per output	0.5 A, maximum
Total current per module	1.5 A
ON delay time	$\leq 1$ ms
OFF delay time	$\leq 1$ ms
Permissible load per output	
Ohmic load	12 W
Inductive load	12 VA
Lamp load	12 W

<b>Digital Outputs (Continued)</b>	
Permissible switching frequency at	
Ohmic load	0 kHz to 1 kHz
Inductive load	0 Hz to 1 Hz
Lamp load	0 Hz to 10 Hz
Limitation of the voltage induced on circuit interruption	Yes
Operating voltage	From external auxiliary voltage
Protective function	Short-circuit and overload protection

<b>Approvals</b>	
CE	Yes
AS-i certification	Yes

<b>Conformance With EMC Directive 89/336/EEC</b>		
<b>Noise Immunity Test According to EN 61000-6-2</b>		
Electrostatic discharge (ESD)	EN 61000-4-2/ IEC 61000-4-2	Criterion B 8 kV contact discharge 8 kV air discharge
Fast transients (burst)	EN 61000-4-4/ IEC 61000-4-4	Criterion B Supply lines: 2 kV Signal/data lines: 2 kV
Conducted interference	EN 61000-4-6/ IEC 61000-4-6	Criterion A, test voltage 10 V
Surge voltage	EN 61000-4-5/ IEC 61000-4-5	AUX: Criterion B, 42 Ω 0.5 kV/1.0 kV (symmetrical/asymmetrical)  AS-i Criterion B, 82 Ω 0.5 kV/1.0 kV (symmetrical/asymmetrical)
<b>Noise Emission Test According to EN 50081-2</b>		
Noise emission of housing	EN 55011	Class B

## Ordering Data

Description	Order Designation	Order No.
AS-Interface (AS-i) input/output module (AB slave) with four digital inputs and three digital outputs	ASI IO SV DIO 4/3 AB	27 36 50 5
Cinch programming cable for module addressing	ASI CC ADR CAB CINCH	27 41 34 1
Addressing device	ASI CC ADR	27 41 33 8



Make sure you always use the latest documentation.  
This is available on the Internet to be downloaded at [www.phoenixcontact.com](http://www.phoenixcontact.com).

Phoenix Contact GmbH & Co. KG  
Flachsmarktstr. 8  
32825 Blomberg  
Germany



+ 49 - (0) 52 35 - 3-00



+ 49 - (0) 52 35 - 3-4 12 00



[www.phoenixcontact.com](http://www.phoenixcontact.com)



Worldwide Locations:

[www.phoenixcontact.com/salesnetwork](http://www.phoenixcontact.com/salesnetwork)