

# Contents

1	Introduction.....	6
1.1	General notes.....	6
1.2	Typographical conventions.....	7
1.2.1	Safety notes.....	7
1.2.2	Warning symbols.....	7
1.2.3	Notification symbols.....	8
1.2.4	Presentation.....	8
1.3	Description.....	9
1.4	Block structure.....	10
2	Identification of product no. ....	11
2.1	Type field.....	11
2.2	Scope of delivery.....	11
3	Installation.....	12
3.1	Installation site and climatic conditions.....	12
3.2	Dimensions.....	12
3.3	Side-by-side mounting.....	13
3.4	Mounting the controller in a panel cutout.....	13
3.5	Removing the controller from the panel cutout.....	14
3.6	Cleaning the front.....	14
4	Electrical connections.....	15
4.1	Installation notes.....	15
4.2	Galvanic separation.....	16
4.3	Assignment of terminals.....	17
5	Operating modes.....	19
5.1	Low-fire operation.....	19
5.2	High-fire operation.....	20
5.2.1	Modulating burner, 3-position output.....	20
5.2.2	Modulating burner, analog output.....	21
5.2.3	2-stage burner, 3-position output.....	22
5.2.4	2-stage burner, analog output.....	23
5.3	Burner shutdown.....	24
5.4	Predefined setpoint.....	25
5.5	Response threshold (q).....	26
5.6	Cold start of plant.....	27
5.7	Thermal shock protection (TSS).....	29
6	Operation.....	30

6.1	Meaning of display and buttons .....	30
6.2	Basic display .....	31
6.3	User level .....	32
6.4	Manual control, modulating burner .....	33
6.5	Manual control, 2-stage burner .....	34
6.6	Starting the self-setting function.....	35
6.7	Display of software version .....	36
7	Parameterization PArA.....	37
8	Configuration ConF .....	39
8.1	Analog input InP1 .....	40
8.2	Controller Cntr .....	41
8.3	Thermal shock protection (TSS) rAFC .....	42
8.4	Control outputs OutP.....	43
8.5	Binary input bi nF .....	44
8.6	Display di SP .....	45
9	Self-setting function .....	46
9.1	Self-setting function in high-fire operation.....	46
9.2	Checking the controller parameters .....	48
10	PC software ACS411 .....	49
10.1	Safety notes .....	49
10.2	Setting the correct system parameters .....	49
10.3	Changing the parameters .....	49
10.4	Place of installation .....	50
10.5	License and liability regulations .....	50
10.6	Procurement of PC software ACS411 .....	50
10.7	Languages .....	50
10.8	Operating systems : Operating .....	50
10.9	Prerequisites for hardware .....	50
10.10	Installation .....	51
10.11	Others .....	51
10.11.1	Use of USB port : Use of.....	51
10.11.2	Powering the controller via the USB port : Powering the controller via the port.....	51
11	What to do if .....	52
11.1	Alarm messages: .....	52
11.2	Others .....	52
12	Technical data.....	53
12.1	Inputs .....	53