

## Banner Bracket Selection Chart

Sensor		Used With						
T18 page 101		SMB1815SF page 376	SMB18A page 377	SMB18FA page 377	SMB18FM page 377	SMB18Q page 377	SMB18SF page 378	SMB18UR page 378
		SMB3018SC page 378	SMB30SK page 380	SMB312PD page 381	SMBAMS18P page 384	SMBAMS18RA page 384	SMBT18Y page 400	
Q25 page 106		SMB18A page 377	SMB18FA page 377	SMB18Q page 377	SMB18SF page 378	SMB18UR page 378	SMB3018SC page 378	SMB30SK page 380
		SMB312PD page 381						
WORLD-BEAM® QS30 page 112		SMB30A page 378	SMB30FA page 379	SMB30MM page 379	SMB30Q page 379	SMB30SC page 382	SMB46L page 382	SMB46S page 382
		SMBAMS30P page 384	SMBAMSRAB page 387	SMBQS30L page 398	SMBQS30LT page 398	SMBQS30Y page 399	SMBQS30YL page 399	
S30 page 121		SMB30A page 378	SMB30FA page 379	SMB30MM page 379	SMB30Q page 379	SMB30SC page 379	SMBAMS30P page 384	SMBAMS30RA page 385
SM30/SMI30 page 125		SMB30A page 378	SMB30FA page 379	SMB30MM page 379	SMB30Q page 379	SMB30SC page 379	SMBAMS30P page 384	SMBAMS30RA page 385
T30 page 129		SMB1815SF page 376	SMB30SC page 379	SMB30A page 378	SMB30FA page 379	SMB30MM page 379	SMB30Q page 379	
		SMBAMS30P page 384	SMBAMS30RA page 385					
Q40 page 133		SMB30A page 378	SMB30FA page 379	SMB30MM page 379	SMB30Q page 379	SMB30SC page 379	SMBAMS30P page 384	SMBAMS30RA page 385
PicoDot® page 137		SMB46A page 381	SMB46L page 382	SMB46S page 382	SMB46U page 382			
QM42/QMT42 page 140		SMB3018SC page 378	SMB30SK page 380	SMB30SUS page 380	SMB312S page 381	SMB42T page 381	SMB46L page 382	SMB46S page 382
		SMB46U page 382	SMH241F page 402					
Q45 page 146		SMB30A page 378	SMB30FA page 379	SMB30MM page 379	SMB30Q page 379	SMB30SC page 379	SMB30UR page 380	SMBAMS30P page 384
		SAMBAMS30RA page 385						
OMNI-BEAM™ page 159		SMB30A page 378	SMB30FA page 379	SMB30MM page 379	SMB30Q page 379	SMB30SC page 379	SMB30UR page 380	SMBAMS30P page 384
		SAMBAMS30RA page 385						
Q60 page 165		SMBAMSQ60IP page 386	SMBAMSQ60P page 387	SMBQ60 page 396				
D10 page 172		DIN-35-... page 375	SMBR55F01 page 399	SMBR55FRA page 399				

 More on next page

## Banner Bracket Selection Chart (cont'd)

Sensor		Used With						
D12 page 178		DIN-35-... page 375	SMBR55F01 page 379	SMBR55FRA page 399				
R55F page 183		DIN-35-... page 375	SMBR55F01 page 399	SMBR55FRA page 399				
FI22 page 186		N/A						
LX page 212		SMBLX page 390	SMBLXR page 391					
SLM page 216		N/A						
SL10/SL30 page 219		SMBSL page 400						
C-GAGE® SLC1 page 222		N/A						
R58E page 225		SMB55A page 382	SMB55F page 383	SMB55RA page 383	SMB55S page 383			
QC50/QCX50 page 228		SMBQC50 page 396						
QL50/QL55 page 230		SMB55A page 382	SMB55F page 383	SMB55RA page 383	SMB55S page 383			
OTB/LTB/STB page 234		SMB30A page 378	SMB30FA page 379	SMB30MM page 379	SMB30Q page 379	SMB30SC page 379	SMBAMS30P page 384	SMBAMS30RA page 385
L-GAGE® LT3 page 244		SMBAMSLT3IP page 386	SMBAMSLT3P page 386	SMBLT31 page 389	SMBLT32 page 389	SMBLT31P page 390		
L-GAGE® LT7 page 248		SMBLT7 page 390	SMBLT7F page 390					
L-GAGE® LG5/LG10 page 252		SMBLG page 389	SMBLGA page 389					
L-GAGE® Q50 page 256		SMBQ50 page 395						
U-GAGE® QT50U page 262		SMB30A page 378	SMB30FA page 379	SMB30MM page 379	SMB30SC page 379	SMBAMS30P page 384	SMBAMS30RA page 385	

BRACKETS

CABLES

RETROREFLECTORS

ENCLOSURES/  
LENS SHIELDS

MISCELLANEOUS