

SINAMICS

SINAMICS S120

Control Units and supplementary system components

Manual



SIEMENS

SINAMICS

S120 Control Units and additional system components

Manual

Preface

Fundamental safety instructions	1
System overview	2
Control Units and operating elements	3
Option boards	4
Terminal Modules	5
Hub Modules	6
Voltage Sensing Module VSM10	7
Encoder system connection	8
Cabinet design and electromagnetic compatibility (EMC)	9
Appendix	Α

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

indicates that death or severe personal injury will result if proper precautions are not taken.

indicates that death or severe personal injury **may** result if proper precautions are not taken.

indicates that minor personal injury can result if proper precautions are not taken.

NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

WARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by [®] are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Preface

SINAMICS documentation

The SINAMICS documentation is organized in the following categories:

- General documentation/catalogs
- User documentation
- Manufacturer/service documentation

Additional information

You can find information on the following topics at the following address (https://support.industry.siemens.com/cs/de/en/view/108993276):

- Ordering documentation/overview of documentation
- Additional links to download documents
- Using documentation online (find and search in manuals/information)

Please send any questions about the technical documentation (e.g. suggestions for improvement, corrections) to the following e-mail address (mailto:docu.motioncontrol@siemens.com).

Siemens MySupport/Documentation

At the following address (<u>https://support.industry.siemens.com/My/ww/en/documentation</u>), you can find information on how to create your own individual documentation based on Siemens' content, and adapt it for your own machine documentation.

Training

At the following address (<u>http://www.siemens.com/sitrain</u>), you can find information about SITRAIN (Siemens training on products, systems and solutions for automation and drives).

FAQs

You can find Frequently Asked Questions in the Service&Support pages under Product Support (https://support.industry.siemens.com/cs/de/en/ps/faq).

SINAMICS

You can find information about SINAMICS at the following address (http://www.siemens.com/sinamics).

Usage phases and their documents/tools (as an example)

 Table 1
 Usage phases and the available documents/tools

Usage phase	Document/tool
Orientation	SINAMICS S Sales Documentation
Planning/configuration	SIZER Engineering Tool
	Configuration Manuals, Motors
Deciding/ordering	SINAMICS S120 catalogs
	 SIMOTION, SINAMICS S120 and Motors for Production Machines (Catalog PM 21)
	SINAMICS and Motors for Single-axis Drives (Catalog D 31)
	SINUMERIK & SINAMICS Equipment for Machine Tools (Catalog NC 61)
	SINUMERIK 840D sl Type 1B
	Equipment for Machine Tools (Catalog NC 62)
Installation/assembly	SINAMICS S120 Manual for Control Units and Additional System Components
	SINAMICS S120 Manual for Booksize Power Units
	SINAMICS S120 Manual for Booksize Power Units C/D Type
	SINAMICS S120 Manual for Chassis Power Units, Air-cooled
	SINAMICS S120 Manual for Chassis Power Units, Liquid-cooled
	SINAMICS S120 Manual for AC Drives
	SINAMICS S120 Manual Combi
	SINAMICS S120M Manual Distributed Drive Technology
	SINAMICS HLA System Manual Hydraulic Drive
Commissioning	STARTER Commissioning Tool
	SINAMICS S120 Getting Started with STARTER
	SINAMICS S120 Commissioning Manual with STARTER
	SINAMICS S120 CANopen Commissioning Manual
	SINAMICS S120 Function Manual Drive Functions
	SINAMICS S120 Safety Integrated Function Manual
	SINAMICS S120/S150 List Manual
	SINAMICS HLA System Manual Hydraulic Drive
	Startdrive commissioning tool ¹⁾
	SINAMICS S120 Getting Started with Startdrive ¹⁾
	SINAMICS S120 Commissioning Manual with Startdrive ¹⁾
Usage/operation	SINAMICS S120 Commissioning Manual with STARTER
	SINAMICS S120/S150 List Manual
	SINAMICS HLA System Manual Hydraulic Drive
	 SINAMICS S120 Commissioning Manual with Startdrive¹⁾

Usage phase	Document/tool
Maintenance/servicing	SINAMICS S120 Commissioning Manual with STARTER
	SINAMICS S120/S150 List Manual
	SINAMICS S120 Commissioning Manual with Startdrive ¹⁾
References	SINAMICS S120/S150 List Manual

1) available as of Startdrive V14 release

Target group

This documentation is intended for machine manufacturers, commissioning engineers, and service personnel who use the SINAMICS drive system.

Benefits

This manual provides all of the information, procedures and operator actions required for the particular usage phase.

Standard scope

The scope of the functionality described in this document can differ from that of the drive system that is actually supplied.

- Other functions not described in this documentation might be able to be executed in the drive system. However, no claim can be made regarding the availability of these functions when the equipment is first supplied or in the event of service.
- The documentation can also contain descriptions of functions that are not available in a particular product version of the drive system. The functionality of the supplied drive system should only be taken from the ordering documentation.
- Extensions or changes made by the machine manufacturer must be documented by the machine manufacturer.

For reasons of clarity, this documentation does not contain all of the detailed information on all of the product types, and cannot take into consideration every conceivable type of installation, operation and service/maintenance.

Technical Support

Country-specific telephone numbers for technical support are provided in the Internet at the following address (<u>https://support.industry.siemens.com/sc/ww/en/sc/2090</u>) in the "Contact" area.

ſF

Relevant directives and standards

You can obtain an up-to-date list of currently certified components on request from your local Siemens office. If you have any questions relating to certifications that have not yet been completed, please ask your Siemens contact person.

Certificates for download

The certificates can be downloaded from the Internet:

Certificates (https://support.industry.siemens.com/cs/ww/de/ps/13206/cert)

EC Declaration of Conformity

You can find the EC Declaration of Conformity for the relevant directives as well as the relevant certificates, prototype test certificates, manufacturers declarations and test certificates for functions relating to functional safety ("Safety Integrated") on the Internet at the following address (https://support.industry.siemens.com/cs/ww/en/ps/13231/cert).

The following directives and standards are relevant for SINAMICS S devices:

European low-voltage directive

SINAMICS S devices fulfil the requirements stipulated in the Low-Voltage Directive 2014/35/EU, insofar as they are covered by the application area of this directive.

European machinery directive

SINAMICS S devices fulfil the requirements stipulated in the Low-Voltage Directive 2006/42/EU, insofar as they are covered by the application area of this directive.

However, the use of the SINAMICS S devices in a typical machine application has been fully assessed for compliance with the main regulations in this directive concerning health and safety.

European EMC Directive

SINAMICS S devices comply with the EMC Directive 2014/30/EU.



EMC requirements for South Korea

SINAMICS S devices with the KC marking on the rating plate satisfy the EMC requirements for South Korea.

Specification for semiconductor process equipment voltage drop immunity

SINAMICS S devices meet the requirements of standard SEMI F47-0706.



Eurasian conformity

SINAMICS S comply with the requirements of the Russia/Belarus/Kazakhstan customs union (EAC).



North American market

SINAMICS S devices provided with one of the test symbols displayed fulfil the requirements stipulated for the North American market as a component of drive applications.

You can find the relevant certificates on the Internet pages of the certifiers:

- For products with UL certificate (<u>http://database.ul.com/cgi-bin/XYV/template/LISEXT/1FRAME/index.html</u>)
- For products with TÜV SÜD certificate (<u>https://www.tuev-sued.de/industry_and_consumer_products/certificates</u>)

Possible test symbols





Australia and New Zealand (RCM formerly C-Tick)

SINAMICS S devices showing the test symbols fulfil the EMC requirements for Australia and New Zealand.

Quality systems

Siemens AG employs a quality management system that meets the requirements of ISO 9001 and ISO 14001.

Not relevant standards



China Compulsory Certification

SINAMICS S devices do not fall in the area of validity of the China Compulsory Certification (CCC).

EMC limit values in South Korea

이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

For sellers or other users, please bear in mind that this device is an A-grade electromagnetic wave device. This device is intended to be used in areas other than at home.

The EMC limit values to be observed for Korea correspond to the limit values of the EMC product standard for variable-speed electric drives EN 61800-3 of category C2 or the limit value class A, Group 1 to KN11. By implementing appropriate additional measures, the limit values according to category C2 or limit value class A, Group 1, are observed. Further, additional measures may be required, such as using an additional radio interference suppression filter (EMC filter).

The measures for EMC-compliant design of the system are described in detail in this manual respectively in the EMC Installation Guideline Configuration Manual.

The final statement regarding compliance with the standard is given by the respective label attached to the individual unit.

Ensuring reliable operation

The manual describes a desired state which, if maintained, ensures the required level of operational reliability and compliance with EMC limit values.

Should there be any deviation from the requirements in the manual, appropriate actions (e.g. measurements) must be taken to check/prove that the required level of operational reliability and compliance with EMC limit values are ensured.

Spare parts

Spare parts are available on the Internet at the following address (https://www.automation.siemens.com/sow?sap-language=EN).

Product maintenance

The components are subject to continuous further development within the scope of product maintenance (improvements to robustness, discontinuations of components, etc).

These further developments are "spare parts-compatible" and do not change the article number.

In the scope of such spare parts-compatible further developments, connector positions are sometimes changed slightly. This does not cause any problems with proper use of the components. Please take this fact into consideration in special installation situations (e.g. allow sufficient clearance for the cable length).

Use of third-party products

Table 2

Symbole

This document contains recommendations relating to third-party products. Siemens accepts the fundamental suitability of these third-party products.

You can use equivalent products from other manufacturers.

Siemens does not accept any warranty for the properties of third-party products.

Ground symbols

Table 2 Symbols	
Symbol	Meaning
	Connection for protective conductor (PE)
	Ground (e.g. M 24 V)
	Connection for function potential bonding

Control Units and additional system components Manual, (GH1), 07/2016, 6SL3097-4AH00-0BP6

Table of contents

	Preface		5
1	Fundamer	ntal safety instructions	19
	1.1	General safety instructions	19
	1.2	Safety instructions for electromagnetic fields (EMF)	23
	1.3	Handling electrostatic sensitive devices (ESD)	
	1.4	Industrial security	24
	1.5	Residual risks of power drive systems	
2	Svstem ov	/erview	
	2.1	Field of application	
	2.2	Platform Concept and Totally Integrated Automation	
	2.3	Introduction	
	2.4	SINAMICS S120 components	
	2.4	Power units	
	2.6	System data	
-	2.7	Recycling and disposal	
3		nits and operating elements	
	3.1	Introduction	
	3.2	Safety instructions for Control Units	42
	3.3	Control Unit CU320-2 PN (PROFINET)	
	3.3.1 3.3.2	Description Interface description	
	3.3.2.1	Overview	
	3.3.2.2	X100-X103 DRIVE-CLiQ interfaces	
	3.3.2.3	X122 digital inputs/outputs	
	3.3.2.4	X132 digital inputs/outputs	
	3.3.2.5	X124 electronics power supply	
	3.3.2.6 3.3.2.7	X127 LAN (Ethernet) X140 serial interface (RS232)	
	3.3.2.8	X150 P1/P2 PROFINET	
	3.3.2.9	Measuring socket	
	3.3.2.10	Buttons	
	3.3.2.11	Slot for memory card	
	3.3.3	Connection example	
	3.3.4	Meaning of the LEDs	
	3.3.4.1 3.3.4.2	Description of the LED statuses Behavior of the LEDs during booting	
	3.3.4.2 3.3.4.3	Behavior of the LEDs outling booting	
	0.0.1.0		

3.3.5 3.3.6	Dimension drawing Technical data	
3.4 3.4.1	Control Unit CU320-2 DP (PROFIBUS) Description	
3.4.1	Interface description	
3.4.2.1	Overview	
3.4.2.2	X100-X103 DRIVE-CLiQ interfaces	
3.4.2.3	X122 digital inputs/outputs	
3.4.2.4	X132 digital inputs/outputs	
3.4.2.5	X124 electronics power supply	
3.4.2.6	X126 PROFIBUS	
3.4.2.7	PROFIBUS address switch	
3.4.2.8	X127 LAN (Ethernet)	74
3.4.2.9	X140 serial interface (RS232)	75
3.4.2.10	Measuring socket	
3.4.2.11	Buttons	
3.4.2.12	Slot for memory card	
3.4.3	Connection example	
3.4.4	Meaning of the LEDs	
3.4.4.1	Description of the LED statuses.	
3.4.4.2	Behavior of the LEDs during booting	
3.4.4.3 3.4.5	Behavior of the LEDs in the operating state Dimension drawing	
3.4.6	Technical data	
3.5	Mounting Control Units	
3.5.1	Mounting to a Line Module	
3.5.2	Mounting on the mounting surface	
3.5.3	Opening and removing the cover	
3.6	Basic Operator Panel BOP20	
3.6.1	Description	
3.6.2	Interface description	
3.6.3	Mounting at the Control Unit	
3.6.4	Removal	
Option boa	ards	93
4.1	Safety instructions for option boards	93
4.2	CAN Communication Board CBC10	
4.2.1	Description	
4.2.2	Interface description	
4.2.2.1	Overview	
4.2.2.2	X451 CAN bus interface	
4.2.2.3	X452 CAN bus interface	
4.2.2.4	2-pin SMD DIL switch	
4.2.3	Meaning of the OPT LED on the Control Unit	
4.2.4 4.2.5	Installation Technical data	
-		
4.3	Communication Board Ethernet CBE20	
4.3.1	Description	
4.3.2	Interface description	
4.3.2.1	Overview	

4

	4.3.2.2	X1400 Ethernet interface	100
	4.3.3	Meaning of the LEDs	
	4.3.4	Installation	
	4.3.5	Technical data	103
	4.4	Terminal Board TB30	
	4.4.1	Description	104
	4.4.2	Interface description	104
	4.4.2.1	Overview	104
	4.4.2.2	X424 power supply, digital outputs	
	4.4.2.3	X481 digital inputs/outputs	106
	4.4.2.4	X482 analog inputs/outputs	107
	4.4.3	Meaning of the OPT LED on the Control Unit	
	4.4.4	Connection example	
	4.4.5	Installation	109
	4.4.6	Shield support	110
	4.4.7	Technical data	110
5	Terminal N	Modules	111
	5.1	Safety instructions for Terminal Modules	111
	5.2	Terminal Module TM15	
	5.2.1	Description	
	5.2.2	Interface description	
	5.2.2.1	Overview	
	5.2.2.2	X500/X501 DRIVE-CLiQ interfaces	
	5.2.2.3	X520 bidirectional digital inputs/outputs	
	5.2.2.4	X521 bidirectional digital inputs/outputs	
	5.2.2.5	X522 bidirectional digital inputs/outputs	
	5.2.2.6	X524 Electronics power supply	
	5.2.3	Connection example	
	5.2.4	Meaning of the LED	
	5.2.5	Dimension drawing	
	5.2.6	Mounting	
	5.2.7	Protective conductor connection and shield support	
	5.2.8	Connector coding	
	5.2.9	Technical data	
	5.3	Terminal Module TM31	124
	5.3.1	Description	
	5.3.2	Interface description	
	5.3.2.1	Overview	
	5.3.2.2	X500/X501 DRIVE-CLiQ interfaces	
	5.3.2.3	X520 digital inputs	
	5.3.2.4	X521 analog inputs	
	5.3.2.5	S5 current/voltage changeover switch for analog inputs	
	5.3.2.6	X522 analog outputs/temperature sensor	
	5.3.2.7	X524 Electronics power supply	
	5.3.2.8	X530 digital inputs	
	5.3.2.9	X540 auxiliary voltage for the digital inputs	
	5.3.2.10	X541 bidirectional digital inputs/outputs	
	5.3.2.11	X542 relay outputs	
	5.3.3	Connection example	
	5.3.4	Meaning of the LED	

5.3.5 5.3.6 5.3.7 5.3.8 5.3.9	Dimension drawing Installation Protective conductor connection and shield support Connector coding Technical data	137 138 139
5.4 5.4.1 5.4.2 5.4.2.1 5.4.2.2 5.4.2.2 5.4.2.3 5.4.2.4	Terminal Module TM41 Description Interface description Overview X500/X501 DRIVE-CLiQ interfaces X524 electronics power supply X520 encoder interface	
5.4.2.5 5.4.2.6 5.4.2.7 5.4.3 5.4.4 5.4.5 5.4.6	X521 bidirectional digital inputs/outputs X522 isolated digital inputs X523 analog input Connection example Meaning of the LEDs Dimension drawing Installation	
5.4.7 5.4.8 5.5	Technical data	151 152
5.5.1 5.5.2 5.5.2.1	Description Interface description Overview	152 154 154
5.5.2.2 5.5.2.3 5.5.2.4 5.5.2.5	X500/X501 DRIVE-CLiQ interfaces X514 power supply for digital outputs and sensors X520 sensor power supply X521 fail-safe digital inputs and dynamically adjustable power supply	155 156 156
5.5.2.6 5.5.2.7 5.5.2.8 5.5.2.9	X522 fail-safe digital inputs X523 fail-safe digital output X524 electronics power supply X525 fail-safe digital output	159 160
5.5.2.10 5.5.2.11 5.5.2.12 5.5.2.13	X531 fail-safe digital inputs and dynamically adjustable power supply X532 fail-safe digital inputs X533 fail-safe digital output X535 fail-safe digital output	162 163 165
5.5.3 5.5.4 5.5.5	Connection example Meaning of the LEDs Dimension drawing	167 168 170
5.5.6 5.5.7 5.5.8	Installation Protective conductor connection and shield support Technical data	172 173
5.6 5.6.1 5.6.2 5.6.2.1 5.6.2.2 5.6.2.3 5.6.2.3 5.6.2.4 5.6.3	Terminal Module TM120 Description Interface description Overview X500/X501 DRIVE-CLiQ interfaces X521 temperature sensor input X524 Electronics power supply Connection examples	

	5.6.4	Meaning of the LED	179
	5.6.5	Dimension drawing	
	5.6.6	Installation	
	5.6.7	Protective conductor connection and shield support	182
	5.6.8	Technical data	
	5.7	Terminal Module TM150	183
	5.7.1	Description	
	5.7.2	Interface description	
	5.7.2.1	Overview	
	5.7.2.2	X500/X501 DRIVE-CLiQ interfaces	
	5.7.2.3	X524 Electronics power supply	
	5.7.2.4	X531-X536 temperature sensor inputs	
	5.7.3	Connection examples	
	5.7.4	Meaning of the LED	
	5.7.5	Dimension drawing	
	5.7.6	Installation	
	5.7.7	Protective conductor connection and shield support	
	5.7.8	Technical data	
6	Hub Modu	ıles	195
•			
	6.1	Safety instructions for Hub Modules	
	6.2	DRIVE-CLiQ Hub Module DMC20	
	6.2.1	Description	
	6.2.2	Interface description	
	6.2.2.1	Overview	
	6.2.2.2	X500-X505 DRIVE-CLiQ interfaces	
	6.2.2.3	X524 Electronics power supply	
	6.2.3	Meaning of the LED	
	6.2.4	Dimension drawing	
	6.2.5 6.2.6	Installation	
	6.2.0 6.2.7	Protective conductor connection and shield support Technical data	
	6.3	DRIVE-CLiQ Hub Module External DME20	
	6.3.1	Description	
	6.3.2	Interface description	
	6.3.2.1	Overview	
	6.3.2.2	X500-X505 DRIVE-CLiQ interfaces	
	6.3.2.3	X524 Electronics power supply	
	6.3.3	Dimension drawing	
	6.3.4	Installation	
	6.3.5 6.3.6	Technical data Specifications for use with UL approval	
-			
7	•	ensing Module VSM10	
	7.1	Description	
	7.2	Safety instructions for the Voltage Sensing Module (VSM10)	212
	7.3	Interface description	214
	7.3.1	Overview	
	7.3.2	X500 DRIVE-CLiQ interface	
	7.3.3	X520 analog inputs/temperature sensor	216

8

7.3.4 7.3.5 7.3.6 7.3.7	X521 three-phase voltage sensing up to 100 V 3-ph. AC X522 three-phase voltage sensing up to 690 V 3-ph. AC X524 Electronics power supply X530 neutral point grounding	
7.4		
	Connection example	
7.5	Meaning of the LED	
7.6	Dimension drawing	222
7.7	Installation	223
7.8	Protective conductor connection and shield support	224
7.9	Operation on an isolated-neutral system (IT system)	225
7.10	Technical data	
7.11	Service and maintenance	
Encoder	system connection	
8.1		
•••		
8.2	Overview of Sensor Modules	
8.3	Safety instructions for Sensor Modules and encoders	
8.4	Sensor Module Cabinet-Mounted SMC10	
8.4.1 8.4.2	Description Interface description	
8.4.2.1	Overview	
8.4.2.1	X500 DRIVE-CLiQ interface	
8.4.2.3	X500 DRIVE-OLIG Interface	
8.4.2.4	X524 Electronics power supply	
8.4.3	Connection example	
8.4.4	Meaning of the LED	
8.4.5	Dimension drawing	
8.4.6	Mounting	
8.4.7	Technical data	
8.5	Sensor Module Cabinet-Mounted SMC20	
8.5.1	Description	
8.5.2	Interface description	
8.5.2.1	Overview	
8.5.2.2	X500 DRIVE-CLiQ interface	
8.5.2.3	X520 encoder system interface	
8.5.2.4	X524 Electronics power supply	
8.5.3	Connection example	
8.5.4	Meaning of the LED	
8.5.5	Dimension drawing	
8.5.6 8.5.7	Mounting Technical data	
8.6	Sensor Module Cabinet-Mounted SMC30	
8.6.1	Description	
8.6.2	Interface description	
8.6.2.1 8.6.2.2	Overview X500 DRIVE-CLiQ interface	
0.0.2.2		

8.6.2.3 8.6.2.4 8.6.2.5 8.6.3 8.6.4 8.6.5 8.6.6 8.6.7 8.6.8	X520 encoder system interface	252 254 254 256 257 258 258 259
8.7 8.7.1 8.7.2 8.7.2.1 8.7.2.2 8.7.2.3 8.7.2.3 8.7.2.4 8.7.3 8.7.4 8.7.5 8.7.6 8.7.7	Sensor Module Cabinet-Mounted SMC40 Description Interface descriptions Overview X500/1 and X500/2 DRIVE-CLiQ interfaces X520/1 and X520/2 encoder system interfaces X524 Electronics power supply Connection example Meaning of the LEDs Dimension drawing Installation Technical data.	264 264 265 265 265 266 267 268 269 269 270 271 271
8.8 8.8.1 8.8.2 8.8.2.1 8.8.2.2 8.8.2.3 8.8.3 8.8.3 8.8.4 8.8.5 8.8.6	Sensor Module External SME20 Description Interface description Overview DRIVE-CLiQ interface Encoder system interface Connection example Dimension drawing Installation Technical data.	274 274 274 275 275 276 277 277 277 278
8.9 8.9.1 8.9.2 8.9.2.1 8.9.2.2 8.9.2.3 8.9.3 8.9.3 8.9.4 8.9.5 8.9.6	Sensor Module External SME25. Description Interface description. Overview DRIVE-CLiQ interface Encoder system interface Connection example Dimension drawing Installation Technical data	280 280 280 281 281 282 282 282 283 283
8.10 8.10.1 8.10.2 8.10.3 8.10.3.1 8.10.3.2 8.10.3.3 8.10.3.4 8.10.3.5	Sensor Module External SME120 Description Safety instructions for Sensor Modules External Interface description Overview X100 encoder system interface X200 thermistor sensor input X300 hall sensor input X500 DRIVE-CLiQ interface	

	8.10.4 8.10.5 8.10.6 8.10.7	Connection examples Dimension drawing Installation Technical data	. 296 . 296
	8.11 8.11.1 8.11.2 8.11.3 8.11.3.1 8.11.3.2 8.11.3.3 8.11.3.4 8.11.4 8.11.5 8.11.6 8.11.7 8.12 8.12.1	Sensor Module External SME125 Description Safety instructions for Sensor Modules External Interface description Overview X100 encoder system interface X200 thermistor sensor input X500 DRIVE-CLiQ interface Connection examples Dimension drawing Installation Technical data DRIVE-CLiQ encoder Description	299 300 301 301 302 303 304 305 310 310 311 311
	8.12.2 8.12.2.1 8.12.2.2 8.12.3 8.12.4 8.12.5	Interface description Overview DRIVE-CLiQ interface Dimension drawings Installation Technical data	. 313 . 313 . 314 . 314 . 314 . 316
9	Cabinet des	sign and electromagnetic compatibility (EMC)	319
	9.1	Tightening torques for screws and screw connections	
	9.2	Information on control cabinet installation and EMC	. 320
Α	Appendix		321
	A.1	List of abbreviations	. 321
	A.2	Spring-loaded terminals	. 331
	A.3	Screw terminals	. 331
	A.4	Cable lugs	. 333
	A.5	Documentation overview	. 334
	Index		335

Fundamental safety instructions

1.1 General safety instructions



Danger to life due to live parts and other energy sources

Death or serious injury can result when live parts are touched.

- Only work on electrical devices when you are qualified for this job.
- Always observe the country-specific safety rules.

Generally, six steps apply when establishing safety:

- 1. Prepare for shutdown and notify all those who will be affected by the procedure.
- 2. Disconnect the machine from the supply.
 - Switch off the machine.
 - Wait until the discharge time specified on the warning labels has elapsed.
 - Check that it really is in a no-voltage condition, from phase conductor to phase conductor and phase conductor to protective conductor.
 - Check whether the existing auxiliary supply circuits are de-energized.
 - Ensure that the motors cannot move.
- 3. Identify all other dangerous energy sources, e.g. compressed air, hydraulic systems, or water.
- 4. Isolate or neutralize all hazardous energy sources by closing switches, grounding or short-circuiting or closing valves, for example.
- 5. Secure the energy sources against switching on again.
- 6. Ensure that the correct machine is completely interlocked.

After you have completed the work, restore the operational readiness in the inverse sequence.



Danger to life through a hazardous voltage when connecting an unsuitable power supply

Touching live components can result in death or severe injury.

 Only use power supplies that provide SELV (Safety Extra Low Voltage) or PELV-(Protective Extra Low Voltage) output voltages for all connections and terminals of the electronics modules.

1.1 General safety instructions



Danger to life when live parts are touched on damaged devices

Improper handling of devices can cause damage.

For damaged devices, hazardous voltages can be present at the enclosure or at exposed components; if touched, this can result in death or severe injury.

- Ensure compliance with the limit values specified in the technical data during transport, storage and operation.
- Do not use any damaged devices.



Danger to life through electric shock due to unconnected cable shields

Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.

• As a minimum, connect cable shields and the conductors of power cables that are not used (e.g. brake cores) at one end at the grounded housing potential.



Danger to life due to electric shock when not grounded

For missing or incorrectly implemented protective conductor connection for devices with protection class I, high voltages can be present at open, exposed parts, which when touched, can result in death or severe injury.

• Ground the device in compliance with the applicable regulations.



Danger to life due to electric shock when opening plug connections in operation

When opening plug connections in operation, arcs can result in severe injury or death.

• Only open plug connections when the equipment is in a no-voltage state, unless it has been explicitly stated that they can be opened in operation.

NOTICE

Material damage due to loose power connections

Insufficient tightening torques or vibrations can result in loose electrical connections. This can result in damage due to fire, device defects or malfunctions.

- Tighten all power connections with the specified tightening torques, e.g. line supply connection, motor connection, DC link connections.
- Check all power connections at regular intervals. This applies in particular after transport.

Danger to life due to fire spreading if housing is inadequate

Fire and smoke development can cause severe personal injury or material damage.

- Install devices without a protective housing in a metal control cabinet (or protect the device by another equivalent measure) in such a way that contact with fire is prevented.
- Ensure that smoke can only escape via controlled and monitored paths.

Danger to life through unexpected movement of machines when using mobile wireless devices or mobile phones

Using mobile wireless devices or mobile phones with a transmit power > 1 W closer than approx. 2 m to the components may cause the devices to malfunction, influence the functional safety of machines therefore putting people at risk or causing material damage.

 Switch the wireless devices or mobile phones off in the immediate vicinity of the components.

Danger to life due to the motor catching fire in the event of insulation overload

There is higher stress on the motor insulation through a ground fault in an IT system. If the insulation fails, it is possible that death or severe injury can occur as a result of smoke and fire.

- · Use a monitoring device that signals an insulation fault.
- Correct the fault as quickly as possible so the motor insulation is not overloaded.

1.1 General safety instructions

Danger to life due to fire if overheating occurs because of insufficient ventilation clearances

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

• Ensure compliance with the specified minimum clearance as ventilation clearance for the respective component.

Danger of an accident occurring due to missing or illegible warning labels

Missing or illegible warning labels can result in accidents involving death or serious injury.

- Check that the warning labels are complete based on the documentation.
- Attach any missing warning labels to the components, in the national language if necessary.
- Replace illegible warning labels.

NOTICE

Device damage caused by incorrect voltage/insulation tests

Incorrect voltage/insulation tests can damage the device.

• Before carrying out a voltage/insulation check of the system/machine, disconnect the devices as all converters and motors have been subject to a high voltage test by the manufacturer, and therefore it is not necessary to perform an additional test within the system/machine.

Danger to life when safety functions are inactive

Safety functions that are inactive or that have not been adjusted accordingly can cause operational faults on machines that could lead to serious injury or death.

- Observe the information in the appropriate product documentation before commissioning.
- Carry out a safety inspection for functions relevant to safety on the entire system, including all safety-related components.
- Ensure that the safety functions used in your drives and automation tasks are adjusted and activated through appropriate parameterizing.
- Perform a function test.
- Only put your plant into live operation once you have guaranteed that the functions relevant to safety are running correctly.

1.2 Safety instructions for electromagnetic fields (EMF)

Note

Important safety notices for Safety Integrated functions

If you want to use Safety Integrated functions, you must observe the safety notices in the Safety Integrated manuals.

1.2 Safety instructions for electromagnetic fields (EMF)



∕!∖warning

Danger to life from electromagnetic fields

Electromagnetic fields (EMF) are generated by the operation of electrical power equipment such as transformers, converters or motors.

People with pacemakers or implants are at a special risk in the immediate vicinity of these devices/systems.

• Ensure that the persons involved are the necessary distance away (minimum 2 m).

1.3

Handling electrostatic sensitive devices (ESD)

Electrostatic sensitive devices (ESD) are individual components, integrated circuits, modules or devices that may be damaged by either electric fields or electrostatic discharge.



NOTICE

Damage through electric fields or electrostatic discharge

Electric fields or electrostatic discharge can cause malfunctions through damaged individual components, integrated circuits, modules or devices.

- Only pack, store, transport and send electronic components, modules or devices in their original packaging or in other suitable materials, e.g conductive foam rubber of aluminum foil.
- Only touch components, modules and devices when you are grounded by one of the following methods:
 - Wearing an ESD wrist strap
 - Wearing ESD shoes or ESD grounding straps in ESD areas with conductive flooring
- Only place electronic components, modules or devices on conductive surfaces (table with ESD surface, conductive ESD foam, ESD packaging, ESD transport container).

1.4 Industrial security

1.4 Industrial security

Note

Industrial security

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, solutions, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. For more information about industrial security, visit this address (http://www.siemens.com/industrialsecurity).

To stay informed about product updates as they occur, sign up for a product-specific newsletter. For more information, visit this address (http://support.automation.siemens.com).

Danger as a result of unsafe operating states resulting from software manipulation

Software manipulation (e.g. by viruses, Trojan horses, malware, worms) can cause unsafe operating states to develop in your installation which can result in death, severe injuries and/or material damage.

- Keep the software up to date. You will find relevant information and newsletters at this address (http://support.automation.siemens.com).
- Incorporate the automation and drive components into a holistic, state-of-the-art industrial security concept for the installation or machine.

You will find further information at this address (http://www.siemens.com/industrialsecurity).

• Make sure that you include all installed products into the holistic industrial security concept.

Danger to life due to software manipulation when using exchangeable storage media

Storing files onto exchangeable storage media amounts to an increased risk of infection, e.g. with viruses and malware. As a result of incorrect parameterization, machines can malfunction, which in turn can lead to injuries or death.

• Protect files stored on exchangeable storage media from malicious software by taking suitable protection measures, e.g. virus scanners.

1.5 Residual risks of power drive systems

1.5 Residual risks of power drive systems

When assessing the machine- or system-related risk in accordance with the respective local regulations (e.g., EC Machinery Directive), the machine manufacturer or system installer must take into account the following residual risks emanating from the control and drive components of a drive system:

- 1. Unintentional movements of driven machine or system components during commissioning, operation, maintenance, and repairs caused by, for example,
 - Hardware and/or software errors in the sensors, control system, actuators, and cables and connections
 - Response times of the control system and of the drive
 - Operation and/or environmental conditions outside the specification
 - Condensation/conductive contamination
 - Parameterization, programming, cabling, and installation errors
 - Use of wireless devices/mobile phones in the immediate vicinity of electronic components
 - External influences/damage
 - X-ray, ionizing radiation and cosmic radiation
- 2. Unusually high temperatures, including open flames, as well as emissions of light, noise, particles, gases, etc., can occur inside and outside the components under fault conditions caused by, for example:
 - Component failure
 - Software errors
 - Operation and/or environmental conditions outside the specification
 - External influences/damage
- 3. Hazardous shock voltages caused by, for example:
 - Component failure
 - Influence during electrostatic charging
 - Induction of voltages in moving motors
 - Operation and/or environmental conditions outside the specification
 - Condensation/conductive contamination
 - External influences/damage
- 4. Electrical, magnetic and electromagnetic fields generated in operation that can pose a risk to people with a pacemaker, implants or metal replacement joints, etc., if they are too close
- 5. Release of environmental pollutants or emissions as a result of improper operation of the system and/or failure to dispose of components safely and correctly

For more information about the residual risks of the drive system components, see the relevant sections in the technical user documentation.

System overview

2.1 Field of application

SINAMICS is the family of drives from Siemens designed for machine and plant engineering applications. SINAMICS offers solutions for all drive tasks:

- Simple pump and fan applications in the process industry.
- Complex single drives in centrifuges, presses, extruders, elevators, as well as conveyor and transport systems
- Drive line-ups in textile, plastic film, and paper machines as well as in rolling mill plants
- · High-precision servo drives in the manufacture of wind turbines
- Highly dynamic servo drives for machine tools, as well as packaging and printing machines



Mixers/mills



Pumps / fans / Compressors





Textiles



Converting





Machine tools





Conveyor systems



Printing machines



Woodworking

Packaging



Renewable energy

2.2 Platform Concept and Totally Integrated Automation

Depending on the application, the SINAMICS range offers the ideal variant for any drive task.

- SINAMICS G is designed for standard applications with induction motors. These
 applications have less stringent requirements regarding the dynamic performance of the
 motor speed.
- SINAMICS S handles complex drive tasks with synchronous/induction motors and fulfills stringent requirements regarding:
 - the dynamic performance and accuracy
 - the integration of extensive technological functions in the drive control system
- SINAMICS DC MASTER is the DC drive belonging to the SINAMICS family. As a result of
 its standard expandability, it addresses both basic as well as demanding drive
 applications and in complementary markets.

2.2 Platform Concept and Totally Integrated Automation

All SINAMICS versions are based on a platform concept. Joint hardware and software components, as well as standardized tools for design, configuration, and commissioning tasks ensure high-level integration across all components. SINAMICS handles a wide variety of drive tasks with no system gaps. The different SINAMICS versions can be easily combined with each other.

Totally Integrated Automation (TIA) with SINAMICS S120

Apart from SIMATIC, SIMOTION and SINUMERIK, SINAMICS is one of the core components of TIA. The STARTER commissioning tool is an integral element of the TIA platform. It is thus possible to parameterize, program and commission all components in the automation system using a standardized engineering platform and without any gaps. The system-wide data management functions ensure consistent data and simplify archiving of the entire plant project.

SINAMICS S120 supports communication via PROFINET and PROFIBUS DP.

Communication via PROFINET

This Ethernet-based bus enables control data to be exchanged at high speed via PROFINET IO with IRT or RT and makes SINAMICS S120 a suitable choice for integration in high-performance multi-axis applications. At the same time, PROFINET also uses standard IT mechanisms (TCP/IP) to transport information, e.g. operating and diagnostic data, to higher-level systems. This makes it easy to integrate into an IT corporate network.

Communication via PROFIBUS DP

This bus provides a high-performance, system-wide and integrated communication network which links all automation components of the automation solution:

- HMI (operator control and monitoring)
- Control
- Drives and I/O

2.2 Platform Concept and Totally Integrated Automation

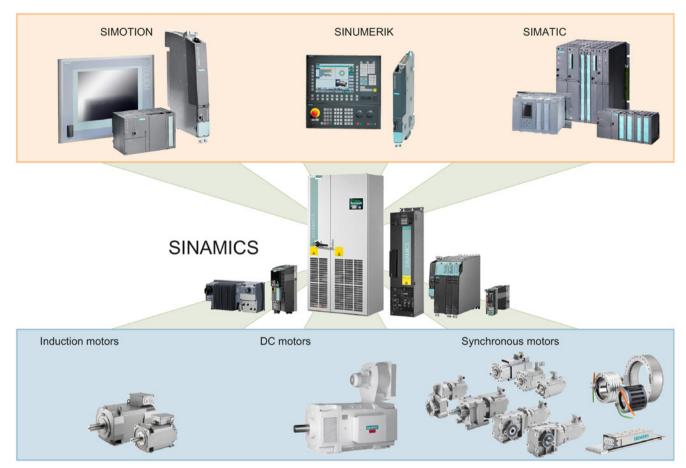


Figure 2-2 SINAMICS as part of the Siemens modular automation system

2.3 Introduction

2.3 Introduction

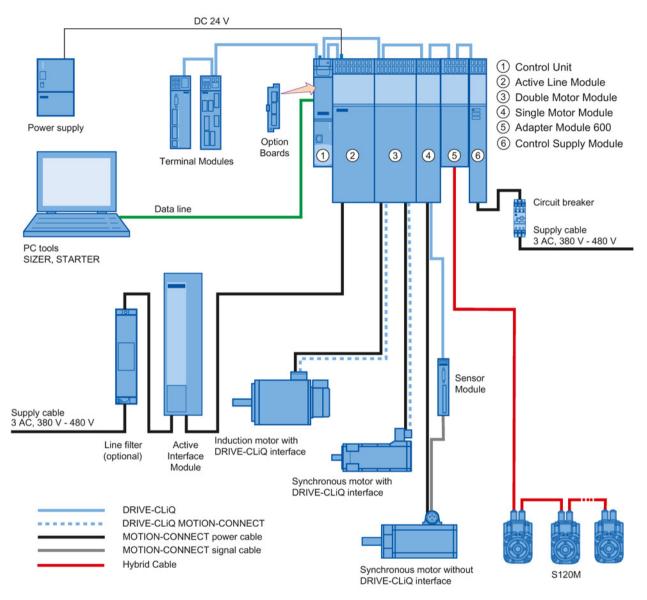


Figure 2-3 SINAMICS S120 system overview

Modular system for sophisticated drive tasks

SINAMICS S120 solves complex drive tasks for a wide range of industrial applications and is, therefore, designed as a modular system. Users can choose from many different harmonized components and functions to create a solution that best meets their requirements. SIZER, a high-performance engineering tool, makes it easier to select and determine the optimum drive configuration.

SINAMICS S120 is supplemented by a wide range of motors. Whether torque, synchronous or induction motors, whether rotating or linear motors, all of these motors are optimally supported by SINAMICS S120.

System architecture with a central Control Unit

On the SINAMICS S120, the drive intelligence is combined with closed-loop control functions into Control Units. These units are capable of controlling drives in the vector, servo and V/f modes. They also perform the speed and torque control functions plus other intelligent drive functions for all axes on the drive. Inter-axis connections can be established within a component and easily configured in the STARTER commissioning tool using a mouse.

Functions for higher efficiency

- · Basic functions: Speed control, torque control, positioning functions
- Intelligent starting functions for independent restart after power supply interruption
- BICO technology with interconnection of drive-related I/Os for easy adaptation of the drive system to its operating environment
- Integrated safety functions for rational implementation of safety concepts
- Regulated infeed/regenerative feedback functions for preventing undesirable reactions on the supply, allowing recovery of braking energy and ensuring greater stability against line fluctuations.

DRIVE-CLiQ - the digital interface between SINAMICS components

Most of the SINAMICS S120 components, including the motors and encoders, are connected to each other via the common DRIVE-CLiQ serial interface. The standardized cables and connectors reduce the variety of different parts and cut storage costs. Encoder evaluations for converting standard encoder signals to DRIVE-CLiQ are available for third-party motors or retrofit applications.

Electronic rating plates in all components


An important digital linkage element of the SINAMICS S120 drive system are the electronic type plates integrated in every component. They allow all drive components to be detected automatically via a DRIVE-CLiQ link. As a result, data does not have to be entered manually during commissioning or component replacement – helping to ensure that drives are commissioned more reliably.


The rating plate contains all the relevant technical data about that particular component. For motors, these are the parameters of the electrical equivalent circuit diagram and key values of the integrated motor encoder, for example.

In addition to the technical data, the type plate includes logistical data (manufacturer ID, article number and ID). Since this data can be called up electronically on site or remotely, all the components used in a machine can always be individually identified, which helps simplify servicing.

2.4 SINAMICS S120 components

2.4 SINAMICS S120 components

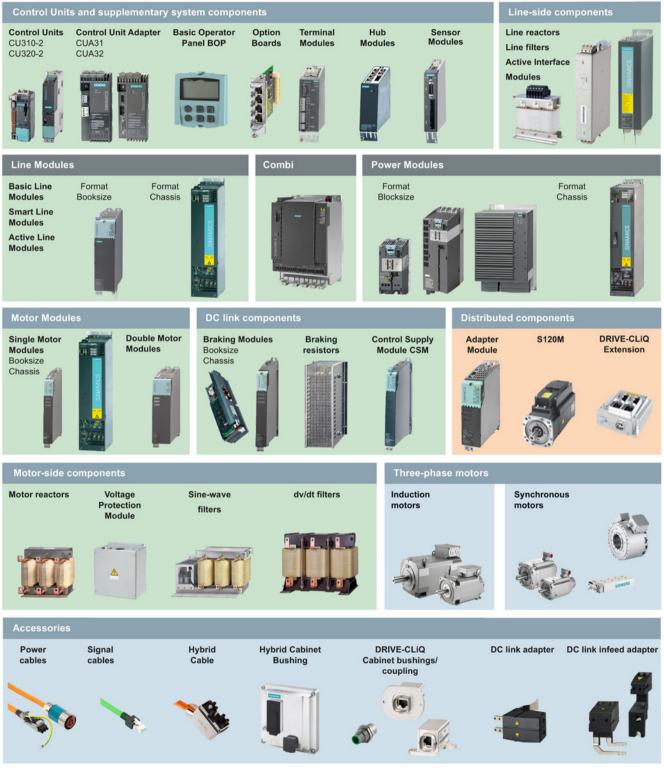

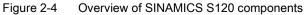

System components

- Line-side power components, such as fuses, contactors, reactors, and filters for switching the power supply and meeting EMC requirements.
- · Line Modules, which supply power centrally to the DC link
- DC link components (optional), which stabilize the DC link voltage.
- Motor Modules, which act as inverters, receive power from the DC link, and supply the connected motors
- Power components on the motor side, such as reactors and Voltage Protection Modules, which allow output currents and output voltages to be reduced

To carry out the required functions, SINAMICS S120 is equipped with:

- Control Units that process the drive and technological functions across all axes
- Additional system components to expand the functionality and to handle various interfaces for encoders and process signals

SINAMICS S120 components are intended for installation in cabinets. They have the following features and characteristics:

- Easy to handle, simple installation and wiring
- Practical connection system, cable routing in accordance with EMC requirements
- Standardized design, side-by-side mounting

Note

Installation location in the cabinet

As a general rule, SINAMICS S120 components must be mounted vertically in the control cabinet. Other permissible installation locations are given in the descriptions for the individual components.

Booksize format

Booksize format units are optimized for multi-axis applications and are mounted adjacent to one another. The connection for the shared voltage-source DC link is an integral feature.

The booksize format offers various cooling options:

- Internal air cooling
- External air cooling
- Cold plate cooling
- Liquid Cooled

Booksize compact format

The booksize compact format combines all benefits of the booksize format and provides the same performance with an even smaller overall height. The booksize compact format is thus particularly well suited for integration into machines with high dynamic requirements and confined installation conditions.

The booksize compact format offers the following cooling options:

- Internal air cooling
- Cold plate cooling

2.5 Power units

Line Modules

Generating a DC voltage for the DC link from the 3-phase line voltage.

- Basic Line Modules Basic Line Modules generate an uncontrolled DC link voltage and are not capable of energy recovery.
- Smart Line Modules Smart Line Modules generate an uncontrolled DC link voltage and are capable of energy recovery.
- Active Line Modules Active Line Modules generate a controlled DC link voltage and are capable of energy recovery.

Motor Modules

Convert energy from the DC link for the connected motors with variable voltage and variable frequency.

2.6 System data

Unless explicitly specified otherwise, the following technical data is valid for components of the SINAMICS S120 booksize drive system described in this manual.

Table 2-1 Electrical data

Line connection voltage	3 AC 380 480 V ±10 % (-15 % < 1 min)
Line frequency	47 63 Hz
Electronics power supply	24 VDC -15/+20% ¹⁾ , protective extra low voltage PELV or SELV
Radio interference suppression	Category C3 acc. to EN 61800-3 (standard) Category C2 acc. to EN 61800-3 (option) for implementing plants and systems corresponding to the EC Declaration of Conformity for EMC and the engineering manual "EMC installation guideline", Article number: 6FC5297AD30- 0AP.
Overvoltage category	III acc. to EN 61800-5-1
Pollution degree	2 acc. to EN 61800-5 ²⁾

¹⁾ The supply voltage may not fall below the minimum value of 20.4 V (24 V -15 %) at the last device in the line-up, as otherwise malfunctions can occur. The amplitude of the test current must be set adequately high for this. In order to prevent the maximum 24 V power supply voltage from being exceeded (= 28.8 V), the voltage can be injected at various locations in the line-up.

²⁾ The components must be protected against conductive pollution, e.g. by installing them in a control cabinet with degree of protection IP54 according to IEC 60529 or type 12 according to NEMA 250. If conductive pollution can be excluded at the installation site, a lower degree of cabinet protection may be permitted.

Table 2-2 Degree of protection / protection class

Degree of protection (with the exception of SME20/25/120/125, DME20)	IPXXB acc. to EN 60529, open type acc. to UL/CSA
Degree of protection for SME20/25/120/125 and DME20	IP67, with mounted connectors or protective caps
Protection class Power circuits Electronic circuits	I, with protective conductor connection extra-low-voltage PELV/SELV

Table 2-3 E	Environmental	conditions
-------------	---------------	------------

Chemically active substances		
Long-term storage	Class 1C2 according to EN 60721-3-1, in product packaging ¹⁾	
Transport	Class 2C2 according to EN 60721-3-2, in transport packaging ²⁾	
Operation	Class 3C2 according to EN 60721-3-3	
Biological environmental conditions		
Long-term storage	Class 1B1 according to EN 60721-3-1, in product packaging ¹⁾	
Transport	Class 2B1 according to EN 60721-3-2, in transport packaging ²⁾	
Operation	Class 3B1 according to EN 60721-3-3	

2.6 System data

Climatic environmental conditions	
Long-term storage	Class 1K4 acc. to EN 60721-3-1, in product packaging ¹⁾ Temperature: -25 +55 °C
Transport	Class 2K4 acc. to EN 60721-3-2, in transport packaging ²⁾ Temperature: -40 +70 °C
Operation (with the exception of SME20/25/120/125, DME20)	Class 3K3 acc. to EN 60721-3-3 with an increased degree of ruggedness with respect to relative humidity
	Temperature: 0 +55 °C Relative humidity: 5 95 % no condensation (better than class 3K3) Oil mist, salt mist, ice formation, condensation, dripping water, spraying water, splashing water and water jets are not permitted
Operation for SME20/25/120/125, DME20	Class 3K3 acc. to EN 60721-3-3 with an increased degree of ruggedness with respect to relative humidity
	Temperature: 0 +55 °C Relative humidity: 5 95 % no condensation (better than class 3K3) Formation of ice and condensation not permissible
Mechanical environmental condition	15
Long-term storage	Class 1M2 according to EN 60721-3-1, in product packaging ¹)
Transport	Class 2M3 according to EN 60721-3-2, in transport packaging ²⁾
Operation (with the exception of SME20/25/120/125, DME20)	Class 3M1 in acc. to EN 60721-3-3
Vibration test	According to IEC 60068-2-6 test Fc (sinusoidal)
	• 10 57 Hz 0.075 mm deflection amplitude
	• 57 150 Hz: 1g acceleration amplitude
	10 frequency cycles per axis
Shock test	According to IEC 60068-2-27 test Ea (half-sine)
	• 5 g peak acceleration
	30 ms duration
	3 shocks in all three axes in both directions
Operation for SME20/25/120/125, DME20	Class 3M3 acc. to EN 60721-3-3
Vibration test	According to IEC 60068-2-6 test Fc (sinusoidal)
	• 10 57 Hz 0.035 mm deflection amplitude
	• 57 150 Hz: 5g acceleration amplitude
	10 frequency cycles per axis
Shock test	According to IEC 60068-2-27 test Ea (half-sine)
	25 g peak acceleration
	6 ms duration
	1000 shocks in all three axes in both directions
Installation altitude	0 2000 m without derating
	2000 … 4000 m with a reduction of the ambient temperature by 5 °C / 1000 m

¹⁾ A product packaging (storage packaging) is an individual packaging for storage - and does not comply with requirements for transport. As a consequence, the product packaging is not suitable for shipping.

²⁾ Transport packaging is either packaging that directly suitable for transport or secondary packaging, which together with product packaging, ensures that the requirements for transport are complied with.

Table 2-4 Certificates

Declarations of Conformity	CE
Approvals	cULus cURus

2.7 Recycling and disposal

Dispose of the product according to the applicable national regulations.

The products described in this Equipment Manual are extensively recyclable on account of the low-toxic composition of the materials used. To recycle and dispose of your old device in an environmentally friendly way, please contact a company that disposes of electronic waste.

System overview

2.7 Recycling and disposal

Control Units and operating elements

3.1 Introduction

Description

Control Units CU320-2 PN and CU320-2 DP of the SINAMICS S system are designed for use with several drives.

The number of variable-speed drives depends on:

- The required performance
- The required additional functions
- The required operating mode (servo, vector or U/f)


The software and the parameters are stored on a plug-in memory card.

The option slot is used to expand the number of terminals or adapt to other communication interfaces (to the higher-level control).

Compatible firmware versions:


- CU320-2 PN V4.4 or higher
- CU320-2 DP V4.3 or higher

3.1 Introduction

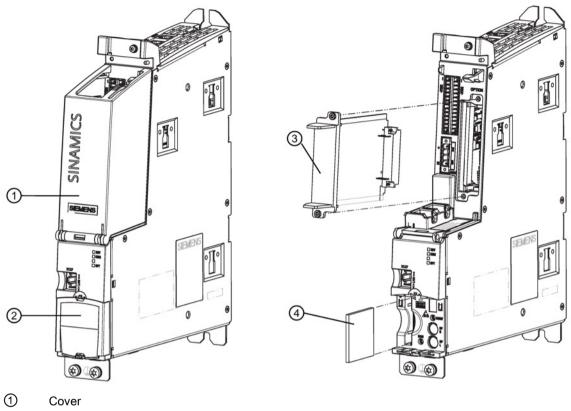

- ② Blanking cover
- ③ Option Board (optional)
- (4) Memory card



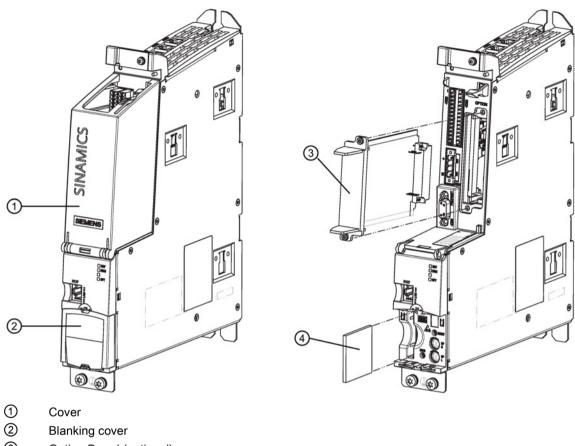

- ③ Option Board (optional)
- ④ Memory card

Note

The Control Unit, the option board, and the memory card must be ordered separately.

If your application requires more than one Control Unit, the number can be increased accordingly. The Control Units are then interconnected via PROFIBUS, for example.

A Control Unit communicates with the associated components (Motor Modules, Line Modules, Sensor Modules, Terminal Modules, and so on) via the system-internal DRIVE-CLiQ interface.

Figure 3-2 Overview, Control Unit CU320-2 DP

3.2 Safety instructions for Control Units

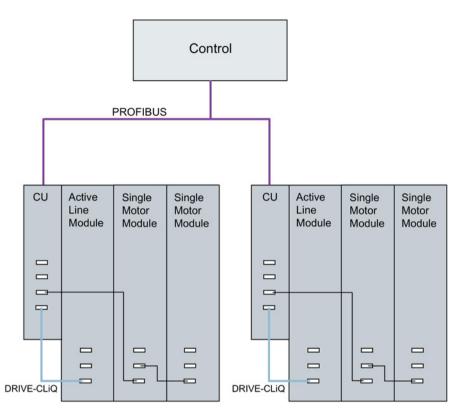


Figure 3-3 Sample configuration

3.2 Safety instructions for Control Units

Danger to life if the fundamental safety instructions and remaining risks are not carefully observed

If the fundamental safety instructions and remaining risks in Chapter 1 (Page 19) are not observed, accidents involving severe injuries or death may occur.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.

Risk of fire through overheating if there are insufficient ventilation clearances

Insufficient ventilation clearances lead to overheating with associated risk to persons as a result of smoke and fire. This can also result in more downtimes and a reduced service life for the Control Unit.

• For this reason, it is imperative that you maintain the 80 mm clearances above and below the Control Unit.

3.2 Safety instructions for Control Units

NOTICE

Risk of component destruction as a result of high leakage currents

The Control Unit or other PROFIBUS and/or PROFINET nodes can be destroyed, if significant discharge currents flow via the PROFIBUS or PROFINET cable.

 A functional equipotential bonding conductor with a cross-section of at least 10 mm² must be used between components in a system of a plant that are located at a distance from each other.

NOTICE

Malfunctions or damage to the option board by inserting and withdrawing in operation

Withdrawing and inserting the option board in operation can damage it or cause it to malfunction.

• Only withdraw or insert the Option Board when the Control Unit is current-free.

NOTICE

Damage through use of incorrect DRIVE-CLiQ cables

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

 Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

Note

Malfunctions due to polluted DRIVE-CLiQ interfaces

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.

Note

Function equipotential bonding for distributed DRIVE-CLiQ nodes

Integrate all of the components that are connected via DRIVE-CLiQ in the functional equipotential bonding concept. The connection should be preferably established by mounting on metallic bare machine and plant components that are connected with one another using an equipotential bonding conductor.

Alternatively, you can establish equipotential bonding using a conductor (min. 6 mm²), which as far as possible, is routed in parallel to the DRIVE-CLiQ cable. All distributed DRIVE-CLiQ nodes are involved, for example DME20, SME20, SME25, SME120, SME125 etc.

3.3 Control Unit CU320-2 PN (PROFINET)

3.3.1 Description

The Control Unit CU320-2 PN is a central control module in which the closed-loop and openloop functions are implemented for one or more Line Modules and/or Motor Modules. It can be used with firmware version 4.4 or higher.


The CU320-2 PN has the following interfaces (ports):


Table 3-1 Overview of th	ne CU320-2 PN interfaces
--------------------------	--------------------------


Туре	Quantity
Isolated digital inputs	12
Non-isolated digital inputs/outputs	8
DRIVE-CLiQ interfaces	4
PROFINET interfaces	2
LAN (Ethernet)	1
Serial interface (RS232)	1
Option slot	1
Measuring terminals	3


3.3.2 Interface description

3.3.2.1 Overview

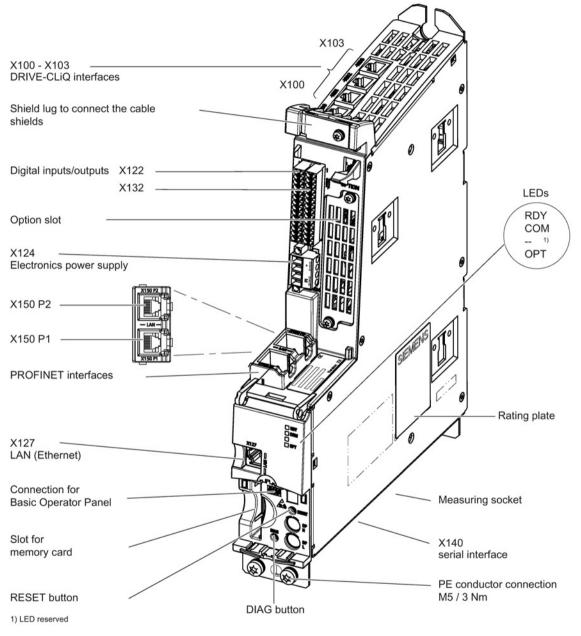

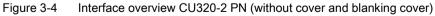

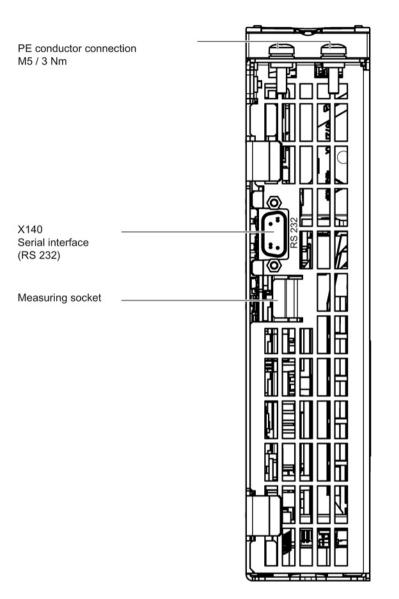

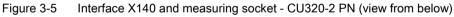

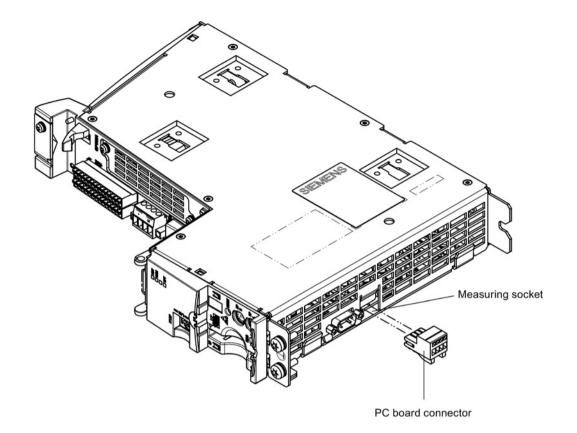


Figure 3-6 Mounting a PC board connector (Phoenix Contact) in the measuring socket

3.3.2.2 X100-X103 DRIVE-CLiQ interfaces

Table 3-2 X100-X103 DRIVE-CLiQ interface	ces
--	-----

	Pin	Signal name	Technical data
	1	ТХР	Transmit data +
Г В	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	А	+ (24 V)	Power supply
	В	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ	socket	

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery. Blanking covers (50 x) Article No.: 6SL3066-4CA00-0AA0

Control Units and operating elements

3.3 Control Unit CU320-2 PN (PROFINET)

3.3.2.3 X122 digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 0	Voltage: -3 +30 V DC
	2	DI 1	Electrical isolation: Yes
	3	DI 2	Reference potential: M1
	4	DI 3	Input characteristic acc. to IEC 61131-2, type 1
	5	DI 16	Input voltage (including ripple) "1" signal: 15 … 30 V
	6	DI 17	"0" signal: -3 +5 V
			Input current at 24 V DC: type. 3.5 mA for "1" signal: > 0.5 mA Input delay for "0" \rightarrow "1": typ. 50 µs for "1" \rightarrow "0": typ. 150 µs
	7	M1	Reference potential for terminals 1 6
	8	Μ	Electronics ground
Ю́Ш	9	DI/DO 8	As input:
0D	10	DI/DO 9	Voltage: -3 +30 V DC
	11	M	Electrical isolation: no Reference potential: M
	12	DI/DO 10	Input characteristic acc. to IEC 61131-2, type 1
	13	DI/DO 11 Input voltage (including ripple)	Input voltage (including ripple)
	14	М	"1" signal: 15 … 30 V "0" signal: -3 … +5 V
			Input current at 24 V DC: typ. 3.5 mA for "1" signal: > 0.5 mA Input delay for "0" \rightarrow "1": typ. 5 μ s for "1" \rightarrow "0": typ. 50 μ s DI 8, DI 9, DI 10 and DI 11 are "fast inputs" ²)

Table 3-3 X122 digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
			As output: Voltage: 24 V DC Electrical isolation: no Reference potential: M
			Output voltage "1" signal, with load: > X124.+ -2 V
			Output current for each output: ≤ 0.5 A Sum of all four outputs: ≤ 2 A Residual current for "0" signal: < 0.5 mA Short-circuit protection, automatic restart after a short- circuit
			Load types: ohmic, capacitive, inductive Output delay ³⁾ for "0" \rightarrow "1": typ. 150 µs / max. 400 µs (ohmic load) for "1" \rightarrow "0": typ. 75 µs / max. 100 µs (ohmic load)
			Switching frequency for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: max. 10 Hz Lamp load: max. 5 W
Type: Spring-	loaded terminal	3 (Page 331)	

¹⁾ DI: digital input; DI/DO: bidirectional digital input/output; M: electronics ground; M1: reference potential

²⁾ The rapid inputs can be used as probe inputs or as inputs for the external zero mark.

³⁾ Data for: V_{cc} = 24 V; load 48 Ω ; high ("1") = 90% V_{out}; low ("0") = 10% V_{out}

The maximum cable length that can be connected is 30 m.

Note

Ensuring the function of digital inputs

An open input is interpreted as "low".

Terminal M1 must be connected so that the digital inputs (DI) can function.

This is achieved by using one of the following measures:

- 1. Providing the ground reference of the digital inputs
- A jumper to terminal M Note: This removes isolation for these digital inputs.

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

Control Units and operating elements

3.3 Control Unit CU320-2 PN (PROFINET)

3.3.2.4 X132 digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 4	Voltage: -3 +30 V DC
	2	DI 5	Electrical isolation: Yes
	3	DI 6	Reference potential: M2
	4	DI 7	Input characteristic acc. to IEC 61131-2, type 1
	5	DI 20	Input voltage (including ripple)
	6	DI 21	"0" signal: -3 +5 V
			Input current at 24 V DC: type. 3.5 mA for "1" signal: > 0.5 mA
			Input delay for "0" → "1": typ. 50 μs for "1" → "0": typ. 150 μs
1011	7	M2	Reference potential for terminals 1 6
ÓD	8	Μ	Electronics ground
	9	DI/DO 12	As input:
	10	DI/DO 13	Voltage: -3 +30 V DC Electrical isolation: no
	11	Μ	Reference potential: M
	12	DI/DO 14	Input characteristic acc. to IEC 61131-2, type 1
	13	DI/DO 15	Input voltage (including ripple)
	14 M "1" signal: 15 30 V "0" signal: -3 +5 V	"1" signal: 15 … 30 V "0" signal: -3 … +5 V	
			Input current at 24 V DC: typ. 3.5 mA for "1" signal: > 0.5 mA Input delay for "0" \rightarrow "1": typ. 5 μ s for "1" \rightarrow "0": typ. 50 μ s DI 12, DI 13, DI 14 and DI 15 are "fast inputs" ²)

Table 3-4 X132 digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
			As output: Voltage: 24 V DC Electrical isolation: no Reference potential: M
			Output voltage "1" signal, with load: > X124.+ -2 V
			Output current for each output: ≤ 0.5 A Sum of all four outputs: ≤ 2 A Residual current for "0" signal: < 0.5 mA Short-circuit protection, automatic restart after a short- circuit
			Load types: ohmic, capacitive, inductive Output delay ³⁾ for "0" \rightarrow "1": typ. 150 µs / max. 400 µs (ohmic load) for "1" \rightarrow "0": typ. 75 µs / max. 100 µs (ohmic load)
			Switching frequency for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: max. 10 Hz Lamp load: max. 5 W
Type: Spring-lo	baded terminal 3	(Page 331)	• · ·

¹⁾ DI: digital input; DI/DO: bidirectional digital input/output; M: electronics ground; M2: reference potential

2) The rapid inputs can be used as probe inputs or as inputs for the external zero mark

³⁾ Data for: V_{cc} = 24 V; load 48 Ω ; high ("1") = 90% V_{out}; low ("0") = 10% V_{out}

The maximum cable length that can be connected is 30 m.

Note

Ensuring the function of digital inputs

An open input is interpreted as "low".

To enable the digital inputs (DI) to function, terminal M2 must be connected.

This is achieved by using one of the following measures:

- 1. Providing the ground reference of the digital inputs
- A jumper to terminal M Note: This removes isolation for these digital inputs.

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

3.3.2.5 X124 electronics power supply

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 28.8 V)
\oslash	+	Electronics power supply	Current consumption: max. 1.0 A
	Μ	Electronics ground	(without DRIVE-CLiQ or digital outputs)
	Μ	Electronics ground	Max. current via jumper in connector: 20 A (15 A ac- cording to UL/CSA)

Table 3-5 X124 electronics power supply

Type: Screw terminal 2 (Page 331)

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through. The current consumption increases by the value for the DRIVE-CLiQ node and digital outputs.

Note

The terminal block must be screwed on tightly using a flat-bladed screwdriver.

3.3.2.6 X127 LAN (Ethernet)

Note

Application

The X127 LAN interface is a commissioning and service interface. As a consequence, it must always be accessible to qualified personnel without any restrictions.

	Pin	Signal name	Technical data
	1	ТХР	Ethernet transmit data +
	2	TXN	Ethernet transmit data -
	3	RXP	Ethernet receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Ethernet receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
Connector type:	RJ45 sock	et	•

Table 3-6	X127 LAN (Ethernet)
-----------	---------------------

Note

The LAN (Ethernet) interface does not support Auto MDI(X). For this reason, only crossed cables may be used to connect devices.

For diagnostic purposes, the X127 LAN interface features a green and a yellow LED. These LEDs indicate the following status information:

Table 3-7 LE	ED statuses for the X127	LAN interface
--------------	--------------------------	---------------

LED	Color	Status	Description
Link port	-	Off Missing or faulty link	
	Green	Continuous light	10 or 100 Mbit link available
Activity port	-	Off	No activity
	Yellow	Flashing light	Sending or receiving

Networking

Networking via a local network is permissible.

Assuming that the network and connection are realized in the control cabinet, then for a closed-loop control cabinet, the security aspects are considered to have been complied with. For an X127 interface that is brought out of the control cabinet, additional security measures must be taken so that misuse through sabotage or unqualified data manipulation is ruled out (also see Chapter "Industrial Security (Page 24)").

3.3.2.7 X140 serial interface (RS232)

An external display and operator device for operator control/parameterization can be connected via the serial interface. The interface is located on the underside of the Control Unit.

	Pin	Signal name	Technical data	
	1	Reserved, do not use		
	2	RxD	Receive data	
	3	TxD	Send data	
	4	Reserved, do not use		
	5	Ground	Ground reference	
	6	Reserved, do not use		
	7	Reserved, do not use		
$\widehat{\Box}$	8	Reserved, do not use		
\bigcirc	9	Reserved, do not use		
Connector type: 9-pin SUB D connector				

Table 3-8 X140 serial interface (RS232)

3.3.2.8 X150 P1/P2 PROFINET

The PROFINET interfaces can be operated isochronously.

	Pin	Signal name	Technical data
	1	RXP	Receive data +
	2	RXN	Receive data -
	3	ТХР	Transmit data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	TXN	Transmit data -
	7	Reserved, do not use	
	8	Reserved, do not use	
Connector typ Cable type: P		ocket	

Table 3-9 X150 P1 and X150 P2 PROFINET

Note

The PROFINET interfaces support Auto MDI(X). It is therefore possible to use both crossed and uncrossed cables to connect the devices.

For diagnostic purposes, the two PROFINET interfaces are equipped with a green and a yellow LED. These LEDs indicate the following status information:

LED	Color	Status	Description
Link port	-	Off Missing or faulty link	
	Green	Continuous light	10 or 100 Mbit link available
Activity port	-	Off	No activity
	Yellow	Flashing light	Data is being received or sent at port x

Table 3-10 LED states at the X150 P1/P2 PROFINET interface

3.3.2.9 Measuring socket

Table 3-11	Measuring socket with mounted PC board connector
------------	--

	Socket	Function	Technical data	
M T0 T1 T2	Μ	Ground	Voltage: 0 5 V	
AAAA	то	Measuring terminal 0	Resolution: 8 bits	
	T1	Measuring terminal 1	Load current: max. 3 mA Continuous short-circuit proof	
	Τ2	Measuring terminal 2	The reference potential is terminal M	
PC board connector, Phoenix Contact, type: ZEC 1.0/ 4-ST-3.5 C1 R1.4, Article number: 1893708				

Note

Cable cross section

The measuring terminals are only suitable for conductor cross-sections of 0.2 mm^2 up to 1 mm^2 .

Note

Use of the measuring socket

The measuring socket supports commissioning and diagnostic functions. It must not be connected for normal operation.

3.3.2.10 Buttons

RESET button

Pressing the RESET button restarts the device, just the same as after connecting the electronics power supply (cold restart).

DIAG button

The DIAG pushbutton is reserved for service functions.

3.3.2.11 Slot for memory card



Figure 3-7 Slot for memory card

Note

Possible plant standstill by withdrawing or inserting the memory card in operation

If the memory card is withdrawn or inserted during operation, then data can be lost, possibly resulting in a plant standstill.

Only withdraw and insert the memory card when the Control Unit is in a no-voltage condition.

Note

Insertion direction for the memory card

Only insert the memory card as shown in the photo above (arrow at top right).



NOTICE

Memory card damage caused by electric fields or electrostatic discharge

Electric fields or electrostatic discharge may result in the memory card being damaged.

 When removing and inserting the memory card, always observe the ESD regulations (Page 23).

Note

Possible data loss when returning the Control Unit with memory card

When returning a defective Control Unit for repair or testing, the data on the memory card (parameters, firmware, licenses, etc.) could be lost.

• Do not return the memory card as well, but keep it in a safe place so that it can be inserted in the replacement unit.

Note

Please note that only SIEMENS memory cards can be used to operate the Control Unit.

3.3.3 Connection example

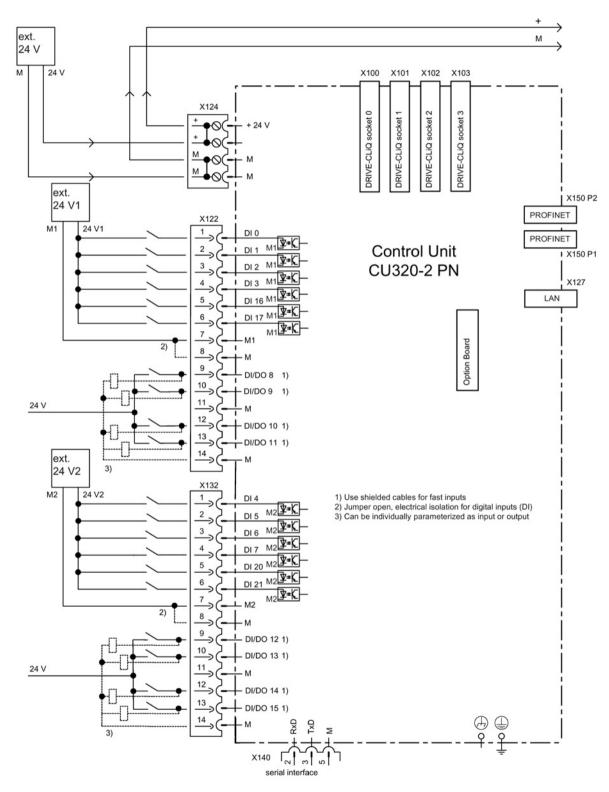


Figure 3-8 Connection example of a Control Unit CU320-2 PN

3.3.4 Meaning of the LEDs

3.3.4.1 Description of the LED statuses

The different states during power-up and in operation are indicated by the LEDs on the Control Unit.

- The duration of the individual statuses varies.
- If an error occurs, the booting procedure is terminated and the cause is indicated accordingly via the LEDs.
- Once the unit has successfully booted up, all the LEDs are switched off briefly.
- Once the unit has booted up, the LEDs are controlled via the loaded software.

3.3.4.2 Behavior of the LEDs during booting

LED		Status	Comment	
RDY	СОМ	OPT		
Red	Orange	Orange	Reset	Hardware reset RDY LED lights up red, all other LEDs light up orange
Red	Red	Off	BIOS loaded	-
Red flash- ing light 2 Hz	Red	Off	BIOS error	Error occurred while loading the BIOS
Red flash- ing light 2 Hz	Red flash- ing light 2 Hz	Off	File error	 Memory card not inserted or defective Software on memory card not present or corrupted
Red	Orange flashing light	Off	FW loading	RDY LED lights up red, COM LED flashes orange without fixed frequency
Red	Off	Off	FW loaded	-
Off	Red	Off	FW checked (no CRC error)	-
Red flash- ing light 0.5 Hz	Red flash- ing light 0.5 Hz	Off	FW checked (CRC error)	CRC invalid

Table 3-13	Firmware
------------	----------

	LED		LED		Status	Comment
RDY	СОМ	OPT				
Orange	Off	Off	Initializing	_		
	Alternating		Running	See the table below		

Control Units and operating elements

3.3 Control Unit CU320-2 PN (PROFINET)

3.3.4.3 Behavior of the LEDs in the operating state


LED	Color	Status	Description, cause	Remedy
RDY (READY)	-	Off	Electronics power supply is missing or outside the permissible tolerance range.	Check power supply
	Green	Continuous light	The component is ready for operation and cy- clic DRIVE-CLiQ communication is taking place.	-
		Flashing light 0.5 Hz	Commissioning/reset	-
		Flashing light 2 Hz	Writing to the memory card	-
	Red	Flashing light 2 Hz	General error	Check parameterization / configuration
	Red/ green	Flashing light 0.5 Hz	Control Unit is ready for operation. However, there are no software licenses.	Obtain licenses
	Orange	Flashing light 0.5 Hz	Updating the firmware of the DRIVE-CLiQ components	-
		Flashing light 2 Hz	DRIVE-CLIQ component firmware update com- plete. Wait for POWER ON for the components in question.	Turn POWER ON for the components in question
	Green/ orange	Flashing light 2 Hz	Component recognition via LED is activated. Remark :	-
	or red/ orange		Both options depend on the LED status when component recognition is activated.	
COM PROFIdrive cyclic opera-	-	Off	Cyclic communication has not (yet) taken place. Remark:	-
tion			PROFIdrive is ready for communication when the Control Unit is ready (see LED RDY).	
	Green	Continuous light	Cyclic communication is taking place.	-
		Flashing light 0.5 Hz	Full cyclic communication has not yet taken place. Possible causes:	-
			• The controller is not transferring any set- points.	
			• During isochronous operation, no global control (GC) or a faulty global control (GC) is transferred by the controller.	
			• "Shared Device" is selected and only one controller connected.	
	Red	Flashing light 0.5 Hz	Bus error, incorrect parameter assignment/configuration	Adapt configuration be- tween controller and de- vices
		Flashing light 2 Hz	Cyclic bus communication has been interrupted or could not be established	Remove fault


Table 3- 14 Control Unit CU320-2 PN – Description of the LEDs after booting

LED	Color	Status	Description, cause	Remedy
OPT (OPTION)			Electronics power supply is missing or outside the permissible tolerance range.	Check power supply and/or component
			Component is not ready.	
			Option board not installed or no associated drive object has been created.	
	Green	Continuous light	Option board is ready.	-
		Flashing light 0.5 Hz	Depends on the option board used ¹⁾ .	_
	Red	Continuous light	Depends on the option board used ¹⁾ .	-
		Flashing light 0.5 Hz	Depends on the option board used ¹⁾ .	_
		Flashing light 2 Hz	At least one fault is present in this component. Option board not ready (e.g. after switching on).	Remove the fault and acknowledge
RDY and COM	Red	Flashing light 2 Hz	Bus error - communication has been interrupted	Remove fault
RDY and OPT	Orange	Flashing light 0.5 Hz	The firmware of the connected option board is being updated.	-

¹⁾ Possible individual responses of the OPT LED are described for the particular option board.

3.3.5 Dimension drawing

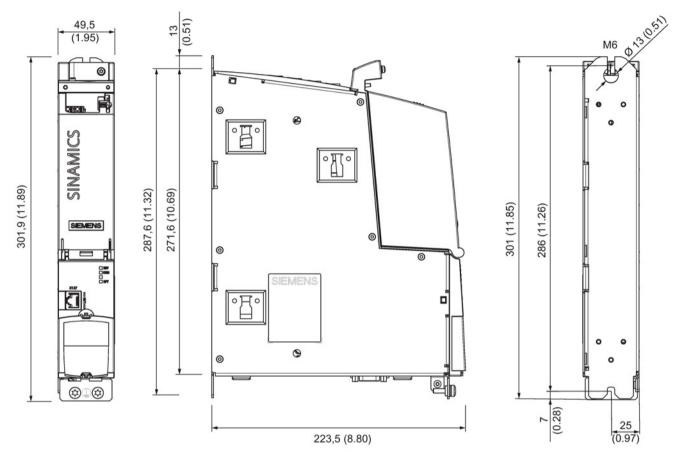

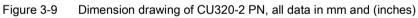

3.3.6 Technical data

Table 3- 15	Technical data
-------------	----------------

6SL3040-1MA01-0AA0	Unit	Value
Electronics power supply		
Voltage	VDC	24 (20.4 28.8)
Current (without DRIVE-CLiQ and digital outputs)	ADC	1.0
Power loss	W	24
Total maximum permissible output currents	A	5.5
Maximum DRIVE-CLiQ cable length	m	100
PE/ground connection	At the housing	with M5 screw

6SL3040-1MA01-0AA0	Unit	Value		
Response time		The response time of digital inputs/outputs depends on the evaluation (refer to the function diagram).		
	Additional information can be taken from the following ref- erences:			
		Reference: /LH1/ SINAMICS S120/S150 List Manual, Chap ter "Function diagrams/CU320-2 Input/Output terminals"		
Weight	kg	2.3		

3.4 Control Unit CU320-2 DP (PROFIBUS)

3.4.1 Description


The Control Unit CU320-2 DP is a central control module in which the closed-loop and openloop functions are implemented for one or more Line Modules and/or Motor Modules. It can be used with firmware version 4.3 or higher.


The CU320-2 DP has the following interfaces (ports):

Туре	Quantity
Isolated digital inputs	12
Non-isolated digital inputs/outputs	8
DRIVE-CLiQ interfaces	4
PROFIBUS interface	1
LAN (Ethernet)	1
Serial interface (RS232)	1
Option slot	1
Measuring terminals	3

3.4.2 Interface description

3.4.2.1 Overview

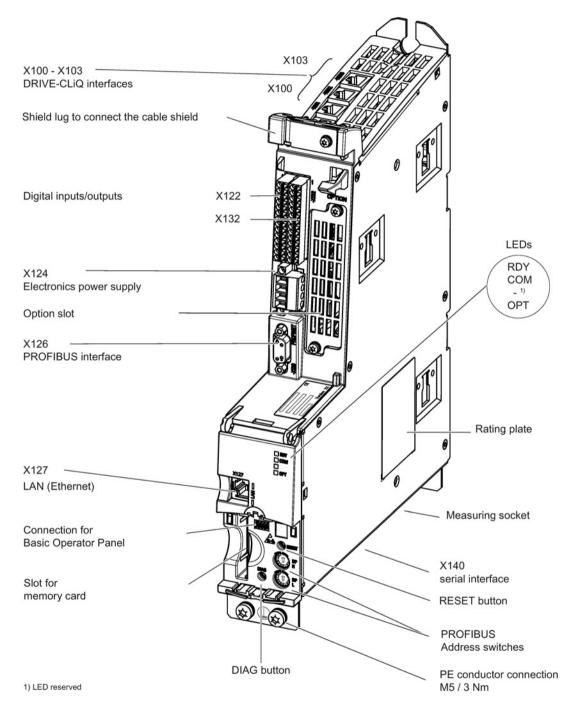

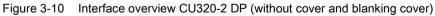

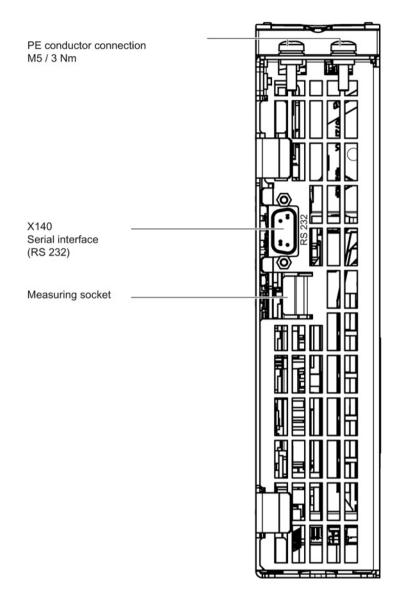


Figure 3-11 Interface X140 and measuring sockets T0 to T2 - CU320-2 DP (view from below)

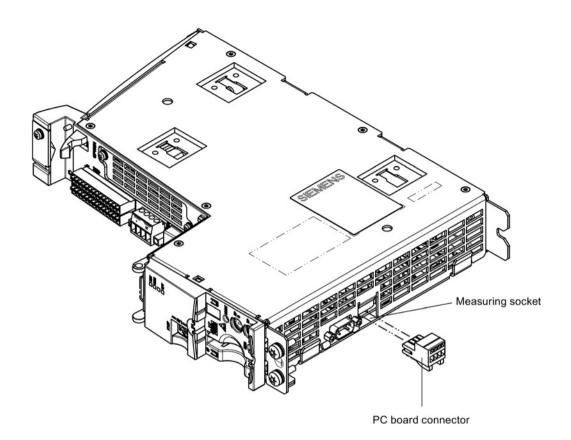


Figure 3-12 Mounting a PC board connector (Phoenix Contact) in the measuring socket

3.4.2.2 X100-X103 DRIVE-CLiQ interfaces

Table 3- 17	X100-X103 DRIVE-CLiQ interfaces

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
п в	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	А	+ (24 V)	Power supply
	В	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ	socket	

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery. Blanking covers (50 x) Article No.: 6SL3066-4CA00-0AA0

3.4.2.3 X122 digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 0	Voltage: -3 +30 V DC
	2	DI 1	Electrical isolation: Yes
	3	DI 2	Reference potential: M1
	4	DI 3	Input characteristic acc. to IEC 61131-2, type 1
	5	DI 16	Input voltage (including ripple) "1" signal: 15 … 30 V
	6	DI 17	"0" signal: -3 +5 V
			Input current at 24 V DC: type. 3.5 mA for "1" signal: > 0.5 mA
			Input delay for "0" → "1": typ. 50 μs for "1" → "0": typ. 150 μs
1011	7	M1	Reference potential for terminals 1 6
ÓD	8	М	Electronics ground
	9	DI/DO 8	As input:
	10	DI/DO 9	Voltage: -3 +30 V DC Electrical isolation: no
	11	М	Reference potential: M
	12	DI/DO 10	Input characteristic acc. to IEC 61131-2, type 1
	13	DI/DO 11	Input voltage (including ripple)
	14	М	"1" signal: 15 … 30 V "0" signal: -3 … +5 V
			Input current at 24 V DC: typ. 3.5 mA for "1" signal: > 0.5 mA Input delay for "0" \rightarrow "1": typ. 5 μ s for "1" \rightarrow "0": typ. 50 μ s DI 8, DI 9, DI 10 and DI 11 are "fast inputs" ²)

Table 3- 18 X122 digital inputs/outputs

Terminal	Designation ¹⁾	Technical data
		As output: Voltage: 24 V DC Electrical isolation: no Reference potential: M
		Output voltage "1" signal, with load: > X124.+ -2 V
		Output current for each output: ≤ 0.5 A Sum of all four outputs: ≤ 2 A Residual current for "0" signal: < 0.5 mA Short-circuit protection, automatic restart after a short- circuit
		Load types: ohmic, capacitive, inductive Output delay ³⁾ for "0" \rightarrow "1": typ. 150 µs / max. 400 µs (ohmic load) for "1" \rightarrow "0": typ. 75 µs / max. 100 µs (ohmic load)
		Switching frequency for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: max. 10 Hz Lamp load: max. 5 W

Type: Spring-loaded terminal 3 (Page 331)

¹⁾ DI: digital input; DI/DO: bidirectional digital input/output; M: electronics ground; M1: reference potential

²⁾ The rapid inputs can be used as probe inputs or as inputs for the external zero mark.

³⁾ Data for: V_{cc} = 24 V; load 48 Ω ; high ("1") = 90% V_{out}; low ("0") = 10% V_{out}

The maximum cable length that can be connected is 30 m.

Note

Ensuring the function of digital inputs

An open input is interpreted as "low".

Terminal M1 must be connected so that the digital inputs (DI) can function.

This is achieved by using one of the following measures:

- 1. Providing the ground reference of the digital inputs
- A jumper to terminal M Note: This removes isolation for these digital inputs.

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

3.4.2.4 X132 digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 4	Voltage: -3 +30 V DC
	2	DI 5	Electrical isolation: Yes
	3	DI 6	Reference potential: M2
	4	DI 7	 Input characteristic acc. to IEC 61131-2, type 1 Input voltage (including ripple)
	5	DI 20	"1" signal: 15 30 V
	6	DI 21	"0" signal: -3 +5 V
		Input current at 24 V DC: type. 3.5 mA for "1" signal: > 0.5 mA Input delay for "0" \rightarrow "1": typ. 50 µs for "1" \rightarrow "0": typ. 150 µs	at 24 V DC: type. 3.5 mA
			for "0" → "1": typ. 50 µs
Õ	7	M2	Reference potential for terminals 1 6
ÓD	8	М	Electronics ground
ÕīÞ	9	DI/DO 12	As input:
	10	DI/DO 13	Voltage: -3 +30 V DC Electrical isolation: no
	11	М	Reference potential: M
	12	DI/DO 14	Input characteristic acc. to IEC 61131-2, type 1
	13	DI/DO 15	Input voltage (including ripple)
	14	Μ	"1" signal: 15 … 30 V "0" signal: -3 … +5 V
			Input current at 24 V DC: typ. 3.5 mA for "1" signal: > 0.5 mA Input delay for "0" \rightarrow "1": typ. 5 µs for "1" \rightarrow "0": typ. 50 µs DI 12, DI 13, DI 14 and DI 15 are "fast inputs" ²⁾

Table 3- 19 X132 digital inputs/outputs

 Terminal	Designation ¹⁾	Technical data
		As output: Voltage: 24 V DC Electrical isolation: no Reference potential: M
		Output voltage "1" signal, with load: > X124.+ -2 V
		Output current for each output: ≤ 0.5 A Sum of all four outputs: ≤ 2 A Residual current for "0" signal: < 0.5 mA Short-circuit protection, automatic restart after a short- circuit
		Load types: ohmic, capacitive, inductive Output delay ³⁾ for "0" \rightarrow "1": typ. 150 µs / max. 400 µs (ohmic load) for "1" \rightarrow "0": typ. 75 µs / max. 100 µs (ohmic load)
		Switching frequency for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: max. 10 Hz Lamp load: max. 5 W

Type: Spring-loaded terminal 3 (Page 331)

¹⁾ DI: digital input; DI/DO: bidirectional digital input/output; M: electronics ground; M2: reference potential

²⁾ The rapid inputs can be used as probe inputs or as inputs for the external zero mark

³⁾ Data for: V_{cc} = 24 V; load 48 Ω ; high ("1") = 90% V_{out}; low ("0") = 10% V_{out}

The maximum cable length that can be connected is 30 m.

Note

Ensuring the function of digital inputs

An open input is interpreted as "low".

To enable the digital inputs (DI) to function, terminal M2 must be connected.

This is achieved by using one of the following measures:

- 1. Providing the ground reference of the digital inputs
- A jumper to terminal M Note: This removes isolation for these digital inputs.

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

3.4.2.5 X124 electronics power supply

	Terminal	Designation	Technical data			
	+	Electronics power supply	Voltage: 24 V DC (20.4 28.8 V)			
	+	Electronics power supply	Current consumption: max. 1.0 A			
	М	Electronics ground	(without DRIVE-CLiQ or digital outputs)			
	Μ	Electronics ground	Max. current via jumper in connector: 20 A (15 A ac- cording to UL/CSA)			
Type: Screw terminal 2 (Page 331)						

Table 3- 20 X124 electronics power supply

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through. The current consumption increases by the value for the DRIVE-CLiQ node and digital outputs.

Note

The terminal block must be screwed on tightly using a flat-bladed screwdriver.

Control Units and operating elements

3.4 Control Unit CU320-2 DP (PROFIBUS)

3.4.2.6 X126 PROFIBUS

The PROFIBUS interface can be operated isochronously.

Table 3- 21 X126 PROFIBUS interface

	Pin	Signal name	Meaning	Range
	1	-	Not assigned	
	2	M24_SERV	Teleservice supply, ground	0 V
	3	RxD / TxD–P	Receive/transmit data P (B)	RS485
	4	CNTR-P	Control signal	TTL
	5	DGND	PROFIBUS data reference potential	
	6	VP	Supply voltage plus	5 V ± 10%
	7	P24_SERV	Teleservice supply, + (24 V)	24 V (20.4 28.8 V)
	8	RxD / TxD–N	Receive/transmit data N (A)	RS485
	9	-	Not assigned	

Connector type: 9-pin Sub-D socket

A teleservice adapter can be connected to the PROFIBUS interface for remote diagnostics. The power supply for the teleservice (terminals 2 and 7) can have a load of up to 150 mA.

NOTICE

Damage to the Control Unit or other CAN bus nodes by connecting a CAN bus cable

If a CAN bus cable is connected to the X126 interface, this can damage the Control Unit or other CAN bus nodes.

• Do not connect any CAN bus cables to the X126 interface.

PROFIBUS connectors

The first and last nodes in a bus must contain terminating resistors. Otherwise, data transmission will not function correctly.

The bus terminating resistors are activated in the connector.

The cable shield must be connected at both ends and over a large surface area.

3.4.2.7 PROFIBUS address switch

On the CU320-2 DP, the PROFIBUS address is set as a hexadecimal value via two rotary coding switches. Values between $0_{dec}(00_{hex})$ and $127_{dec}(7F_{hex})$ can be set as the address. The upper rotary coding switch (H) is used to set the hexadecimal value for 16^1 and the lower rotary coding switch (L) is used to set the hexadecimal value for 16^0 .

Table 3-22 P	ROFIBUS address	switch
--------------	-----------------	--------

Rotary coding switch-	Significance	Examples		
es		21 _{dec}	35 _{dec}	126 _{dec}
		15 _{hex}	23 _{hex}	7E _{hex}
DP H H	16 ¹ = 16	1	2	7
	16 ⁰ = 1	5	3	E

Setting the PROFIBUS address

The factory setting for the rotary coding switches is 0_{dec} (00_{hex}).

There are two ways to set the PROFIBUS address:

- 1. Using a parameter
 - To set the bus address for a PROFIBUS node using STARTER, first set the rotary code switches to 0_{dec} (00_{hex}) and/or 127_{dec} (7F_{hex}).
 - Use the parameter to set the address to a value between 1 and 126.

Information can be taken from the following reference: Reference: /LH1/ SINAMICS S120/S150 List Manual

- 2. Using the PROFIBUS address switches on the Control Unit
 - The address is set manually to values between 1 and 126 using the rotary coding switches. In this case, the parameter is only used to read the address.

Note

The rotary coding switches used to set the PROFIBUS address are located beneath the cover.

More information

Additional information on setting the PROFIBUS address can be taken from the following references:

Reference: /FH1/ SINAMICS S120 Funktionshandbuch

3.4 Control Unit CU320-2 DP (PROFIBUS)

3.4.2.8 X127 LAN (Ethernet)

Note

Application

The X127 LAN interface is a commissioning and service interface. As a consequence, it must always be accessible to qualified personnel without any restrictions.

	Pin	Signal name	Technical data
	1	ТХР	Ethernet transmit data +
	2	TXN	Ethernet transmit data -
	3	RXP	Ethernet receive data +
	4	Reserved, do not use	
) 📙 📗 5		Reserved, do not use	
	6	RXN	Ethernet receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
Connector type:	RJ45 socke	et	

Table 3- 23 X127 LAN (Ethernet)

Note

The LAN (Ethernet) interface does not support Auto MDI(X). For this reason, only crossed cables may be used to connect devices.

For diagnostic purposes, the X127 LAN interface features a green and a yellow LED. These LEDs indicate the following status information:

Table 3- 24	LED statuses for the X127 LAN interface	

LED	Color	Status	Description	
Link port	-	Off	Missing or faulty link	
	Green	Continuous light	10 or 100 Mbit link available	
Activity port	-	Off	No activity	
	Yellow	Flashing light	Sending or receiving	

Networking

Networking via a local network is permissible.

Assuming that the network and connection are realized in the control cabinet, then for a closed-loop control cabinet, the security aspects are considered to have been complied with. For an X127 interface that is brought out of the control cabinet, additional security measures must be taken so that misuse through sabotage or unqualified data manipulation is ruled out (also see Chapter "Industrial Security (Page 24)").

3.4.2.9 X140 serial interface (RS232)

The X140 serial interface is located on the underside of the Control Unit. An external display and operator device for operator control/parameterization can be connected via this interface. It also supports the USS protocol.

	Pin	Signal name	Technical data
	1	Reserved, do not use	
	2	RxD	Receive data
	3	TxD	Transmit data
	4	Reserved, do not use	
	5	Ground	Ground reference
• •	6	Reserved, do not use	
	7	Reserved, do not use	
	8	Reserved, do not use	
	9	Reserved, do not use	
Connector type	e: 9-pin SUB	D connector	

Table 3- 25 X140 serial interface (RS232)

3.4.2.10 Measuring socket

Table 3-26 Measuring socket with mounted PC board connector

	Socket	Function	Technical data
M T0 T1 T2	М	Ground	Voltage: 0 5 V
(AAAA	ТО	Measuring terminal 0	Resolution: 8 bits
	T1	Measuring terminal 1	Load current: max. 3 mA Continuous short-circuit proof
	Τ2	Measuring terminal 2	The reference potential is terminal M
PC board connector, Phoenix Contact, type: ZEC 1.0/ 4-ST-3.5 C1 R1.4, Article number: 1893708			

Note

Cable cross section

The measuring terminals are only suitable for conductor cross-sections of 0.2 mm^2 up to 1 mm^2 .

Note

Use of the measuring socket

The measuring socket supports commissioning and diagnostic functions. It must not be connected for normal operation.

3.4 Control Unit CU320-2 DP (PROFIBUS)

3.4.2.11 Buttons

RESET button

Pressing the RESET button restarts the device, just the same as after connecting the electronics power supply (cold restart).

DIAG button

The DIAG pushbutton is reserved for service functions.

3.4.2.12 Slot for memory card



Figure 3-13 Slot for memory card

Note

Possible plant standstill by withdrawing or inserting the memory card in operation

If the memory card is withdrawn or inserted during operation, then data can be lost, possibly resulting in a plant standstill.

• Only withdraw and insert the memory card when the Control Unit is in a no-voltage condition.

Note

Insertion direction for the memory card

Only insert the memory card as shown in the photo above (arrow at top right).



NOTICE

Memory card damage caused by electric fields or electrostatic discharge

Electrical fields or electrostatic discharge may result in the memory card being damaged.

When removing and inserting the memory card, always observe the ESD regulations (Page 23).

Note

•

Possible data loss when returning the Control Unit with memory card

When returning a defective Control Unit for repair or testing, the data on the memory card (parameters, firmware, licenses, etc.) could be lost.

• Do not return the memory card as well, but keep it in a safe place so that it can be inserted in the replacement unit.

Note

Please note that only SIEMENS memory cards can be used to operate the Control Unit.

3.4 Control Unit CU320-2 DP (PROFIBUS)

3.4.3 Connection example

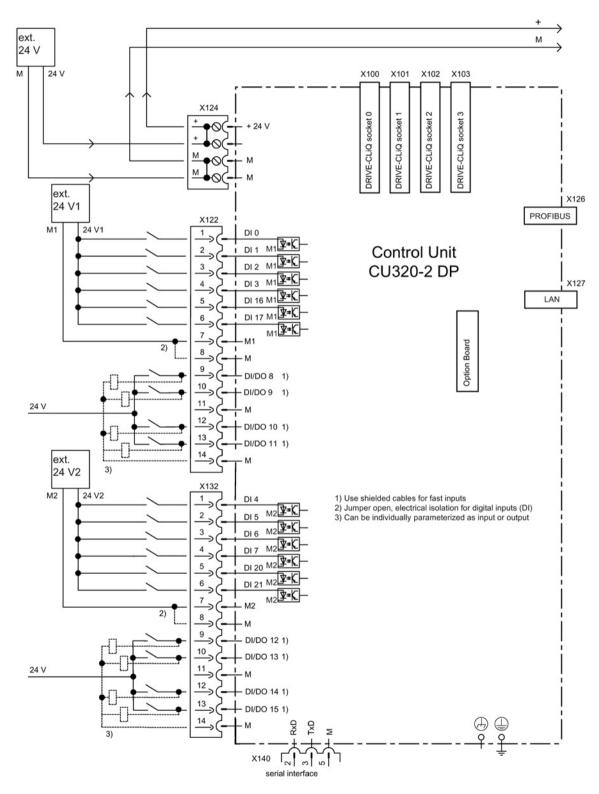


Figure 3-14 Connection example of CU320-2 DP

3.4.4 Meaning of the LEDs

3.4.4.1 Description of the LED statuses

The different states during power-up and in operation are indicated by the LEDs on the Control Unit.

- The duration of the individual statuses varies.
- If an error occurs, the booting procedure is terminated and the cause is indicated accordingly via the LEDs.
- Once the unit has successfully booted up, all the LEDs are switched off briefly.
- Once the unit has booted up, the LEDs are controlled via the loaded software.

3.4.4.2 Behavior of the LEDs during booting

	LED			Comment
RDY	СОМ	OPT		
Red	Orange	Orange	Reset	Hardware reset RDY LED lights up red, all other LEDs light up orange
Red	Red	Off	BIOS loaded	_
Red flash- ing light 2 Hz	Red	Off	BIOS error	Error occurred while loading the BIOS
Red flash- ing light 2 Hz	Red flash- ing light 2 Hz	Off	File error	 Memory card not inserted or defective Software on memory card not present or corrupted
Red	Orange Flashing light	Off	FW loading	RDY LED lights up red, COM LED flashes orange without fixed frequency
Red	Off	Off	FW loaded	_
Off	Red	Off	FW checked (no CRC error)	-
Red flash- ing light 0.5 Hz	Red flash- ing light 0.5 Hz	Off	FW checked (CRC error)	CRC invalid

LED		LED Status		Comment
RDY	СОМ	OPT		
Orange	Off	Off	Initializing	-
	Alternating		Running	See the table below

Control Units and operating elements

3.4 Control Unit CU320-2 DP (PROFIBUS)

3.4.4.3 Behavior of the LEDs in the operating state

LED	Color	Status	Description, cause	Remedy
RDY - (READY)		Off	Electronics power supply is missing or outside the permissible tolerance range.	Check power supply
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.	-
		Flashing light 0.5 Hz	Commissioning/reset	-
		Flashing light 2 Hz	Writing to the memory card	-
	Red	Flashing light 2 Hz	General error	Check parameterization / configuration data
	Red/ green	Flashing light 0.5 Hz	Control Unit is ready for operation. However, there are no software licenses.	Obtain licenses
	Orange	Flashing light 0.5 Hz	Updating the firmware of the DRIVE-CLiQ components	-
		Flashing light 2 Hz	DRIVE-CLiQ component firmware update com- plete. Wait for POWER ON for the components in question.	Turn POWER ON for the components in question
orange or red/		Flashing light 2 Hz	Component recognition via LED is activated. Comment : The two options depend on the status of the LED when activating.	-
COM PROFIdrive cyclic opera- tion	-	Off	Cyclic communication has not (yet) taken place. Comment: PROFIdrive is ready for communication if the Control Unit is ready (see LED RDY).	-
	Green	Continuous light	Cyclic communication is taking place.	_
		Flashing light 0.5 Hz	Full cyclic communication has not yet taken place. Possible causes:	-
			• The controller is not transferring any set- points.	
			• During isochronous operation, no global control (GC) or a faulty global control (GC) is transferred by the controller.	
	Red	Flashing light 0.5 Hz	PROFIBUS master is sending wrong parame- terization/configuration data	Adapt configuration between master/controller and CU
		Flashing light 2 Hz	Cyclic bus communication has been interrupted or could not be established	Remove fault

Table 3- 29 Control Unit CU320-2 DP – Description of the LEDs after booting


3.4 Control Unit CU320-2 DP (PROFIBUS)


LED	Color	Status	Description, cause	Remedy
OPT (OPTION)	-	Off	Electronics power supply is missing or outside the permissible tolerance range.	Check power supply and/or component
			Component is not ready.	
			Option board not installed or no associated drive object has been created.	
	Green	Continuous light	Option board is ready.	-
		Flashing light 0.5 Hz	Depends on the option board used ¹⁾ .	-
	Red	Continuous light	Depends on the option board used ¹⁾ .	-
		Flashing light 0.5 Hz	Depends on the option board used ¹⁾ .	-
		Flashing light 2 Hz	At least one fault is present in this component. Option board not ready (e.g. after switching on).	Remove the fault and acknowledge
RDY and COM	Red	Flashing light 2 Hz	Bus error - communication has been interrupt- ed	Remove fault
RDY and OPT	Orange	Flashing light 0.5 Hz	The firmware of the connected option board is being updated.	_

¹⁾ Possible individual responses of the OPT LED are described for the particular option board.

3.4 Control Unit CU320-2 DP (PROFIBUS)

3.4.5 Dimension drawing

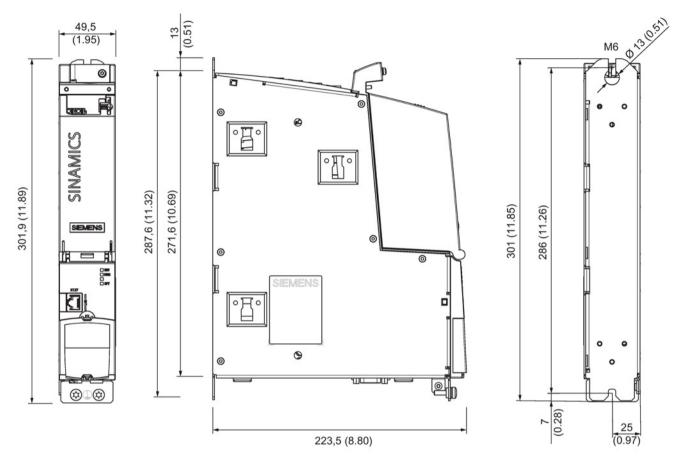

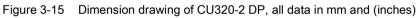

3.4.6 Technical data

Table 3- 30	Technical data
-------------	----------------

6SL3040-1MA00-0AA0	Unit	Value
Electronics power supply Voltage Current (without DRIVE-CLiQ and	V _{DC} A _{DC}	24 (20.4 28.8) 1.0
digital outputs) Power loss	w	24
Total maximum permissible output currents	A	5.5
Maximum DRIVE-CLiQ cable length	m	100
PE/ground connection	At the housing with M5 screw	

6SL3040-1MA00-0AA0	Unit		Value	
Response time		The response time of digital inputs/outputs depends on the evaluation (refer to the function diagram).		
	Additional information can be taken from the following references:			
		Reference: /LH1/ SINAMICS S120/S150 List Manual, Ch ter "Function diagrams/CU320-2 Input/Output terminals"		
Weight	kg		2.3	

3.5 Mounting Control Units

3.5.1 Mounting to a Line Module

Mounting a CU320-2 Control Unit directly on a Line Module, booksize or chassis format

You must attach three support brackets to a Line Module in order to mount a Control Unit directly on it. The support brackets are supplied in the Line Module accessories kit.

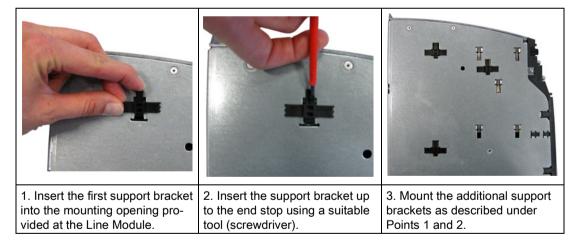


 Table 3- 31
 Mounting support brackets for a Control Unit onto a Line Module

Then mount the Control Unit onto the Line Module as shown below.


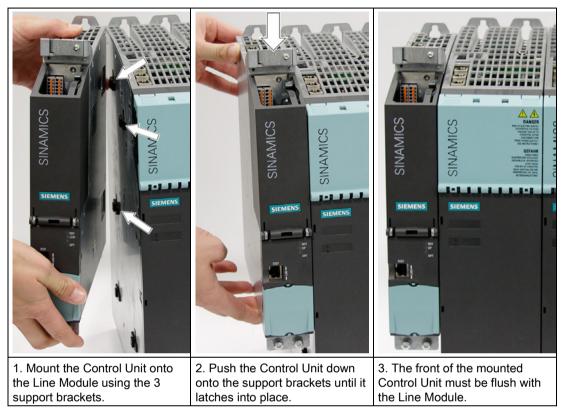


 Table 3- 32
 Installing the Control Unit on a Line Module using the CU320-2 DP as an example

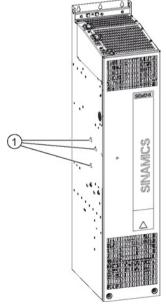

Opening on the Line Module Chassis for fastening the Control Unit
 Figure 3-16 Mounting a Control Unit on a Line Module, chassis format

3.5.2 Mounting on the mounting surface

Mounting a CU320-2 Control Unit directly onto a mounting surface

Mount the fixing lug of the Control Unit on the mounting surface using M6 screws.

Tightening torque: 6 Nm

Mounting a CU320-2 Control Unit to a mounting surface using spacers

To increase the mounting depth of the Control Unit to the 270 mm mounting depth of a Line Module in the booksize format, mount spacers (2 pieces: 6SL3064-1BB00-0AA0) as shown below to the Control Unit.

Tools required:

• Torx screwdriver T10 for the screws (M3) of the spacer

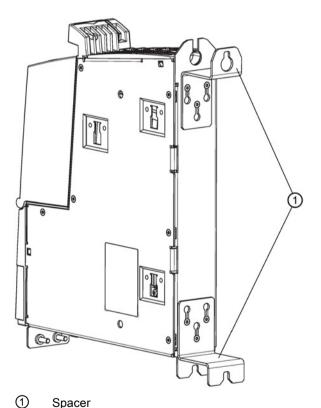


Figure 3-17 CU320-2 with spacers for mounting on a mounting surface

3.5.3 Opening and removing the cover

Table 3- 33Opening and lifting the cover using the CU320-2 DP as an example


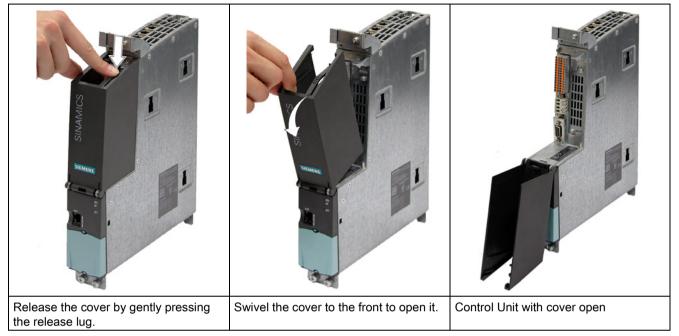


Table 3- 34 Removing the cover using a CU320-2 DP as an example

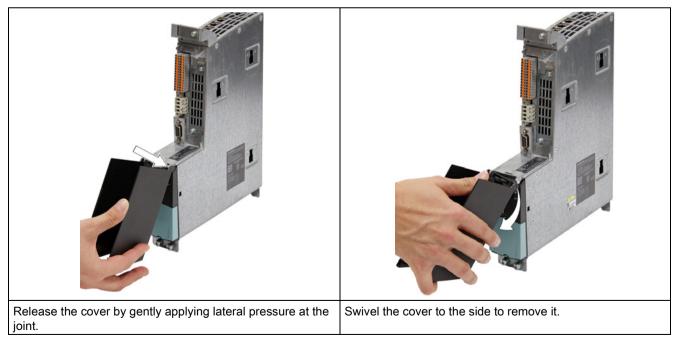

3.6 Basic Operator Panel BOP20

3.6.1 Description

The Basic Operator Panel BOP20 contains 6 keys and a backlit display unit. The BOP20 can be plugged onto a SINAMICS Control Unit and operated.

The following functions are possible with the BOP:

- Input of parameters and activation of functions
- Display of operating modes, parameters, alarms and faults

3.6.2 Interface description



Figure 3-18 Basic Operator Panel BOP20

3.6 Basic Operator Panel BOP20

Overview of displays and keys

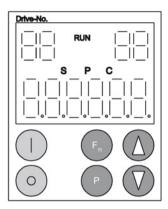


Figure 3-19 Overview of displays and keys

Table 3- 35	Displays
	Diopiayo

Display	Meaning
Top left 2 positions	The active drive object of the BOP is displayed here. The displays and key operations always refer to this drive object.
RUN	Is lit (bright) if the displayed drive is in the RUN state (in operation).
Top right	The following is displayed in this field:
2 positions	 More than 6 digits: Characters that are present but cannot be seen (e.g. "r2" → 2 characters to the right are invisible, "L1" → 1 character to the left is invisible)
	Faults: Selects/displays other drives with faults
	Designation of BICO inputs (bi, ci)
	Designation of BICO outputs (bo, co)
	Source object of a BICO interconnection to a drive object other than the active one.
S	Is (bright) if at least one parameter was changed and the value was not transferred into the non-volatile memory.
Р	Is lit (bright) if, for a parameter, the value only becomes effective after pressing the P key.
С	Is light (bright) if at least one parameter was changed and the calculation for con- sistent data management has still not been initiated.
Below, 6 digit	Displays, e.g. parameters, indices, faults and alarms.

BOP20 keyboard

Key	Name	Meaning
	ON	Powering-up the drives for which the command "ON/OFF1", "OFF2" or "OFF3" should come from the BOP.
\bigcirc	OFF	Power-down the drives for which the "ON/OFF1," "OFF2," or "OFF3" com- mands should come from the BOP.
		Note:
		The effectiveness of these keys can be defined using the appropriate BICO parameterization (e.g. using these keys, it is possible to simultaneously control all of the axes that have been configured.)
		The structure of the BOP control word corresponds to the structure of the PROFIBUS control word.
	Functions	The meaning of these keys depends on the actual display.
FN		Note:
		The effectiveness of this key to acknowledge faults can be defined using the appropriate BICO parameterization.
Р	Parameter	The meaning of these keys depends on the actual display.
Δ	Raise	The keys are dependent on the actual display and are used to raise or lower values.
$\mathbf{\nabla}$	Lower	

Table 3-36 Assignment of the BOP20 keyboard

Display and operator controls of the BOP20

Additional information on the display and operating elements of the BOP20 can be taken from the following reference:

Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER

3.6 Basic Operator Panel BOP20

3.6.3 Mounting at the Control Unit

NOTICE

Damage to the interface for the BOP20 at the Control Unit through tilting

If the BOP20 is skewed when inserting or withdrawing it, this can damage the interface for the BOP20.

• Make sure that you insert and withdraw the BOP20 straight into/out of the Control Unit and that it is not tilted up or down.

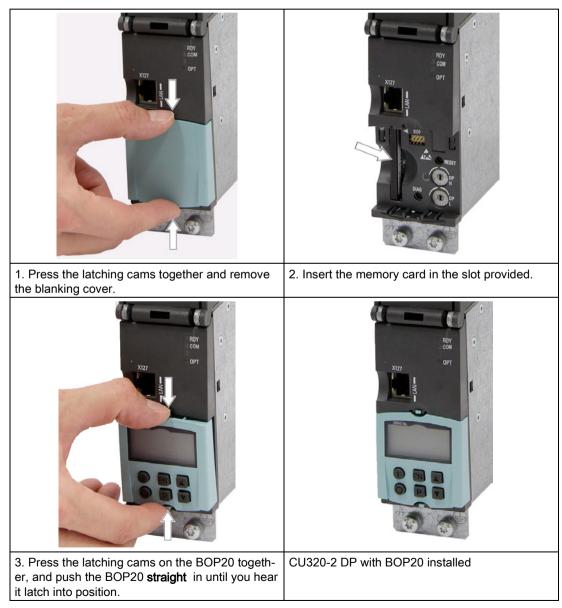


 Table 3- 37
 Mounting a Basic Operator Panel BOP20 using the CU320-2 DP as an example

3.6.4 Removal

Please note the following information when removing the BOP20 from the Control Unit:

- 1. Simultaneously press the latching cams on the BOP20.
- 2. Always withdraw the BOP20 straight out (without skewing it). Never withdraw the BOP20 by pulling it at its lower edge, as this could damage the interface at the rear.



Figure 3-20 Incorrect removal of the BOP20 from a CU320-2 DP (example)

Control Units and operating elements

3.6 Basic Operator Panel BOP20

Option boards

4.1 Safety instructions for option boards

Danger to life if the fundamental safety instructions and remaining risks are not carefully observed

If the fundamental safety instructions and remaining risks in Chapter 1 (Page 19) are not observed, accidents involving severe injuries or death may occur.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.

NOTICE

Damage or malfunctions to the Option Board by inserting and withdrawing in operation

Withdrawing and inserting Option Boards during operation can damage them or cause the Option Boards to malfunction.

• Only withdraw or insert Option Boards when the Control Unit is in a current-free state.

4.2 CAN Communication Board CBC10

4.2.1 Description

The Communication Board CAN CBC10 is a communication module for linking to the CAN bus. The Communication Board is inserted into the option slot on a Control Unit.

Were precise information on the function of the CBC10 can be taken from the following reference:

Reference: /IH2/ SINAMICS S120 CANopen Commissioning Manual

Option boards

4.2 CAN Communication Board CBC10

4.2.2 Interface description

4.2.2.1 Overview

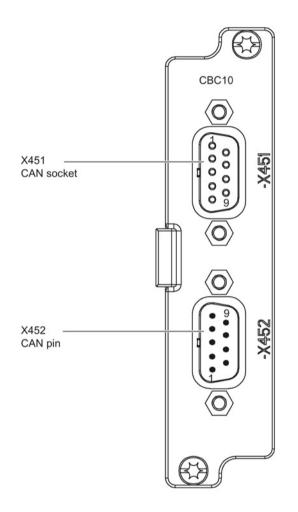


Figure 4-1 Interface overview of the CBC10

4.2.2.2 X451 CAN bus interface

	Pin	Designation	Technical data
	1	Reserved, do not use	
\bigcirc	2	CAN_L	CAN signal (dominant low)
\bigcirc	3	CAN_GND	CAN ground
	4	Reserved, do not use	
201	5	CAN_SHLD	Optional shield
<u> </u>	6	GND	CAN ground
50	7	CAN_H	CAN signal
ဒိုဂ္ခူ	8	Reserved, do not use	
	9	Reserved, do not use	
\bigcirc			
	SUB D socke		

Table 4-1 X451: CAN bus interface

NOTICE

Destruction of the CAN bus interface as a result of an incorrect connector

If PROFIBUS connectors are connected to CAN bus interfaces during operation, this may lead to the CAN bus interfaces being destroyed.

• Do not connect PROFIBUS connectors to CAN bus interfaces.

4.2.2.3 X452 CAN bus interface

Table 4- 2 X452: CAN bus interface	Table 4- 2	X452: CAN bus interface
------------------------------------	------------	-------------------------

	Pin	Designation	Technical data
	1	Reserved, do not use	
	2	CAN_L	CAN signal (dominant low)
	3	CAN_GND	CAN ground
\sim	4	Reserved, do not use	
	5	CAN_SHLD	Optional shield
	6	GND	CAN ground
	7	CAN_H	CAN signal
	8	Reserved, do not use	
	9	Reserved, do not use	
Type: 9-pin S	UB-D male		·

Option boards

4.2 CAN Communication Board CBC10

4.2.2.4 2-pin SMD DIL switch



① Switch 1

② Switch 2



Table 4- 3	2-pin SMD DIL switch
------------	----------------------

ID on the component	Switch	Function	Switch position		Default
	2	Bus terminating	OFF	Inactive	OFF
		resistor 120 Ω	ON	Active	
	1	Operation with/without	OFF	Ungrounded oper- ation	OFF
	7	ground	ON	Operation with ground	

4.2.3 Meaning of the OPT LED on the Control Unit


LED	Color	Status	Description, cause ³⁾	Remedy
OPT at the Con-	-	Off	Electronics power supply is missing or outside the per- missible tolerance range.	-
trol Unit			Communication Board either defective or not inserted.	
	Green	Continuous light	OPERATIONAL	-
		2.5 Hz flash-	PREOPERATIONAL	-
		ing light	No PDO communication possible	
		Single flash ¹⁾	STOPPED	-
			Only NMT communication possible	
	Red	Continuous	BUS OFF	Check baud rate
		light		Check cabling
		Single flash1)	ERROR PASSIVE MODE	Check baud rate
			The error counter for "error passive" has reached the value 127. After the SINAMICS drive system had pow- ered up, no additional active CAN components were connected to the bus	Check cabling
		Double flash ²⁾	Error Control Event, a Life-Guard Event has occurred	Check connection to CANopen master

Table 4-4 Meaning of the OPT LED on the Communication Board CAN CBC10

¹⁾ Single flash: The OPT LED OPT goes through the following states "on" (200 ms) and "off" (1000 ms) in one cycle.

²⁾ Double flash: The OPT LED OPT goes through the following states "on" (200 ms) – "off" (200 ms) – "on" (200 ms) – "off" (1000 ms) in one cycle.

³⁾ You can find more detailed information on the function of the CBC10 in the following reference: /IH2/ SINAMICS S120 CANopen Commissioning Manual.

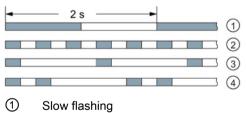

- 2 Rapid flashing
- ③ Single flash
- ④ Double flash

Figure 4-3 OPT LED flash cycles


Option boards

4.2 CAN Communication Board CBC10

4.2.4 Installation

- 1. Release the appropriate screws to remove the cover plate from the option slot.
- 2. Insert the module into the option slot of the Control Unit and fix it in place using the screws.

Screws: M3 Tool: Torx T10 screwdriver Tightening torque: 0.8 Nm

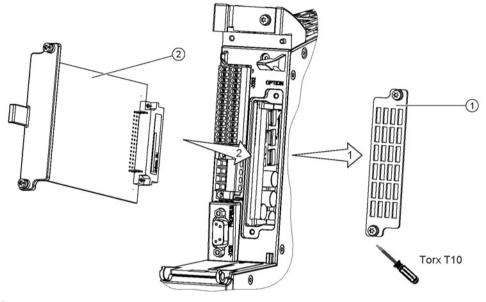

- 1 Protective cover
- ② Option Board

Figure 4-4 Installing an Option Board using a CU320-2 DP as an example

4.2.5 Technical data

Table 4-5 Technical data

CAN CBC10 Communication Board 6SL3055-0AA00-2CA.	Unit	Value
Max. current requirement (at 24 V DC)	ADC	0.1
Power loss	W	<10
Weight	kg	0.1

4.3 Communication Board Ethernet CBE20

4.3.1 Description

The SINAMICS S120 system can be connected to PROFINET using the Communication Board Ethernet CBE20 interface board. The module supports PROFINET IO with Isochronous Realtime Ethernet (IRT) and PROFINET IO with RT.

The Communication Board has an Ethernet interface with 4 ports for communication. It is inserted into the option slot on a Control Unit.

Note

Only one communication interface can be used in isochronous operation when operating the Communication Board CBE20 in a Control Unit CU320-2.

- For the CU320-2 DP, this is either the DP interface of the Control Unit, or the PN interfaces of the CBE20.
- For the CU320-2 PN, either the internal PN interfaces or the external PN interfaces of the CBE20 are used in isochronous operation.

4.3.2 Interface description

4.3.2.1 Overview

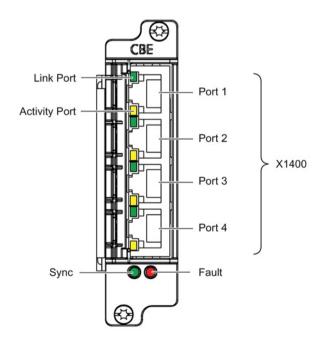


Figure 4-5 Interface overview CBE20

4.3 Communication Board Ethernet CBE20

4.3.2.2 X1400 Ethernet interface

Table 4- 6 X14	00: Ethernet, p	ports 1-4
----------------	-----------------	-----------

	Pin	Signal name	Technical data
	1	RXP	Receive data +
	2	RXN	Receive data -
854	3	ТХР	Transmit data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	TXN	Transmit data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	Screened back- shell	M_EXT	Screen, permanently con- nected
Connector type	RJ45 socket		

For diagnostic purposes, the ports have one green and one yellow LED (refer to Meaning of the LEDs (Page 100) for descriptions)

Cable type:	Industrial Ethernet
Max. cable length:	100 m

4.3.3 Meaning of the LEDs

Meaning of the LEDs on the CBE20 Communication Board Ethernet

Table 4-7 Meaning of the LEDs at ports 1 to 4 of the X1400 interface

LED	Color	Status	Description
Link port	-	Off	The electronics power supply is missing or outside the permissible tolerance range (link missing or defective).
	Green	Continu- ous light	A different device is connected to port x and a physical connection exists.
Activity port	-	Off	The electronics power supply is missing or outside the permissible tolerance range (no activity).
	Yellow	Flashing light	Data is being received or sent at port x.

LED Color Status Description Fault Off If the link port LED is green: The CBE20 is operating normally, data is being exchanged with the configured IO Controller. Red Flashing • The response monitoring interval has elapsed. light Communications is interrupted. • The IP address is incorrect. • Incorrect or no configuration. Incorrect parameter settings. • Incorrect or missing device name. IO Controller not connected/switched off, although an Ethernet connection has • been established. Other CBE20 faults . Continu-CBE20 fault error ous light • No physical connection to a subnet/switch. Incorrect transmission rate ٠ Full duplex transmission is not activated. • Sync Off If the link port LED is green: _ The Control Unit task system is not synchronized with the IRT clock. An internal substitute clock is generated. Green Flashing The Control Unit task system has synchronized with the IRT clock and data is being exchanged. light Continu-The Task system and the MC-PLL have synchronized with the IRT clock. ous light

Table 4- 8	Meaning of the Sync and Fault LEDs on the CBE20

Option boards

4.3 Communication Board Ethernet CBE20

LED	Color	Status	Description, cause	Remedy
OPT	-	OFF	The electronics power supply is missing or outside the per- missible tolerance range.	-
			CBE20 either defective or not inserted.	
	Green	Continu- ous light	CBE20 is ready and cyclic communication is taking place.	-
		Flashing light	CBE20 is ready but cyclic communication is not running. Possible causes:	-
		0.5 Hz	Communication is being established.	
			• At least one fault is present.	
	Red	Continu- ous light	Cyclic communication via PROFINET has not yet been established. However, non-cyclic communications are pos- sible. SINAMICS is waiting for a parameteriza- tion/configuration telegram.	-
		Flashing light 0.5 Hz	The firmware update into the CBE20 has been completed with an error. Possible causes:	-
			• The memory card for the control unit is defective.	
			• The CBE20 is defective. In this state CBE20 cannot be used.	
		Flashing light 2 Hz	There is a communications error between the Control Unit and the CBE20. Possible causes:	Correctly insert the board, if required, replace.
			The CBE20 was withdrawn after booting.	
			• The CBE20 is defective.	
	Orange	Flashing light 0.5 Hz	Firmware of the CBE20 currently being updated.	-


Table 4-9 Meaning of the OPT LED on the Control Unit

4.3.4 Installation

- 1. Release the appropriate screws to remove the cover plate from the option slot.
- 2. Insert the module into the option slot of the Control Unit and fix it in place using the screws.

Screws: M3

Tool: Torx T10 screwdriver **Tightening torque**: 0.8 Nm

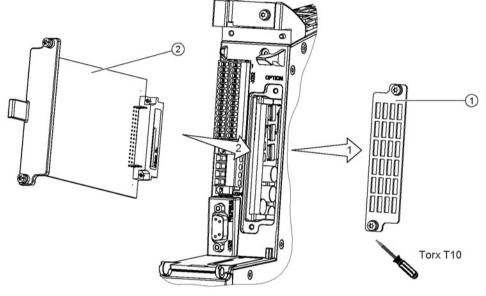

- 1 Protective cover
- 2 Option Board

Figure 4-6 Installing the Option Board using a CU320-2 DP as an example

4.3.5 Technical data

Table 4-10 Technical data

Communication Board CBE20 6SL3055-0AA00-2EB.	Unit	Value
Max. current requirements (at 24 V DC)	ADC	0.1
Power loss	W	2.4
Weight	kg	<0.1

4.4 Terminal Board TB30

4.4.1 Description

The TB30 Terminal Board is a terminal expansion module that is inserted in the option slot of the Control Unit.

The TB30 Terminal Board has the following terminals:

Туре	Quantity
Digital inputs	4
Digital outputs	4
Analog inputs	2
Analog outputs	2

4.4.2 Interface description

4.4.2.1 Overview

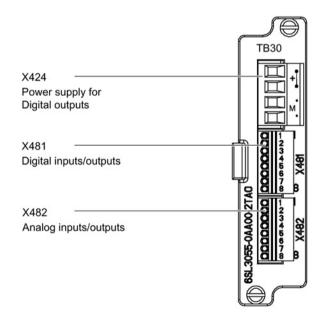


Figure 4-7 Interface overview of the TB30

4.4.2.2 X424 power supply, digital outputs

Table 4- 12	X424: Power supply
-------------	--------------------

	Terminal	Designation	Technical data		
+ ! ⊾⊔⊔⊔	+	Power supply	Voltage: 24 V DC (20.4 28.8 V)		
	+	Power supply	Current consumption: Max. 4 A		
	М	Ground	(per digital output max. 0.5 A)		
	М	Ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)		
Type: Screw terminal 2 (Page 331)					

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

This power supply is required for the digital outputs only. The electronics power supply and the power supply for the analog inputs/outputs are taken from the option slot of the Control Unit.

Note

The power supply of the digital outputs and the electronics power supply of the Control Unit are isolated.

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

4.4 Terminal Board TB30

4.4.2.3 X481 digital inputs/outputs

Table 4- 13	X481: Digital inputs/outputs
-------------	------------------------------

	Terminal	Designation ¹⁾	Technical data	
	1	DI 0	Voltage: -3 30 V DC	
	2	DI 1	Electrical isolation: Yes	
	3	DI 2	Reference potential: X424.M	
	4	DI 3	Input characteristic acc. to IEC 61131-2, type 1	
			Input voltage (including ripple) "1" signal: 15 … 30 V "0" signal: -3 … +5 V	
			Input current at 24 V DC: type. 6 mA for "1" signal: > 0.5 mA	
			Input delay for "0" → "1": typ. 20 μs for "1" → "0": typ. 100 μs	
	5	DO 0	Voltage: 24 V DC	
	6	DO 1	Electrical isolation: Yes	
	7	DO 2	Reference potential: X424.M	
	8	DO 3	Output voltage "1" signal, with load: > X424.+ -2 V	
			Output current for each output: ≤ 0.5 A Sum of all four outputs: ≤ 2 A Residual current for "0" signal: < 0.5 mA Short-circuit protection, automatic restart after a short- circuit	
			Load types: ohmic, capacitive, inductive Output delay ³⁾ for "0" \rightarrow "1": typ. 150 µs / max. 500 µs (ohmic load) for "1" \rightarrow "0": typ. 50 µs (ohmic load)	
			Switching frequency for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: max. 10 Hz	
			Lamp load: max. 5 W	
Type: Spring-loaded terminal 1 (Page 331)				

¹⁾ DI: digital input, DO: digital output

Note

An open input is interpreted as "low".

The power supply and the digital inputs/outputs are isolated with respect to the Control Unit.

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

4.4.2.4 X482 analog inputs/outputs

Table 4- 14	X482: Analog inputs/outputs
-------------	-----------------------------

	Terminal	Designation ¹⁾	Technical data
	1	AI 0+	Analog inputs (AI)
	2	AI 0-	Voltage : -10 … +10 V; R _i : 65 kΩ
	3	AI 1+	Common mode range: ±30 V
	4	AI 1-	Resolution: 13 bits + sign
	5	AO 0+	Analog outputs (AO)
	6	AO 0-	Voltage range : -10 +10 V
	7	AO 1+	Load current: max3 +3 mA
	8	AO 1-	Resolution : 11 bit + signed Continuous short-circuit proof
Type: Spring-load	ed terminal 1 (F	Page 331)	ł

¹⁾ AI: analog input, AO: analog output

Note

Permissible voltage values

In order to avoid incorrect results of the analog-digital conversion, the analog differential voltage signals can have a maximum offset voltage of ±30 V with respect to ground potential.

Note

An open input is interpreted as approximately "0 V".

The power supply of the analog inputs/outputs is taken from the option slot of the Control Unit and not from X424.

The shield is connected to the Control Unit (see Shield support (Page 110)).

Connecting the analog inputs

Additional information about the analog inputs can be taken from the following reference: Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER

4.4.3 Meaning of the OPT LED on the Control Unit

With inserted TB30 option board, the OPT LED has the standard meanings as described in the relevant chapters for the CU320-2 PN (PROFINET) (Page 60) or CU320-2 DP (PROFIBUS) (Page 80)Control Units.

4.4.4 Connection example


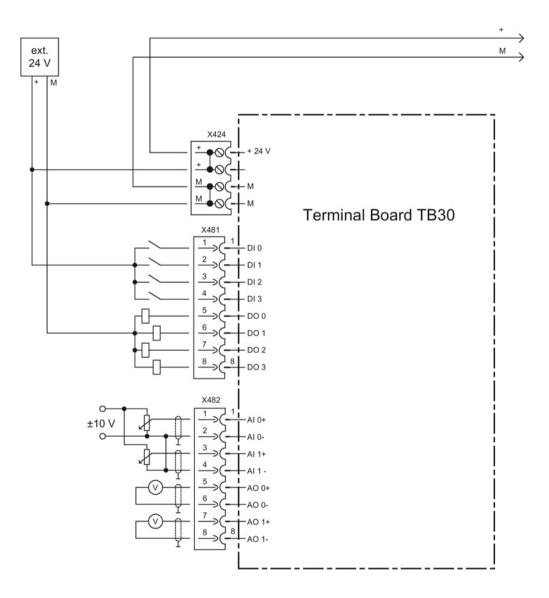


Figure 4-8 Example connection of TB30

4.4.5 Installation

- 1. Release the screws and remove the protective cover from the Control Unit.
- 2. Place the Option Board into the slot on the Control Unit and fix it in place using the screws.

Screws: M3 Tool: Torx T10 screwdriver Tightening torque: 0.8 Nm

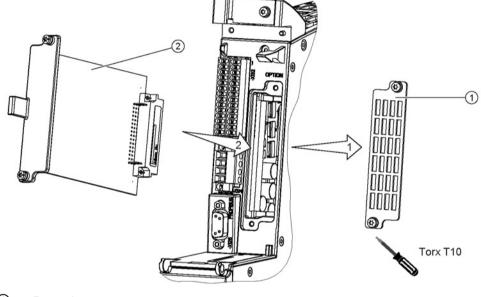

- 1 Protective cover
- ② Option Board

Figure 4-9 Installing an Option Board using a CU320-2 DP as an example

Option boards

4.4 Terminal Board TB30

4.4.6 Shield support

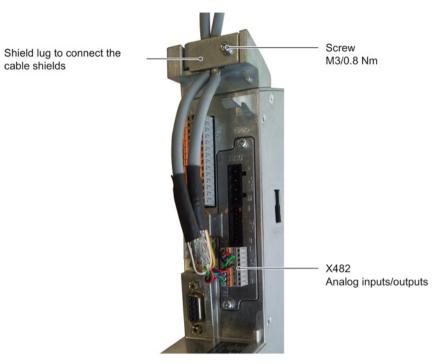


Figure 4-10 Shield support for TB30 on the CU320-2 DP

The permissible bending radii for the cables must not be exceeded when the cables are being installed.

4.4.7 Technical data

Table 4- 15 T	echnical data
---------------	---------------

Terminal Board TB30	Unit	Value	
3SL3055-0AA00-2TA.			
Electronics power supply			
Voltage Current via the option slot of the CU (without digital outputs) Power loss Max. cable length	V _{DC} A _{DC} W	24 (20.4 28.8) 0.05 <3 30	
Response time	The response time of the digital input/outputs and the ana- log inputs/outputs depends on the evaluation on the Control Unit (see function diagram).		
	Additional information can be taken from the following ref- erences: Reference: /LH1/ SINAMICS S120/S150 List Manual, Chapter "Function diagrams/Terminal Board TB30"		
Weight	kg	0.1	

Terminal Modules

5.1 Safety instructions for Terminal Modules

Danger to life if the fundamental safety instructions and remaining risks are not carefully observed

If the fundamental safety instructions and remaining risks in Chapter 1 (Page 19) are not observed, accidents involving severe injuries or death may occur.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.

Risk of fire through overheating if there are insufficient ventilation clearances

Insufficient ventilation clearances lead to overheating with associated risk to persons as a result of smoke and fire. This can also result in more downtimes and reduced service lives of the Terminal Module.

• For this reason, it is imperative that you maintain the 50 mm clearances above and below the Terminal Module.

NOTICE

Device failure as a result of unshielded or incorrectly routed cables to temperature sensors

Unshielded or incorrectly routed cables to temperature sensors can result in interference being coupled into the signal processing electronics from the power side. This can result in significant disturbance of all signals (fault messages) up to failure of individual components (destruction of the devices).

- Only use shielded cables as temperature sensor cables.
- If temperature sensor cables are routed together with the motor cable, use separately shielded cables twisted in pairs.
- Connect the cable shield at both ends to ground potential through a large surface area.
- Recommendation: Use suitable Motion Connect cables.

5.2 Terminal Module TM15

NOTICE

Damage through use of incorrect DRIVE-CLiQ cables

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

 Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

Note

Malfunctions due to polluted DRIVE-CLiQ interfaces

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.

Note

Function equipotential bonding for distributed DRIVE-CLiQ nodes

Integrate all of the components that are connected via DRIVE-CLiQ in the functional equipotential bonding concept. The connection should be preferably established by mounting on metallic bare machine and plant components that are connected with one another using an equipotential bonding conductor.

Alternatively, you can establish equipotential bonding using a conductor (min. 6 mm²), which as far as possible, is routed in parallel to the DRIVE-CLiQ cable. All distributed DRIVE-CLiQ nodes are involved, for example DME20, SME20, SME25, SME120, SME125 etc.

5.2 Terminal Module TM15

5.2.1 Description


The Terminal Module TM15 is a terminal expansion for snapping on to an EN 60715 DIN rail. The TM15 can be used to increase the number of available digital inputs/outputs within a drive system.


Table 5-1 Interface overview of the TM1

Туре	Quantity
DRIVE-CLiQ interfaces	2
Bidirectional digital inputs/outputs	24
	(isolation in 3 groups each with 8 DI/DO)

5.2.2 Interface description

5.2.2.1 Overview

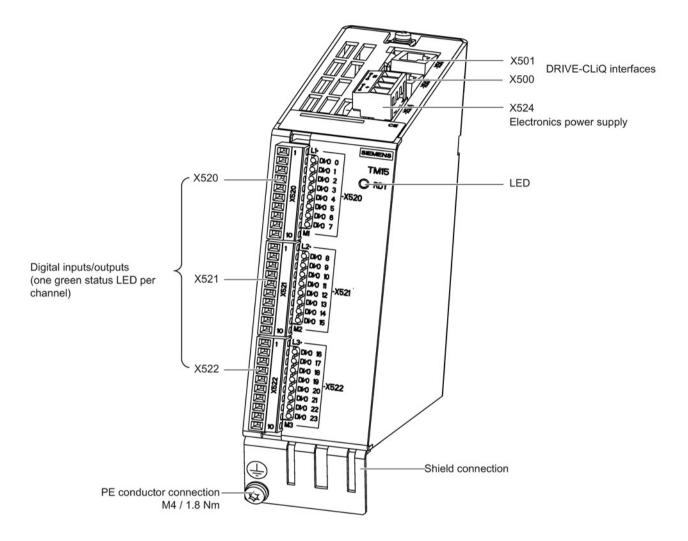

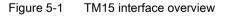

5.2 Terminal Module TM15

5.2.2.2 X500/X501 DRIVE-CLiQ interfaces

Pin	Signal name	Technical data
1	ТХР	Transmit data +
2	TXN	Transmit data -
3	RXP	Receive data +
4	Reserved, do not use	
5	Reserved, do not use	
6	RXN	Receive data -
7	Reserved, do not use	
8	Reserved, do not use	
А	+ (24 V)	Power supply
В	M (0 V)	Electronics ground

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery. Blanking covers (50 x) Article No.: 6SL3066-4CA00-0AA0

Note

The maximum DRIVE-CLiQ cable length is 100 m.

5.2.2.3 X520 bidirectional digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	L1+	See Chapter, Technical data
	2	DI/DO 0	(Page 123).
	3	DI/DO 1	
	4	DI/DO 2	
\Rightarrow	5	DI/DO 3	
X520	6	DI/DO 4	
	7	DI/DO 5	
⇒l×l	8	DI/DO 6	
\Rightarrow	9	DI/DO 7	
\Rightarrow	10	M1 (GND)	
10			

Table 5-3 X520: Digital inputs/outputs

 L1+: A 24 V DC power supply for DI/DO 0 to 7 (first potential group) must always be connected if at least one DI/DO of the potential group is used as output.
 M1: A ground reference for DI/DO 0 to 7 (first potential group) must always be connected if at least one DI/DO of the potential group is used as either input or output.
 DI/DO: bidirectional digital input/output

5.2.2.4 X521 bidirectional digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	L2+	See Chapter, Technical data
	2	DI/DO 8	(Page 123).
	3	DI/DO 9	
	4	DI/DO 10	
	5	DI/DO 11	
X521	6	DI/DO 12	
₩×	7	DI/DO 13	
	8	DI/DO 14	
	9	DI/DO 15	
	10	M2 (GND)	
Type: Screw terminal 1 (Page 331)			

Table 5-4 X521: Digital inputs/outputs

¹⁾ L2+: A 24 V DC power supply for DI/DO 8 to 15 (second potential group) must always be connected if at least one DI/DO of the potential group is used as output.

M2: A ground reference for DI/DO 8 to 15 (second potential group) must always be connected if at least one DI/DO of the potential group is used as either input or output.

DI/DO: bidirectional digital input/output

5.2 Terminal Module TM15

5.2.2.5 X522 bidirectional digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	L3+	See Chapter, Technical data
	2	DI/DO 16	(Page 123).
	3	DI/DO 17	
	4	DI/DO 18	
\Rightarrow	5	DI/DO 19	
X522	6	DI/DO 20	
₩×	7	DI/DO 21	
	8	DI/DO 22	
\models	9	DI/DO 23	
	10	M3 (GND)	
Type: Screw t	erminal 1 (Page 33	1)	

Table 5- 5X522: Digital inputs/outputs

¹⁾ L3+: A 24 V DC power supply for DI/DO 16 to 23 (third potential group) must always be connected if at least one DI/DO of the potential group is used as output.

M3: A ground reference for DI/DO 16 to 23 (third potential group) must always be connected if at least one DI/DO of the potential group is used as either input or output. DI/DO: Bidirectional digital input/output

5.2.2.6 X524 Electronics power supply

Table 5- 6	X524: Electronics power supply
------------	--------------------------------

	Terminal	Designation	Technical data
□ +] ≤]	+	Electronics power supply	Voltage: 24 V DC (20.4 28.8 V)
	+	Electronics power supply	Current consumption: max. 0.6 A ¹⁾
	М	Electronics ground	Max. current through the jumper in the
	М	Electronics ground	connector: 20 A (15 A according to UL/CSA)
Type: Screw terminal 2 (Page 331)			

Type: Screw terminal 2 (Page 331)

¹⁾ Including the current consumption for the digital outputs

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ participants. The digital outputs are supplied via terminals X520, X521 and X522.



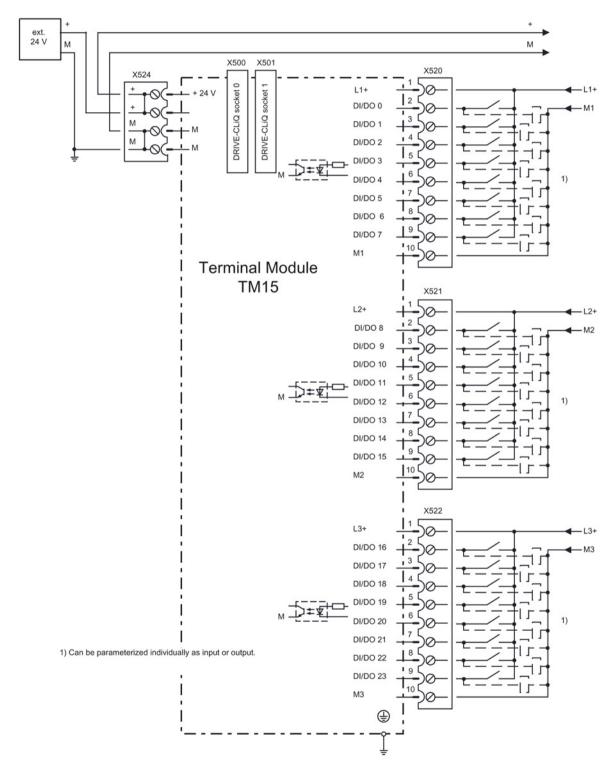


Figure 5-2 Example connection of TM15

Control Units and additional system components Manual, (GH1), 07/2016, 6SL3097-4AH00-0BP6 5.2 Terminal Module TM15

5.2.4 Meaning of the LED

LED	Color	Status	Description, cause	Remedy
READY	-	Off	The electronics power supply is missing or outside the per- missible tolerance range.	-
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	-
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	-
	Red	Continuous light	This component has at least one fault. Note: The LED is activated irrespective of whether the correspond- ing messages have been reconfigured.	Remove and acknowledge the fault.
	Green/ red	Flashing light 0.5 Hz	Firmware is being downloaded.	-
		Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON.
	Green/ orange or Red/ orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	-

Table 5-7 Meanings of the LEDs on the Terminal Module TM15

¹⁾ The parameters for activating component recognition using LEDs can be taken from the following reference: Reference: /LH1/ SINAMICS S120/S150 List Manual

Cause and rectification of faults

Additional information about the cause and resolving faults can be taken from the following references:

- Reference:/LH1/SINAMICS S120/S150 List Manual
- Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER

5.2.5 Dimension drawing

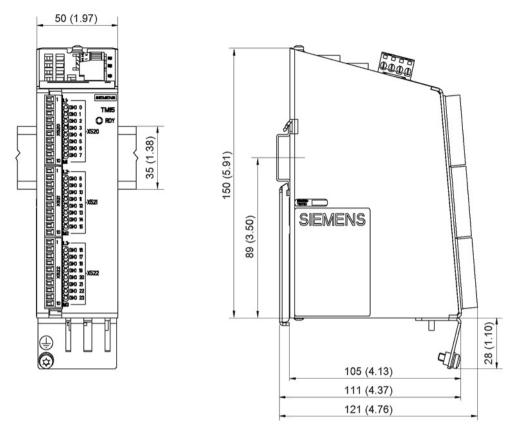


Figure 5-3 Dimension drawing of Terminal Module TM15, all data in mm and (inches)

5.2 Terminal Module TM15


5.2.6 Mounting

Mounting

- 1. Tilt the component backwards slightly and attach it to the mounting rail using the hooks.
- 2. Swivel the component onto the mounting rail until you hear the mounting slide at the rear latch into position.
- 3. Slide the component along the mounting rail to either the left or the right into its final position.

Removal

- 1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
- 2. Swivel the component to the front and withdraw it upwards from the mounting rail.

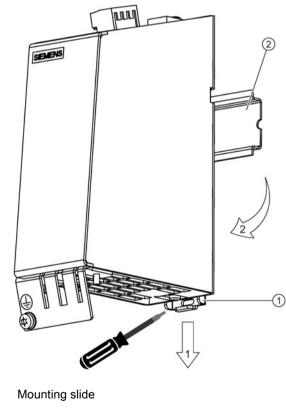

② Mounting rail

1

Figure 5-4 Removing from a mounting rail

5.2.7 Protective conductor connection and shield support

It is always advisable to shield the digital input/output wiring.

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.



- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBUE CO1, Article number: 1753311001
- Figure 5-5 Protective conductor connection and shield support

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

The TM15 housing is connected to the ground terminal of the module supply (terminal X524). If the ground terminal is actually grounded, then the housing is also grounded. An additional ground connection using the M4 screw is especially necessary if high potential bonding currents can flow (e.g. through the cable shield).


5.2 Terminal Module TM15

5.2.8 Connector coding

A series of coding elements ("coding sliders") are supplied with each Terminal Module TM15.

Connector coding

- 1. Insert at least one coding slider at the required position.
- 2. Remove the associated coding lug at the connector.

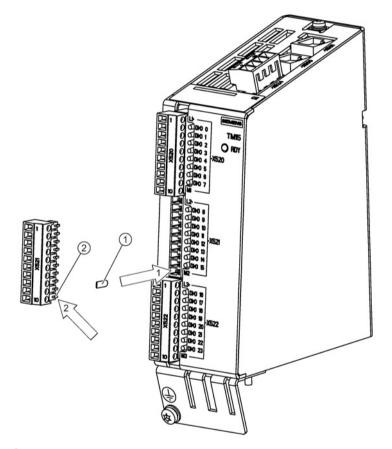

- ① Coding slider
- 2 Coding lug at the connector to be removed
- Figure 5-6 Connector coding using the example of interface X521

To avoid wiring errors, unique coding patterns must be defined for the connectors X520, X521 and X522.

Possible patterns:

- 3 connectors on one component are encoded differently (i.e. X520, X521 and X522).
- Different component types are encoded differently.
- Identical components on the same machine are encoded differently, e.g. several TM15type components.

5.2.9 Technical data

Table 5-8 Technical data

6SL3055-0AA00-3FAx	Unit	Value
Electronics power supply Voltage Current (without DRIVE-CLiQ or digital outputs)	V _{DC} A _{DC}	24 (20.4 28.8) 0.15
Power loss	W	< 3
Max. cable length	m	30
I/O		
Digital inputs/outputs	Can either be para	ameterized as DI or DO
Number of digital inputs/outputs	24	
Electrical isolation	Yes, in groups of 8	3
Max. cable length	m	30
Digital inputs		
Voltage	V _{DC}	-30 +30
Low-level (an open digital input is interpreted as "low")	V _{DC}	-30 +5
High level	VDC	15 30
Input Impedance	kΩ	2.8
Input current, typical (at 24 V DC)	mA	9
Max. voltage in the off state	V _{DC}	5
Current in OFF state	mA	0.0 1.0 (per channel)
Typical input delay of the digital inputs	μs	"0" → "1": 50 "1" → "0": 100
Digital outputs (continued-short-circuit-proof)		
Voltage	V _{DC}	24
Max. load current per digital output	A _{DC}	0.5
Output delay (resistive load)		
Typical	μs	"0" → "1": 50 "1" → "0": 150
Maximum	μs	"0" → "1": 100 "1" → "0": 225
Min. output pulse (100% amplitude, 0.5 A with ohmic load)	μs	125 (typ.) 350 (max.)
Switching frequency For resistive load For inductive load For lamp load Maximum lamp load	Hz Hz Hz W	Max. 100 Max. 0.5 Max. 10 5
Max. switching frequency (100% amplitude, 50%/50% duty cycle; with 0.5 A and an ohmic load)	kHz	1 (typ.)
Voltage drop in ON state	V _{DC}	0.75 (max.) for maximum load in all circuits
Leakage current in OFF state	μA	Max. 10 per channel
		1

Terminal Modules

5.3 Terminal Module TM31

6SL3055-0AA00-3FAx	Unit	Value	
Voltage drop, output (I/O power supply to the output)	VDC	0.5	
Max. summed current of outputs (per group) up to 60°C up to 50°C up to 40°C	Adc Adc Adc	2 3 4	
Response time	The response time of the digital inputs/outputs comprises the follow- ing:		
	Response time on th (approx. 1/2 DRIVE-	-	
	Transfer time via the (approx. 1 DRIVE-CI	DRIVE-CLiQ connection LiQ cycle).	
	Evaluation on the Co	ontrol Unit (see function diagram)	
	Additional information can be taken from the following references: Reference: /LH1/ SINAMICS S120/S150 List Manual, Chapter "Func- tion diagrams/Terminal Module 15"		
PE/ground connection	At the housing with M4 screw		
Weight	kg	1.0	

5.3 Terminal Module TM31

5.3.1 Description


The Terminal Module TM31 is a terminal expansion that is snapped onto a EN 60715 standard mounting rail. Terminal Module TM31 can be used to increase the number of available digital inputs/digital outputs and also the number of analog inputs/analog outputs within a drive system.

The TM31 contains the following interfaces:

Туре	Quantity
DRIVE-CLiQ interfaces	2
Digital inputs	8
Bidirectional digital inputs/outputs	4
Analog inputs	2
Analog outputs	2
Relay outputs	2
Temperature sensor input	1

5.3.2 Interface description

5.3.2.1 Overview

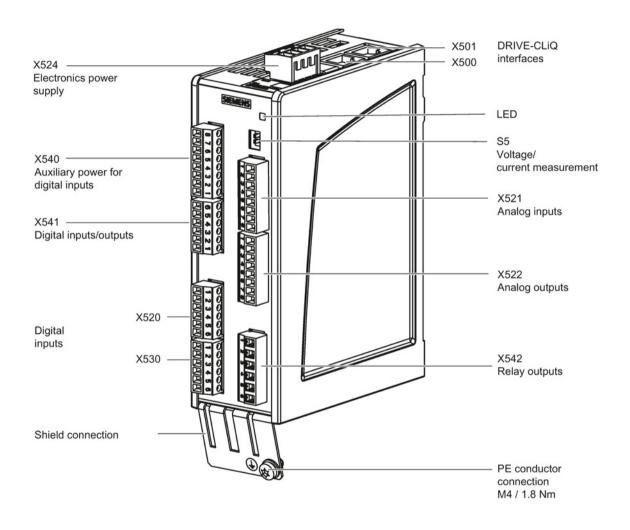



5.3 Terminal Module TM31

5.3.2.2 X500/X501 DRIVE-CLiQ interfaces

Table 5- 10	X500/X501: DRIVE-CLiQ interfaces
10010 0 10	

	Pin	Signal name	Technical data
	1	ТХР	Transmit data +
В	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	А	+ (24 V) Power supply	
	В	M (0 V) Electronics ground	

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery. Blanking covers (50 x) Article No.: 6SL3066-4CA00-0AA0

Note

The maximum DRIVE-CLiQ cable length is 100 m.

5.3.2.3 X520 digital inputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 0	Voltage: -3 +30 V
	2	DI 1	Electrical isolation: Yes
	3	DI 2	Reference potential: M1
	4	DI 3	Input characteristic acc. to IEC 61131-2, type 1
4	5	M1	Input voltage (including ripple)
5	6	М	"1" signal: 15 … 30 V "0" signal: -3 … +5 V
പ്ത			Input current at 24 V DC: type. 9 mA for "1" signal: > 0.5 mA
			Input delay for "0" → "1": typ. 50 μs max. 100 μs For "1" → "0": typ. 130 μs/max. 150 μs

Type: Screw terminal 1 (Page 331)

¹⁾ DI: Digital input; M: Electronics ground; M1: reference potential

Note

Ensuring the function of digital inputs

An open input is interpreted as "low".

Terminal M1 must be connected so that the digital inputs (DI) can function.

This is achieved by using one of the following measures:

- 1. Providing the ground reference of the digital inputs
- 2. A jumper to terminal M
 - Note: This removes isolation for these digital inputs.

5.3.2.4 X521 analog inputs

	Terminal	Designation ¹⁾	Technical data
	1 Al 0+ The analog inputs can be toggled betw	The analog inputs can be toggled between cur-	
	2	AI 0-	rent and voltage input using switches S5.0 and
	3	AI 1+	S5.1.
2 3 4	4	AI 1-	 As voltage input: -10 +10 V; R_i > 100 kΩ Resolution: 11 bits + sign
56			As current input : -20 +20 mA; R _i = 250 kΩ Resolution: 10 bits + sign
	5	P10	Auxiliary voltage:
	6	М	P10 = 10 V
	7	N10	N10 = -10 V Current-carrying capacity: max. 3 mA
	8	M Continuously short-circuit proof	
Type: Screw terminal 1 (Page 331)			

Table 5- 12 X521: Analog inputs

¹⁾ Al: analog inputs; P10/N10: auxiliary voltage; M or GND: ground reference

5.3 Terminal Module TM31

NOTICE

Damage or malfunctions through impermissible voltage values

If a current exceeding ±35 mA flows through the analog current input, then the component could be destroyed.

The common mode range must not be violated in order to avoid incorrect analog-digital conversion results.

- The input voltage may only be in the range between -30 V and +30 V (destruction limit).
- The common mode voltage may only be in the range between -10 V and +10 V (error limit).
- The back EMF at the auxiliary voltage connections may only be in the range between 15 V and +15 V.

Note

The power supply for the analog inputs can be taken internally or from an external power supply unit

5.3.2.5 S5 current/voltage changeover switch for analog inputs

Table 5-13	Current/voltage selector S5
------------	-----------------------------

	Switch	Function
	S5.0	Selector voltage (V)/current (I) Al0
V III S5.0 V III S5.1	S5.1	Selector voltage (V)/current (I) Al1

5.3.2.6 X522 analog outputs/temperature sensor

	Terminal	Designation ¹⁾	Technical data
	1	AO 0V+	You can set the following output signals using parameters:
	2	AO 0-	Voltage: -10 +10 V (max. 3 mA)
	3	AO 0C+	Current 1 : 4 20 mA (max. load resistance \leq 500 Ω)
	4	AO 1V+	Current 2 : -20 +20 mA (max. load resistance \leq 500 Ω)
	5	AO 1-	Current 3 : 0 20 mA (max. load resistance \leq 500 Ω)
5	6	AO 1C+	Resolution: 11 bits + sign
			Continuously short-circuit proof
	7	+ Temp ²⁾	Temperature sensor KTY84-1C130 / PT1000 / PTC
	8	- Temp ²⁾	Measuring current via temperature sensor connection: 2 mA
Type: Screw terminal 1 (Page 331)			

Table 5- 14 X522: Analog outputs/temperature sensor

¹⁾ AO xV: analog output voltage; AO xC: analog output current

- ²⁾ Accuracy of the temperature measurement:
 - KTY: ±7 °C (including evaluation)
 - PT1000: ±5 °C (PT1000 tolerance class B according to DIN EN 60751 including evaluation)
 - PTC: ±5 °C (including evaluation)

NOTICE

Damage or malfunctions through impermissible voltage values

If the back EMF is impermissible then damage and malfunctions may occur on the components.

• The back EMF at the outputs may only be in the range between -15 V and +15 V.

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

Connect a KTY temperature sensor with the correct polarity.



Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that comply with the specifications relating to protective separation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

5.3 Terminal Module TM31

5.3.2.7 X524 Electronics power supply

Table 5- 15	X524: Electroni	cs power supply

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 28.8 V)
	+	Electronics power supply Current consumption: max. 1.7	
 ≑ + [М	Electronics ground	
	М	Electronics ground	Max. current through the jumper in the connector: 20 A (15 A according to UL/CSA)
Type: Screw terminal 2 (Page 331)			

¹⁾ Including the current consumption for the digital outputs and for supplying the sensor

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node and digital outputs.

5.3.2.8 X530 digital inputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 4	Voltage: -3 +30 V DC
\square	2	DI 5	Electrical isolation: Yes
	3	DI 6	Reference potential: M2
	4	DI 7	Input characteristic acc. to IEC 61131-2, type 1
4	5	M2	Input voltage (including ripple)
5	6	М	"1" signal: 15 … 30 V "0" signal: -3 … +5 V
			Input current at 24 V DC: typ. 9 mA for "1" signal: > 0.5 mA
			Input delay for "0" \rightarrow "1": typ. 50 µs/max. 100 µs for "1" \rightarrow "0": typ. 130 µs/max. 150 µs
Type: Screw terminal 1 (Page 331)			

Table 5- 16 X530: Digital inputs

¹⁾ DI: digital input; M: electronics ground; M2: reference potential

Note

Ensuring the function of digital inputs

An open input is interpreted as "low".

To enable the digital inputs (DI) to function, terminal M2 must be connected.

This is achieved by using one of the following measures:

- 1. Providing the ground reference of the digital inputs
- 2. A jumper to terminal M
 - Note: This removes isolation for these digital inputs.

5.3.2.9 X540 auxiliary voltage for the digital inputs

	Terminal	Designation	Technical data
	8	+24 V	Voltage: +24 V DC
∞	7	+24 V	Max. total load current of +24 V auxil-
	6	+24 V	iary voltage for terminals X540 and
6	5	+24 V	X541 combined: 150 mA
5	4	+24 V	
	3	+24 V	
	2	+24 V	
	1	+24 V	
Type: Screw terminal 1 (Page 331)			

Table 5- 17 X540: Auxiliary voltage for digital inputs

Note

This voltage supply is only for powering the digital inputs.

Note

If the 24 V supply is briefly interrupted, the auxiliary voltage for the digital inputs is deactivated for this time.

5.3 Terminal Module TM31

5.3.2.10 X541 bidirectional digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	6	М	As input:
	5	DI/DO 11	Voltage: -3 +30 V DC
6 5	4	DI/DO 10	Electrical isolation: no
	3	DI/DO 9	Reference potential: M
	2	DI/DO 8	Input characteristic acc. to IEC 61131-2, type 1
2 1			Input voltage (including ripple) "1" signal: 15 … 30 V "0" signal: -3 … +5 V
			Input current at 24 V DC: typ. 9 mA for "1" signal: > 0.5 mA
			Input delay: for "0" to "1": Typ. 50 μs for "1" to "0": typ. 100 μs
			As output:
			Voltage: 24 V DC
			Electrical isolation: no
			Reference potential: M
			Output voltage "1" signal, with load: > X524.+ -2 V
			Output current For each output: ≤ 0.5 A Sum of all 4 outputs: ≤ 2 A Residual current for "0" signal: < 0.5 mA Short-circuit protection, automatic restart after a short-circuit
			Load types: ohmic, capacitive, inductive
			Output delay for "0" \rightarrow "1": typ. 150 µs / max. 500 µs (ohmic load) for "1" \rightarrow "0": typ. 50 µs (ohmic load)
			Switching frequency for ohmic load: max. 100 Hz for inductive load: max. 0.5 Hz for lamp load: max. 10 Hz
			Lamp load: max. 5 W
	1	+24 V	Auxiliary voltage: Voltage: +24 V DC Max. Total load current of +24 V auxiliary voltage for terminals X540 and X541 combined: 150 mA
Type: Screw te	rminal 1 (Page	e 331)	· ·

Table 5- 18	X541: Bidirectional digital inputs/outputs
-------------	--

¹⁾ DI/DO: Bidirectional digital input/output; M: Electronics ground

Note

An open input is interpreted as "low".

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

5.3.2.11 X542 relay outputs

Table 5- 19 X542: Relay outputs

	Terminal	Designation ¹⁾	Technical data	
	1	DO 0.NC	Contact type: Two-way contact max. load current: 8 A	
	2	DO 0.COM	Max. switching voltage: 250 V _{AC} . 30 V _{DC}	
	3	DO 0.NO	Max. switching capacity at 250 V _{AC} : 2000 VA ($\cos \varphi = 1$) Max. switching capacity at 250 V _{AC} : 750 VA ($\cos \varphi = 0.4$)	
	4	DO 1.NC	Max. switching capacity at 30 V _{DC} : 240 W (resistive load)	
	5	DO 1.COM	Required minimum current: 100 mA	
5 6	6	DO 1.NO	Output delay: ≤ 20 ms ²⁾ Overvoltage category: Class II acc. to EN 61800-5-1	
	Type: Screw terminal 3 (Page 331)			
Maximum switching frequency at full load: 6 rpm				

¹⁾ DO: digital output, NO: normally-open contact, NC: normally-closed contact, COM: mid-position contact

²⁾ Depending on the parameterization and the supply voltage (P24) of the TM31

5.3 Terminal Module TM31

5.3.3 Connection example

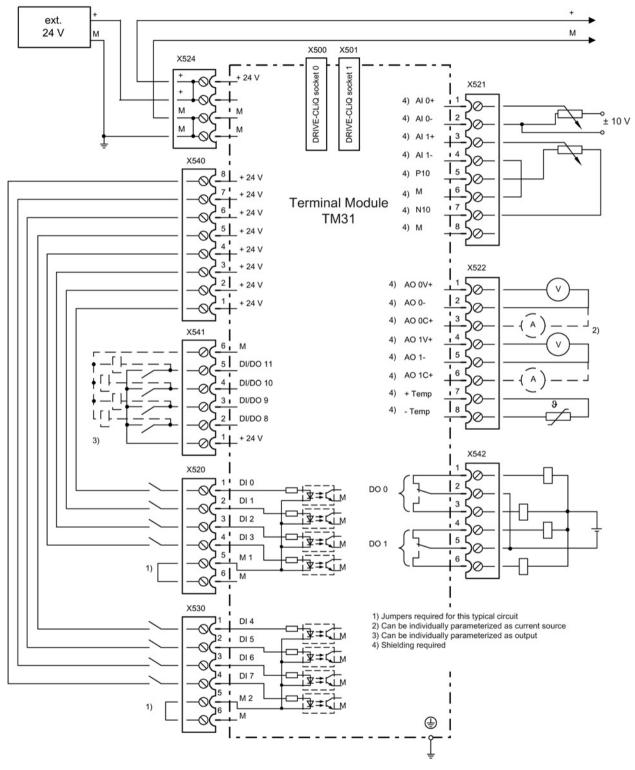


Figure 5-8 Connection example of TM31

5.3.4 Meaning of the LED

LED	Color	Status	Description, cause	Remedy
READY	Y - Off		The electronics power supply is missing or outside the permissible tolerance range.	-
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	-
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	-
	Red	Continuous light	This component has at least one fault. Note: The LED is activated irrespective of whether the corre- sponding messages have been reconfigured.	Remove and acknowledge the fault.
	Green/ red	Flashing light 0.5 Hz	Firmware is being downloaded.	-
		Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON.
	Green/ orange or Red/ orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	_

Table 5- 20 Meanings of the LEDs on the Terminal Module TM31

¹⁾ The parameters for activating component recognition using LEDs can be taken from the following reference: Reference: /LH1/ SINAMICS S120/S150 List Manual


Cause and rectification of faults


Additional information about the cause and resolving faults can be taken from the following references:

- Reference:/LH1/SINAMICS S120/S150 List Manual
- Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER

5.3 Terminal Module TM31

5.3.5 Dimension drawing

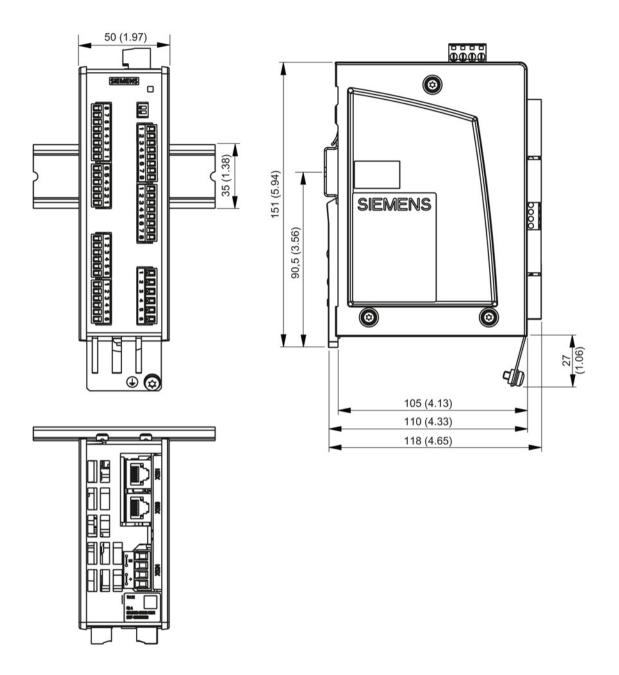

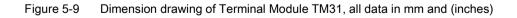


5.3.6 Installation

Installation

- 1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
- 2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
- 3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

- 1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
- 2. Swivel the component to the front and withdraw it upwards from the DIN rail.

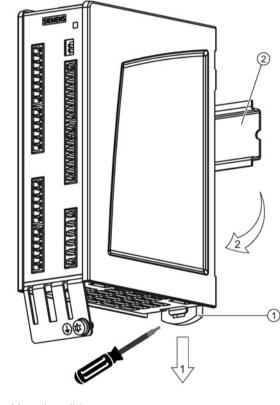

① Mounting slide

- 2 Mounting rail
- Figure 5-10 Removing from a DIN mounting rail


Terminal Modules

5.3 Terminal Module TM31

5.3.7 Protective conductor connection and shield support

It is always advisable to shield the digital input/output wiring.

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

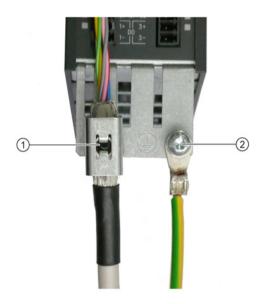

- Shield connection terminal, Weidmüller company, type: KLBUE CO1, Article number: 1753311001
- Protective conductor connection M4 / 1.8 Nm
- Figure 5-11 Protective conductor connection and shield support

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

5.3.8 Connector coding

To ensure that identical connectors are assigned correctly on the TM31, the connecters are encoded as shown in the following diagram.

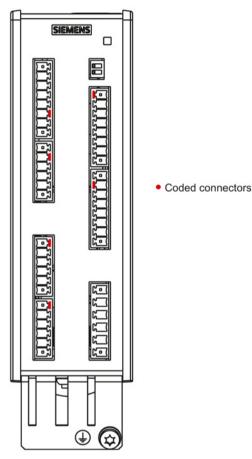


Figure 5-12 Example of connector coding at the TM31

The bending radii of the cables must be taken into account (see description of MOTION-CONNECT).

5.4 Terminal Module TM41

5.3.9 Technical data

Table 5-21 Technical data

6SL3055-0AA00-3AA1	Unit	Value		
Electronics power supply Voltage Current (without DRIVE-CLiQ and digital outputs)	VDC ADC	24 (20.4 28.8) 0.5		
Power loss	W	< 10		
Response time		time of the digital inputs/outputs and the /outputs comprise the following:		
		 Response time on the component itself (approx. 1/2 DRIVE-CLiQ cycle). 		
	Transfer time via the DRIVE-CLiQ connection (approx. 1 DRIVE-CLiQ cycle).			
	Evaluation	on the Control Unit (see function diagram).		
	erences: Reference: /Ll	rmation can be taken from the following ref- H1/ SINAMICS S120/S150 List Manual, ction diagrams/Terminal Module 31"		
PE/ground connection	At the housing with M4 screw			
Maximum cable lengths: electronics power supply DRIVE-CLiQ cables inputs/outputs	m m m	30 100 30		
Weight	kg	0.49		

5.4 Terminal Module TM41

5.4.1 Description

The Terminal Module TM41 is an expansion module that is snapped onto an EN 60715 standard mounting rail.

The encoder interface of the TM41 can be used to emulate an incremental encoder. The TM41 can also be used to connect analog controls to SINAMICS.

The TM41 contains the following interfaces:

Туре	Quantity
DRIVE-CLiQ interfaces	2
Digital inputs, floating	4
Bidirectional digital inputs/outputs	4
Analog inputs	1
TTL encoder output	1

5.4.2 Interface description

5.4.2.1 Overview

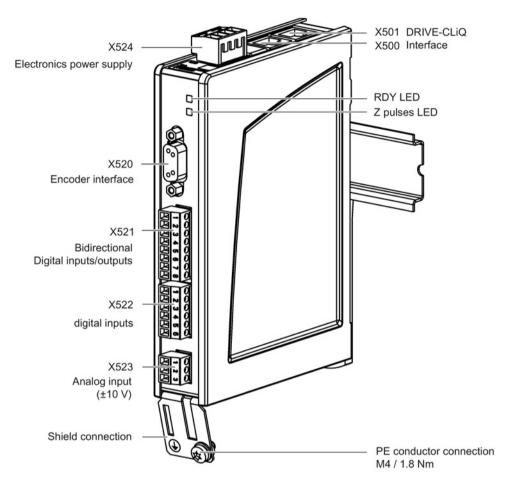


Figure 5-13 TM41 interface overview

5.4 Terminal Module TM41

5.4.2.2 X500/X501 DRIVE-CLiQ interfaces

Table 5- 23	X500/X501: DRIVE-CLiQ interfaces

	Pin	Signal name	Technical data
	1	ТХР	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	А	+ (24 V)	Power supply
	В	M (0 V)	Electronics ground

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery. Blanking covers (50 x) Article No.: 6SL3066-4CA00-0AA0

Note

The maximum DRIVE-CLiQ cable length is 100 m.

5.4.2.3 X524 electronics power supply

Interface X524 assumes the electronics power supply.

Table 5- 24	X524: Power supply
	Noz I. I owol oupply

	Terminal	Designation	Technical data
	+	Power supply	Voltage: 24 V DC (20.4 28.8 V)
□ + ! □□ ≤ !	+	Power supply	Current consumption: max. 3.1 A ¹⁾
	М	Electronics ground	New current through the jumper in the
	М	Electronics ground	Max. current through the jumper in the connector: 20 A (15 A according to UL/CSA)
Type: Screw terminal 2 (Page 331)			

¹⁾ Including the current consumption for the digital outputs and for supplying the sensor

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption of X524 increases by the value for the DRIVE-CLiQ nodes and the digital outputs.

5.4.2.4 X520 encoder interface

	Pin	Signal name	Technical data
	1	A	Incremental signal A
	2	R	Reference signal R
	3	В	Incremental signal B
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	A*	Inverse incremental signal A
	7	R*	Inverse reference signal R
	8	B*	Inverse incremental signal B
Ó	9	М	Ground
Connector type:	9-pin SUB-D socket; TTL encoder (RS422)		
Max. cable length: 30 m			

Table 5- 25 X520: Encoder interface

Note

The X520 encoder interface produces signals acc. to RS422 standard.

5.4 Terminal Module TM41

5.4.2.5 X521 bidirectional digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	DI/DO 0	As input:
–	2	DI/DO 1	Voltage: -3 30 V DC
	3	DI/DO 2	Electrical isolation: no
	4	DI/DO 3	Reference potential: M
$\overset{\omega}{\models}$			Input characteristic acc. to IEC 61131-2, type 1
4 5 6			Input voltage (including ripple) "1" signal: 15 30 V "0" signal: -3 +5 V
7 8			Input current at 24 V DC: typ. 9 mA for "1" signal: > 0.5 mA
			Input delay for "0" → "1": typ. 50 μs for "1" → "0": typ. 100 μs
			As output:
			Voltage: 24 V DC
			Electrical isolation: no
			Reference potential: M
			Output voltage "1" signal, with load: > X524.+ -2 V
			Output current for each output: ≤ 0.5 A Sum of all 4 outputs: ≤ 2 A Residual current for "0" signal: < 0.5 mA Short-circuit protection, automatic restart after a short- circuit Load types: ohmic, capacitive, inductive Output delay for "0" → "1": typ. 150 µs / max. 500 µs (ohmic load)
			for "1" \rightarrow "0": typ. 50 μ s (ohmic load)
			Switching frequency for ohmic load: max. 100 Hz for inductive load: max. 0.5 Hz for lamp load: max. 10 Hz
			Lamp load: max. 5 W
	5	+24 V	Voltage: 24 V DC
	6	+24 V	Max. total load current of +24 V auxiliary voltage of
	7	+24 V	terminals 5 up to 8 combined: 500 mA
	8	+24 V	

Table 5- 26	X521: Digital inputs/outputs
-------------	------------------------------

Type: Screw terminal 1 (Page 331)

¹⁾ DI/DO: bidirectional digital input/output

Note

This power supply is only for supplying the digital inputs.

Note

An open input is interpreted as "low".

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

5.4.2.6 X522 isolated digital inputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 0	Voltage: -3 +30 V DC
$\square \square$	2	DI 1	Electrical isolation: Yes
	3	DI 2	Reference potential: M1
	4	DI 3	Input characteristic acc. to IEC 61131-2, type 1
4	5	M1	Input voltage (including ripple)
57 6 M "1" signal: 15 30 V "0" signal: -3 +5 V	0		
			Input current at 24 V DC: typ. 9 mA for "1" signal: > 0.5 mA
			Input delay for "0" \rightarrow "1": typ. 50 µs/max. 100 µs for "1" \rightarrow "0": typ. 130 µs/max. 150 µs
Type: Screw t	erminal 1 (Pag	je 331)	

Table 5- 27 X522: Digital inputs

¹⁾ DI: Digital input; M: Electronics ground; M1: reference potential

Note

Ensuring the function of digital inputs

Terminal M1 must be connected so that the digital inputs (DI) can function.

This is achieved by using one of the following measures:

- 1. Providing the ground reference of the digital inputs
- 2. A jumper to terminal M
 - Note: This removes isolation for these digital inputs.

5.4 Terminal Module TM41

5.4.2.7 X523 analog input

Table 5- 28	X523: Analog	input
	7.020.7 maiog	input

	Terminal	Designation ¹⁾	Technical data	
	1	AI 0-	Voltage : -10 +10 V;	
	2	AI 0+	$R_i > 100 k\Omega$	
1 2 3	3	Reserved, do not use	Resolution: 12 bits + sign	
Type: Screw te	erminal 1 (Page	e 331)		

¹⁾ AI: analog input

Note

Permissible voltage values

The common mode range must not be violated in order to avoid incorrect analog-digital conversion results. The following voltages are permissible:

- Input voltage: ±30 V (destruction limit)
- Common mode voltage ±10 V (increased errors when exceeded)

5.4.3 Connection example

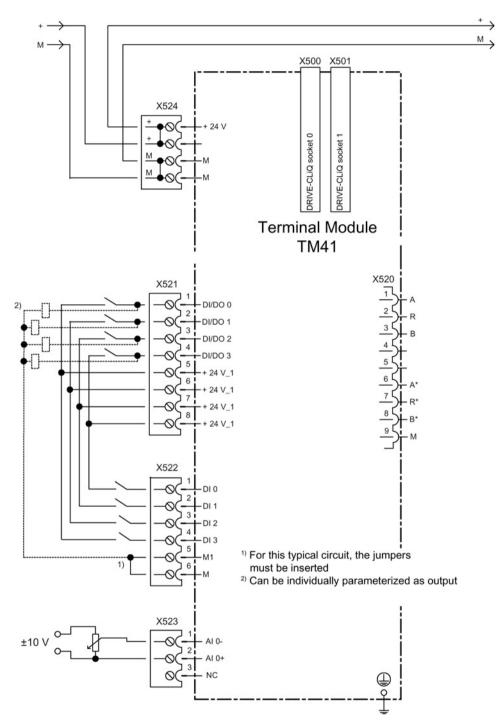


Figure 5-14 Sample connection of TM41

5.4 Terminal Module TM41

5.4.4 Meaning of the LEDs

LED	Color	Status	Description, cause	Remedy
READY	-	Off	The electronics power supply is missing or outside the permissible tolerance range.	-
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	_
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	-
	Red	Continuous light	This component has at least one fault. Note: The LED is activated irrespective of whether the corre- sponding messages have been reconfigured.	Remove and acknowledge the fault.
	Green/ red	Flashing light 0.5 Hz	Firmware is being downloaded.	_
		Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON.
	Green/ orange or Red/ orange	Flashing light	Component recognition via LED is activated ¹). Note: Both options depend on the LED status when component recognition is activated.	-
Z pulses	-	Off	The zero mark was found and the system waits for the zero mark output. OR The component is switched off.	-
	RedContinuous lightGreenContinuous light		The zero mark has not been released, or the zero mark search is running.	-
			The system stops at the zero mark.	-
		Flashing light	The zero mark is output at each virtual revolution.	-

Table 5- 29 Meaning of the LEDs on the Terminal Module TM41


¹⁾ The parameters for activating component recognition using LEDs can be taken from the following reference: Reference: /LH1/ SINAMICS S120/S150 List Manual

Cause and rectification of faults

Additional information about the cause and resolving faults can be taken from the following references:

- Reference:/LH1/SINAMICS S120/S150 List Manual
- Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER



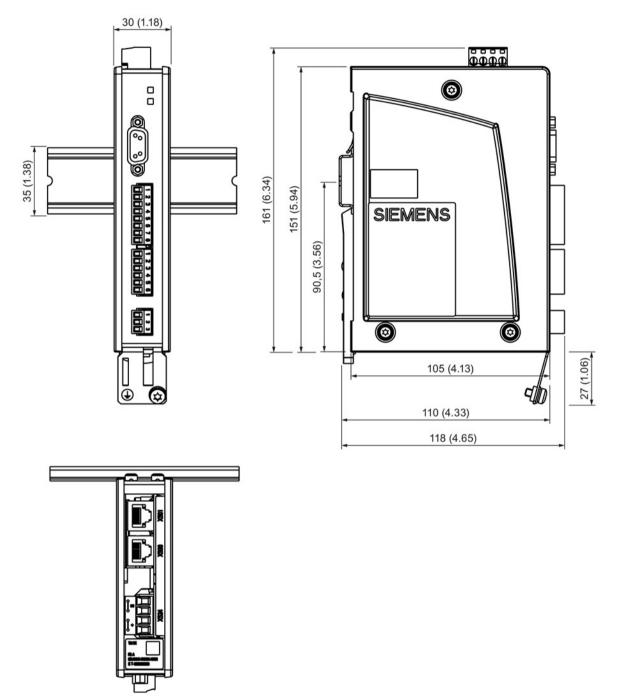



5.4 Terminal Module TM41


5.4.6 Installation

Installation

- 1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
- 2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
- 3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

- 1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
- 2. Swivel the component to the front and withdraw it upwards from the DIN rail.

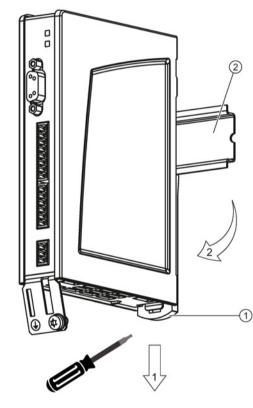


- ① Mounting slide
- ② Mounting rail
- Figure 5-16 Removing from a DIN mounting rail

5.4.7 Protective conductor connection and shield support

It is always advisable to shield the digital input/output wiring.

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

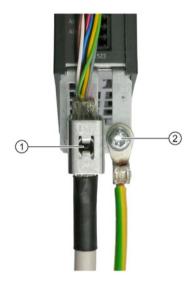

- ① Shield connection terminal, Weidmüller company, type: KLBUE CO1, Article number: 1753311001
- Protective conductor connection M4 / 1.8 Nm

Figure 5-17 Protective conductor connection and shield support

The bending radii of the cables must be taken into account (see description of MOTION-CONNECT).

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

5.4.8 Technical data

Table	5-	30	Technical	data
1 4010	•	00	roonnou	aata

6SL3055-0AA00-3PA1	Unit	Value	
Electronics power supply Voltage Current (without DRIVE-CLiQ and digital outputs)	V _{DC} A _{DC}	24 (20.4 28.8) 0.5	
Power loss	W	12	
Response time	-	time of the digital inputs/outputs and the omprise the following:	
		time on the component itself 2 DRIVE-CLiQ cycle).	
	 Transfer time via the DRIVE-CLiQ connection (approx. 1 DRIVE-CLiQ cycle). 		
	• Evaluation on the Control Unit (see function diagram).		
	Additional information can be taken from the following ref- erences: Reference: /LH1/ SINAMICS S120/S150 List Manual, Chapter "Function diagrams/Terminal Module 41"		
PE/ground connection	At the housing with M4 screw		
Maximum cable lengths: electronics power supply DRIVE-CLiQ cables inputs/outputs	m m m	30 100 30	
Weight	kg	0.32	

5.5 Terminal Module TM54F

5.5.1 Description

The TM54F is a terminal expansion module for snapping onto a mounting rail according to EN 60715: The TM54F includes fail-safe digital inputs and outputs to control the Safety Integrated functions of SINAMICS. A fail-safe digital input comprises 2 digital inputs. A fail-safe digital output comprises a 24 VDC switching output, a ground switching output and a digital input for checking the switching state.

The TM54F connection should be established via the DRIVE-CLiQ directly at a Control Unit. Only one TM54F Terminal Module can be assigned to each Control Unit.

Additional DRIVE-CLiQ nodes can be connected to the TM54F, such as Sensor Modules and Terminal Modules (however, no additional TM54F). Motor Modules and Line Modules should not be connected to a TM54F.

TM54F features the following interfaces:

Table 5- 31 Interface overview of the TM54F

Туре	Quantity
DRIVE-CLiQ interfaces	2
Fail-safe digital inputs (F-DI)	10
Fail-safe digital outputs (F-DO)	4
Sensor ¹⁾ power supplies, dynamization supported ²⁾	2
Sensor ¹⁾ power supply, no dynamization	1
Digital inputs to check F_DO for a test stop	4
Power supply	1

¹⁾ Sensors: Fail-safe devices to issue commands and sense, for example, Emergency Stop pushbuttons and safety locks, position switches and light arrays/light curtains.

²⁾ Dynamic response: The sensor power supply is cycled on and off by the TM54F when the forced checking procedure is active for the sensors, cable routing, and the evaluation electronics.

Note

All signals connected to the TM54F must be PELV signals.

Note

The operating ranges of the F-DI meet the requirements of EN 61131-2 for type 1 digital inputs.


The rated values of the F-DO meet the requirements of EN 61131-2 for digital DC outputs with 0.5 A rated current.


Note

For cable lengths > 30 m, shielded cables must be used for the F-DI.

5.5.2 Interface description

5.5.2.1 Overview

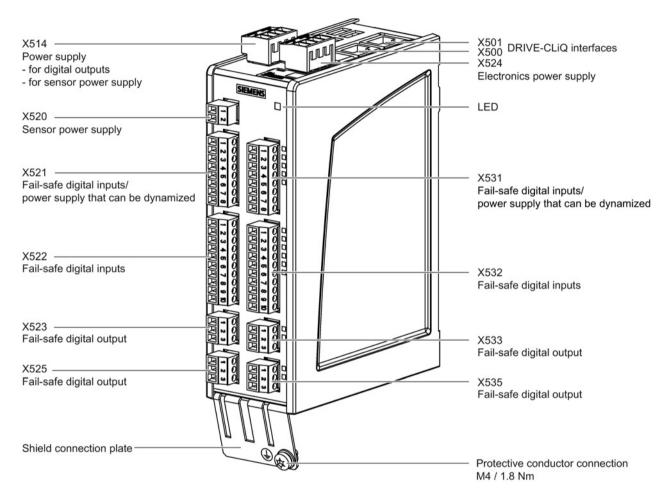

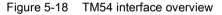

5.5.2.2 X500/X501 DRIVE-CLiQ interfaces

	Pin	Signal name	Technical data
	1	ТХР	Transmit data +
П В	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	А	+ (24 V)	Power supply
	В	M (0 V)	Electronics ground

Table 5- 32 X500/X501: DRIVE-CLiQ interfaces

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery. Blanking covers (50 x) Article No.: 6SL3066-4CA00-0AA0

Note

The maximum DRIVE-CLiQ cable length is 100 m.

5.5.2.3 X514 power supply for digital outputs and sensors

Table 5- 33 X514: Power supply

	Terminal	Designation	Technical data		
	+	Power supply	Voltage: 24 V DC (20.4 28.8 V)		
	+	Power supply	Current consumption: max. 4.0 A ¹⁾		
 ≓ +]	M1	Electronics ground	Max. current via jumper in connector:		
⊒≤∎	M1	Electronics ground	20 A (15 A according to UL/CSA)		
Type: Screw te	Type: Screw terminal 2 (Page 331)				

¹⁾ Including the current consumption for the digital outputs and to supply the sensor.

The maximum cable length that can be connected is 30 m.

Note

The two "+" and "M1" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

5.5.2.4 X520 sensor power supply

Table 5- 34	X520: Sensor power supply
-------------	---------------------------

	Terminal	Designation	Technical data
	1	L3	Voltage: +24 V DC Max. total load current: 500 mA
1 2	2	M1	

Without forced dormant error detection

5.5.2.5 X521 fail-safe digital inputs and dynamically adjustable power supply

Table 5- 35 X521: Fail-safe digital inputs

	Terminal	Designation ¹⁾		Technical data
	1	L1+		Switched voltage: +24 V DC Max. total load current: 500 mA (voltage is switched for a test stop)
2	2	DI 0	F-DI 0	Voltage: -3 +30 V DC
\Box ω	3	DI 1+		Electrical isolation: Yes
4	4	DI 2	F-DI 1	Reference potential: see terminals 6, 7, 8
5678	5	DI 3+		Input characteristic acc. to IEC 61131-2, type 1
				Input voltage (including ripple) "1" signal: 15 … 30 V "0" signal: -3 … +5 V
				Input current at 24 V DC: typ. 3.2 mA for "1" signal: > 0.5 mA
				Input delay: ²⁾ for "0" → "1": typ. 30 µs for "1" → "0": typ. 60 µs
				Switching frequency: max. 100 Hz
	6	DI 1-	F-DI 0	Reference potential for DI 1+
	7	DI 3-	F-DI 1	Reference potential for DI 3+
	8	M1		Reference potential for DI 0, DI 2, L1+

An F-DI consists of a digital input and a 2nd digital input where, in addition, the cathode of the optocoupler is fed-out. F-DI 0 = terminals 2, 3 and 6

F-DI 1 = terminals 4, 5 and 7

Type: Screw terminal 1 (Page 331)

¹⁾ DI: Digital input, F-DI: Fail-safe digital input

2) Pure hardware delay

Note

Execution of a test stop

The test stop of the F-DI 0 to F-DI 4 can only be performed if the F-DI is supplied from L1+.

Note

Ensuring the function of digital inputs

For the digital inputs DIx+ to function, the reference potential must be connected to input DIx- in each case.

This is achieved by using one of the following measures:

- 1. Providing the ground reference of the digital inputs
- 2. A jumper between DIx- and terminal M1

5.5.2.6 X522 fail-safe digital inputs

	Terminal	Designation ¹⁾		Technical data	
	1	DI 4	F-DI 2	Voltage: -3 +30 V DC	
	2	DI 5+		Electrical isolation: Yes	
	3	DI 6	F-DI 3	Reference potential: see terminals 7, 8, 9, 10	
	4	DI 7+		Input characteristic acc. to IEC 61131-2, type 1	
	5	DI 8	F-DI 4	Input voltage (including ripple)	
5	6	DI 9+		"1" signal: 15 … 30 V "0" signal: -3 … +5 V	
				Input current at 24 V DC: typ. 3.2 mA for "1" signal: > 0.5 mA	
³ 9 10				Input delay: ²⁾ for "0" → "1": typ. 30 µs for "1" → "0": typ. 60 µs	
				Switching frequency: max. 100 Hz	
	7	DI 5-	F-DI 2	Reference potential for DI 5+	
	8	DI 7-	F-DI 3	Reference potential for DI 7+	
	9	DI 9-	F-DI 4	Reference potential for DI 9+	
	10	M1		Reference potential for DI 4, DI 6 and DI 8	

Table 5- 36 X522: Fail-safe digital inputs

An F-DI consists of a digital input and a 2nd digital input where, in addition, the cathode of the optocoupler is fed-out.

F-DI 2 = terminals 1, 2 and 7

F-DI 3 = terminals 3, 4 and 8

F-DI 4 = terminals 5, 6 and 9

Type: Screw terminal 1 (Page 331)

¹⁾ DI: Digital input, F-DI: Fail-safe digital input

²⁾ Pure hardware delay

Note

Execution of a test stop

The test stop of the F-DI 0 to F-DI 4 can only be performed if the F-DI is supplied from L1+.

Note

Ensuring the function of digital inputs

For the digital inputs DIx+ to function, the reference potential must be connected to input DIx- in each case.

This is achieved by using one of the following measures:

- 1. Providing the ground reference of the digital inputs
- 2. A jumper between DIx- and terminal M1

5.5.2.7 X523 fail-safe digital output

 Terminal	Designation	1 ¹⁾	Technical data	
1	DI 20		Voltage: -3 +30 V DC	
			Electrical isolation: Yes	
			Reference potential: M1	
			Input characteristic acc. to IEC 61131-2, type 1	
			Input voltage (including ripple) "1" signal: 15 … 30 V "0" signal: -3 … +5 V	
		F-DO 0	Input current at 24 V DC: typ. 3.2 mA for "1" signal: > 0.5 mA	
			Input delay: ²⁾ for "0" \rightarrow "1": typ. 30 µs for "1" \rightarrow "0": typ. 60 µs	
			Switching frequency: max. 100 Hz	
2	DO 0+		Voltage: 24 V DC	
3	DO 0-		Electrical isolation: Yes	
			Reference potential M1 for DO 0+ Terminal L1+, L2+ or L3+ for DO 0-	
			Output voltage "1" signal, with load: > X514.+ -2 V	
			Output current For each output: ≤ 0.5 A Sum of all 4 outputs: ≤ 2 A Residual current for "0" signal: < 0.5 mA Short-circuit protection, automatic restart after a short- circuit	
			Load types: ohmic, capacitive, inductive	
			Output delay ²⁾ for "0" \rightarrow "1": 300 µs (ohmic load) for "1" \rightarrow "0": 350 µs (ohmic load)	
			Switching frequency for ohmic load: max. 100 Hz for inductive load: max. 0.5 Hz for lamp load: max. 10 Hz	
			Lamp load: max. 5 W	

Type: Screw terminal 1 (Page 331)

¹⁾ DI: Digital input; DO: digital output F-DO: Fail-safe digital output

²⁾ Pure hardware delay

5.5.2.8 X524 electronics power supply

Table 5- 38	X524: Electronics power supply
-------------	--------------------------------

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 28.8 V)
	+	Electronics power supply	Current consumption: max. 0.7 A
	Electronics ground	Max. current through the jumper in the	
	М	Electronics ground	connector: 20 A (15 A according to UL/CSA)
Type: Screw	terminal 2 (Page	e 331)	

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node.

5.5.2.9 X525 fail-safe digital output

Terminal	Designation	1 ¹⁾	Technical data	
1	DI 21		Voltage: -3 +30 V DC	
			Electrical isolation: Yes	
			Reference potential: M1	
			Input characteristic acc. to IEC 61131-2, type 1	
			Input voltage (including ripple) "1" signal: 15 … 30 V "0" signal: -3 … +5 V	
		F-DO 1	Input current at 24 V DC: typ. 3.2 mA for "1" signal: > 0.5 mA	
			Input delay: ²⁾ for "0" \rightarrow "1": typ. 30 µs for "1" \rightarrow "0": typ. 60 µs	
			Switching frequency: max. 100 Hz	
2	DO 1+		Voltage: 24 V DC	
3	DO 1-		Electrical isolation: Yes	
			Reference potential M1 for DO 1+ Terminal L1+, L2+ or L3+ for DO 1-	
			Output voltage "1" signal, with load: > X514.+ -2 V	
			Output current For each output: ≤ 0.5 A Sum of all 4 outputs: ≤ 2 A Residual current for "0" signal: < 0.5 mA Short-circuit protection, automatic restart after a short circuit	
			Load types: ohmic, capacitive, inductive	
			Output delay ²⁾ for "0" \rightarrow "1": 300 µs (ohmic load) for "1" \rightarrow "0": 350 µs (ohmic load)	
			Switching frequency for ohmic load: max. 100 Hz for inductive load: max. 0.5 Hz for lamp load: max. 10 Hz	
			Lamp load: max. 5 W	

Type: Screw terminal 1 (Page 331)

¹⁾ DI: Digital input; DO: Digital output F-DO: Fail-safe digital output

²⁾ Pure hardware delay

5.5.2.10 X531 fail-safe digital inputs and dynamically adjustable power supply

	Terminal	Designation 1) L2+		Technical data
	1			Switched voltage: +24 V DC Max. total load current: 500 mA (voltage is switched for a test stop)
2	2	DI 10	F-DI 5	Voltage: -3 +30 V DC
ω	3	DI 11+		Electrical isolation: Yes
4	4	DI 12	F-DI 6	Reference potential: see terminals 6, 7, 8
5	5	DI 13+		Input characteristic acc. to IEC 61131-2, type 1
6 7 8				Input voltage (including ripple) "1" signal: 15 30 V "0" signal: -3 +5 V
				Input current at 24 V DC: typ. 3.2 mA for "1" signal: > 0.5 mA
				Input delay: ²⁾ for "0" \rightarrow "1": typ. 30 µs for "1" \rightarrow "0": typ. 60 µs
				Switching frequency: max. 100 Hz
	6	DI 11-	F-DI 5	Reference potential to DI 11+
	7	DI 13-	F-DI 6	Reference potential to DI 13+
	8	M1		Reference potential to DI 10, DI 12, L2+
An F-DI consists of 1	digital input and	l a 2nd digital ir	nput where, in	addition, the cathode of the optocoupler is fed-out.

Table 5- 40	X531: Fail-safe digital inputs
-------------	--------------------------------

F-DI 5 = terminals 2, 3 and 6

F-DI 6 = terminals 4, 5 and 7

Type: Screw terminal 1 (Page 331)

1) DI: Digital input, F-DI: Fail-safe digital input

2) Pure hardware delay

Note

Execution of a test stop

The test stop of the F-DI 5 to F-DI 9 can only be performed if the F-DI is supplied from L2+.

Note

Ensuring the function of digital inputs

For the digital inputs DIx+ to function, the reference potential must be connected to input DIx- in each case.

This is achieved by using one of the following measures:

- 1. Providing the ground reference of the digital inputs
- 2. A jumper between DIx- and terminal M1

5.5.2.11 X532 fail-safe digital inputs

	Terminal	Designation ¹⁾	İ	Technical data
	1	DI 14	F-DI 7	Voltage: -3 +30 V DC
	2	DI 15+		Electrical isolation: Yes
	3	DI 16	F-DI 8	Reference potential: see terminals 7, 8, 9, 10
	4	DI 17+		Input characteristic acc. to IEC 61131-2, type 1
	5	DI 18	F-DI 9	Input voltage (including ripple)
5	6	DI 19+		"1" signal: 15 … 30 V "0" signal: -3 … +5 V
6 7 8				Input current at 24 V DC: typ. 3.2 mA for "1" signal: > 0.5 mA
9 10				Input delay: ²⁾ for "0" → "1": typ. 30 μs for "1" → "0": typ. 60 μs
				Switching frequency: max. 100 Hz
	7	DI 15-	F-DI 7	Reference potential for DI 15+
	8	DI 17-	F-DI 8	Reference potential for DI 17+
	9	DI 19-	F-DI 9	Reference potential for DI 19+
	10	M1		Reference potential for DI 14, DI 16 and DI 18
An F-DI consists of F -DI 7 = terminals		nd a 2nd digital i	nput where, i	n addition, the cathode of the optocoupler is fed-out.

Table 5- 41 X532: Fail-safe digital inputs

F-DI 7 = terminals 1, 2 and 7

F-DI 8 = terminals 3, 4 and 8

F-DI 9 = terminals 5, 6 and 9

Type: Screw terminal 1 (Page 331)

¹⁾ DI: Digital input, F-DI: Fail-safe digital input

2) Pure hardware delay

Note

Execution of a test stop

The test stop of the F-DI 5 to F-DI 9 can only be performed if the F-DI is supplied from L2+.

Note

Ensuring the function of digital inputs

For the digital inputs DIx+ to function, the reference potential must be connected to input DIx- in each case.

This is achieved by using one of the following measures:

- 1. Providing the ground reference of the digital inputs
- 2. A jumper between DIx- and terminal M1

5.5.2.12 X533 fail-safe digital output

Terminal	Designation	1)	Technical data	
1	DI 22		Voltage: -3 +30 V DC	
			Electrical isolation: Yes	
			Reference potential: M1	
			Input characteristic acc. to IEC 61131-2, type 1	
			Input voltage (including ripple) "1" signal: 15 … 30 V "0" signal: -3 … +5 V	
		F-DO 2	Input current at 24 V DC: typ. 3.2 mA for "1" signal: > 0.5 mA	
			Input delay: ²⁾ for "0" \rightarrow "1": typ. 30 µs for "1" \rightarrow "0": typ. 60 µs	
			Switching frequency: max. 100 Hz	
2	DO 2+		Voltage: 24 V DC	
3	DO 2-		Electrical isolation: Yes	
			Reference potential M1 for DO 2+ Terminal L1+, L2+ or L3+ for DO 2-	
			Output voltage "1" signal, with load: > X514.+ -2 V	
			Output current For each output: ≤ 0.5 A Sum of all 4 outputs: ≤ 2 A Residual current for "0" signal: < 0.5 mA Short-circuit protection, automatic restart after a short- circuit	
			Load types: ohmic, capacitive, inductive	
			Output delay ²⁾ for "0" \rightarrow "1": 300 µs (ohmic load) for "1" \rightarrow "0": 350 µs (ohmic load)	
			Switching frequency for ohmic load: max. 100 Hz for inductive load: max. 0.5 Hz for lamp load: max. 10 Hz	
			Lamp load: max. 5 W	

Type: Screw terminal 1 (Page 331)

¹⁾ DI: Digital input; DO: Digital output F-DO: Fail-safe digital output

²⁾ Pure hardware delay


5.5.2.13 X535 fail-safe digital output

Terminal	Designatior	1 ¹⁾	Technical data
1	DI 23		Voltage: -3 +30 V DC
			Electrical isolation: Yes
			Reference potential: M1
			Input characteristic acc. to IEC 61131-2, type 1
			Input voltage (including ripple) "1" signal: 15 … 30 V "0" signal: -3 … +5 V
		F-DO 3	Input current at 24 V DC: typ. 3.2 mA for "1" signal: > 0.5 mA
			Input delay: ²⁾ for "0" \rightarrow "1": typ. 30 µs for "1" \rightarrow "0": typ. 60 µs
			Switching frequency: max. 100 Hz
2	DO 3+		Voltage: 24 V DC
3	DO 3-		Electrical isolation: Yes
			Reference potential M1 for DO 3+ Terminal L1+, L2+ or L3+ for DO 3-
			Output voltage "1" signal, with load: > X514.+ -2 V
			Output current For each output: ≤ 0.5 A Sum of all 4 outputs: ≤ 2 A Residual current for "0" signal: < 0.5 mA Short-circuit protection, automatic restart after a short- circuit
			Load types: ohmic, capacitive, inductive
			Output delay ²⁾ for "0" \rightarrow "1": 300 µs (ohmic load) for "1" \rightarrow "0": 350 µs (ohmic load)
			Switching frequency for ohmic load: max. 100 Hz for inductive load: max. 0.5 Hz for lamp load: max. 10 Hz
			Lamp load: max. 5 W

Type: Screw terminal 1 (Page 331)

¹⁾ DI: Digital input; DO: Digital output F-DO: Fail-safe digital output

²⁾ Pure hardware delay

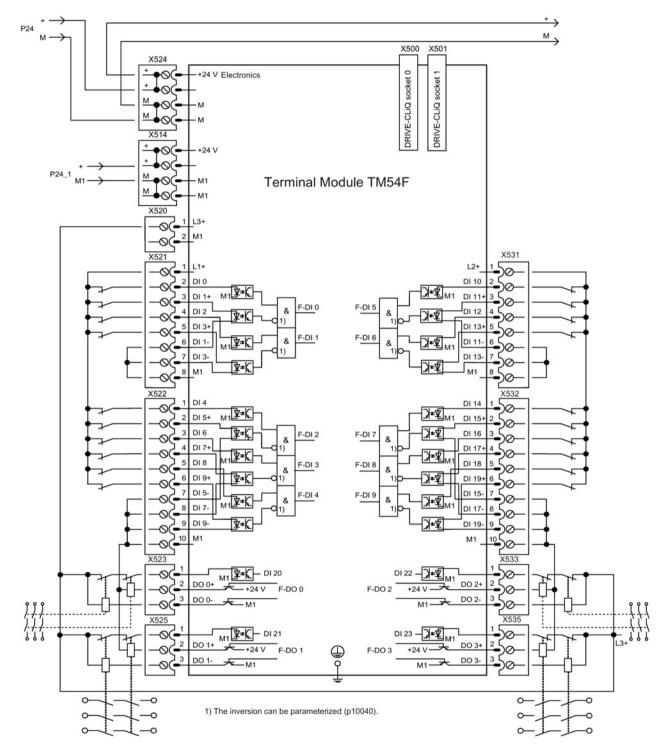

5.5.3 Connection example

Figure 5-19 Connection example off TM54F

5.5.4 Meaning of the LEDs

LED	Color Status		Status	Description, cause	Remedy
READY	Y - Green Orange Red		Off	The electronics power supply is missing or outside the permissible tolerance range.	-
			Continuous light	The component is ready for operation, cyclic DRIVE-CLiQ communication is taking place.	-
			Continuous light	DRIVE-CLiQ communication is being established.	-
			Continuous light	This component has at least one fault. Remark: The LED is activated irrespective of whether the corresponding messages have been reconfigured.	Remedy and acknowledge fault or safely acknowledge the fault
	Green/re	ed	Flashing light 0.5 Hz	Firmware is being downloaded.	-
			Flashing light 2 Hz	Firmware download is complete. Wait for POWER ON.	Carry out a POWER ON
	Green / o	orange	Flashing light 1 Hz	Component recognition via LED is activated (p0154 = 1).	-
	Red / orange			Remark: Both options depend on the LED status when com- ponent recognition is activated. Green / orange: Component is operating without any faults Red/orange: Component signals a fault	
L1+, L2+	-		Off	The controllable sensor power supply is functioning fault-free.	-
	Red		Continuous light	There is a fault in the controllable sensor power supply.	-
L3+	-		Off	The sensor power supply is operating fault-free.	
	Red		Continuous light	The sensor power supply has a fault.	
Fail-safe ir	nputs / dou	ble inputs		•	•
F_DI z	LED	LED			-
(input x,	х	x+1		NC contact/NC contact ¹ : $(z = 0 9, x = 0, 2, 18)$	
(x+1)+, (x+1)-)	-	Red	Continuous light	Different signal states at input x and x+1	
(,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	-	-	Off	No signal at input x and no signal at input x+1	
				NC contact/NO contact ¹ : ($z = 0 9, x = 0, 2, 18$)	
	-	Red	Continuous light	Same signal states at input x and x+1	
	_	_	Off	No signal at input x and no signal at input x+1	
	LED	LED			
	х	x+1		NC contact/NC contact ¹ : $(z = 0 9, x = 0, 2, 18)$	
	Green	Green	Continuous light	One signal at input x and one signal at input x+1	
				NC contact/NO contact ¹ : ($z = 0 9, x = 0, 2, 18$)	
	Green	Green	Continuous light	One signal at input x and no signal at input x+1	_

LED	Color	Status	Description, cause	Remedy	
Single digita	Single digital inputs, not fail-safe				
DI x	-	Off	No signal at digital input x (x = 20 23)	-	
	Green	Continuous light	Signal at digital input x	-	
Fail-safe dig	Fail-safe digital outputs with associated readback channel				
F_DO y (0+3+, 03-)	Green	Continuous light	Output y (y = 0 3) has an active signal	-	
	Readback input DI 2y for output $F_DO y (y = 0 3)$ for test stop. The status of the LEDs also depends on the type of external circuit.				
DI 2y	-	Off	One of the two output lines y+ or y- or both lines of output y carry a signal	-	
	Green	Continuous light	Both output lines y+ and y- carry no signal	-	

¹⁾ Inputs x+1 (DI 1+, 3+, .. 19+) can be individually set using a parameter Additional information can be taken from the following reference: Reference: /LH1/ SINAMICS S120/S150 List Manual

Cause and rectification of faults


Additional information about the cause and resolving faults can be taken from the following references:


- Reference:/LH1/SINAMICS S120/S150 List Manual
- Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER


Terminal Modules


5.5 Terminal Module TM54F

5.5.5 Dimension drawing

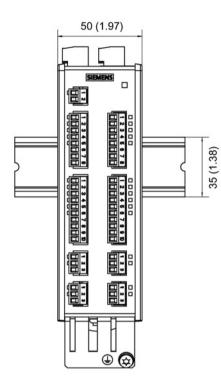

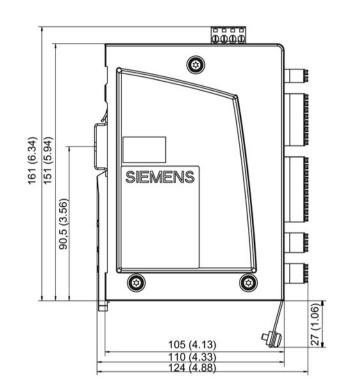

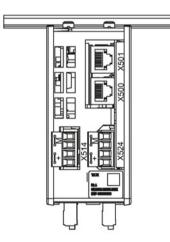

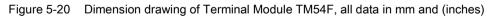

5.5.6 Installation

Installation

- 1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
- 2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
- 3. Slide the component along the mounting rail to either the left or the right into its final position.

Removal

- 1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
- 2. Swivel the component to the front and withdraw it upwards from the DIN rail.

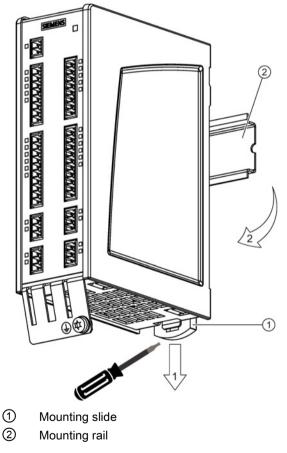


Figure 5-21 Removing from a DIN mounting rail


Terminal Modules

5.5 Terminal Module TM54F

5.5.7 Protective conductor connection and shield support

It is always advisable to shield the digital input and output wiring.

The following diagram shows a typical Weidmüller shield connection clamp for the shield support.

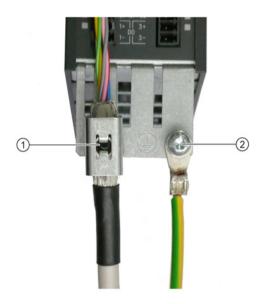

- Shield connection terminal, Weidmüller company, type: KLBUE CO1, Article number: 1753311001
- Protective conductor connection M4 / 1.8 Nm
- Figure 5-22 Protective conductor connection and shield support

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

5.5.8 Technical data

6SL3055-0AA00-3BA.	Unit	Value	
Current requirement X524 (at 24 V DC) without DRIVE-CLiQ supply	mA	160	
Current requirement X514 (at 24 V DC) without digital outputs and sensor power supply	mA	38	
Sensor power supply with and without forced dormant en	ror detectio	n (L1+, L2+, L3+)	
Voltage	V	24	
Max. load current per output	А	0.5	
Max. cable length for the 24 V supply: For longer cable lengths, surge protection device "Weidmüller type No. MCZ OVP TAZ DIODE 24 VDC" should be used.	m	30	
Power loss	W	4.5 at 24 V	
PE/ground connection		At the housing with M4 screw	
Weight	kg	Approx. 0.9	

5.6 Terminal Module TM120

5.6.1 Description

The Terminal Module TM120 is a DRIVE-CLiQ component for safe electrically isolated temperature evaluation. It can be used for 1FN, 1FW6, and third-party motors in which the temperature sensors cannot be installed with safe electrical separation. The TM120 is installed in the control cabinet and can be snapped on to a DIN rail (EN 60715).

When a TM120 is being used, temperature evaluation and encoder evaluation functions are separated off from one another. The TM120 can detect the motor temperature via 4 channels with different temperature sensors. An encoder is evaluated using Sensor Modules (e.g. SMC.., SME..). This means that when connected to a Sensor Module SMC, the TM120 represents a control cabinet alternative to the SME120/SME125.

The TM120 contains the following interfaces:

Table 5-46	Overview of the TM120 interfaces
------------	----------------------------------

Туре	Quantity
DRIVE-CLiQ interfaces	2
Temperature sensor inputs	4

Terminal Modules

5.6 Terminal Module TM120

5.6.2 Interface description

5.6.2.1 Overview

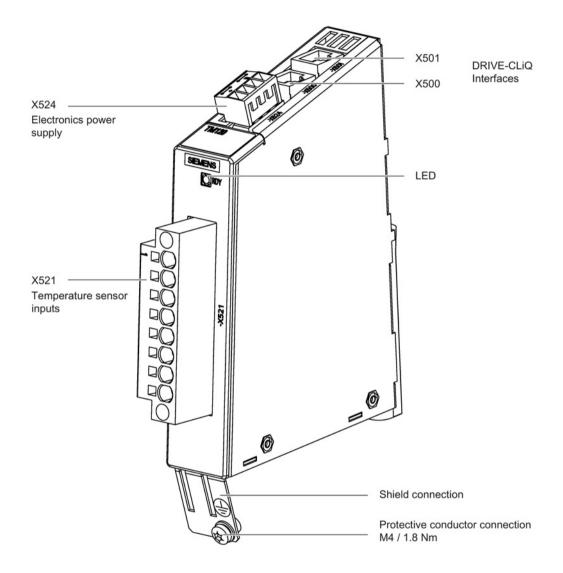


Figure 5-23 Interface overview TM120

5.6.2.2 X500/X501 DRIVE-CLiQ interfaces

	Pin Signal name		Technical data	
	1	ТХР	Transmit data +	
П В	2	TXN	Transmit data -	
* E ^t i	3	RXP	Receive data +	
	4	Reserved, do not use		
	5	Reserved, do not use		
	6	RXN	Receive data -	
	7	Reserved, do not use		
	8	Reserved, do not use		
	А	+ (24 V)	Power supply	
	В	M (0 V)	Electronics ground	
Connector type	DRIVE-CLiQ socket			

Table 5- 47 X500/X501: DRIVE-CLiQ interfaces

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery. Blanking covers (50 x) Article No.: 6SL3066-4CA00-0AA0

Note

The maximum DRIVE-CLiQ cable length is 100 m.

5.6.2.3 X521 temperature sensor input

Table 5- 48	X521: Temperature sensor input
	store in a composition of the part

	Terminal	Function	Technical data
	1	- Temp	Temperature sensor connection KTY84-1C130 / PT1000 /
	2	+ Temp	PTC /bimetallic switch with NC contact for linear motor applications, connect the KTY84-1C130 motor tempera- ture sensor here
	3	- Temp	Temperature sensor connection KTY84-1C130 / PT1000 /
	4	+ Temp	PTC /bimetallic switch with NC contact for linear motor applications, connect the PTC triple element 1 or bime- tallic switch here
	5	- Temp	Temperature sensor connection KTY84-1C130 / PT1000 /
	6	+ Temp	PTC /bimetallic switch with NC contact for linear motor applications, connect a PTC triplet 2 here
	7	- Temp	Temperature sensor connection KTY84-1C130 / PT1000 /
	8	+ Temp	PTC /bimetallic switch with NC contact for linear motor applications, connect a PTC triplet 3 here
Type: Spring-lo Measuring curre			nnection: 2 mA

5.6 Terminal Module TM120

NOTICE

Damage when using a non-specified temperature sensor

If sensors other than those specified are connected, this may result in incorrect measured values. Damage can result if overheating is not detected.

• Only connect temperature sensors that have been specified for operation with a TM120 Terminal Module.

NOTICE

Overheating of the motor through jumpering the temperature sensor connections

Jumpering of the temperature sensor connections "+ Temp" and "- Temp" results in incorrect measurement results. Damage to the motor can result if the overheating is not detected.

 When using several temperature sensors, separately connect the individual sensors to "+ Temp" and "- Temp".

The table below shows the preferable assignment of the connecting terminal for the temperature sensor input:

Table 5-49	Preferable assignment, X521 temperature sensor input
------------	--

	Signal name	Meaning			
Terminal	1FW6	1FN3 (2x1FN3)	1FN1	Segment motor 4 segments	
1	KTY N ¹⁾	KTY N ¹⁾	KTY N ¹⁾	1 PTC 120 °C	KTY, negative pole
2	KTY P ¹⁾	KTY P ¹⁾	KTY P ¹⁾	1 PTC 120 °C	KTY, positive pole
3	PTC 130 °C	PTC 120 °C	Bimetallic switch with NC contact	2_PTC 120 °C	PTC triple element 1 or bimetallic switch with NC contact
4	PTC 130 °C	PTC 120 °C	Bimetallic switch with NC contact	2_PTC 120 °C	
5	PTC 150 °C	(2_KTY_N) ¹⁾		3_PTC 120 °C	PTC triple element 2
6	PTC 150 °C	(2_KTY_P) ¹⁾		3_PTC 120 °C	
7		(2 PTC 120 °C)		4 PTC 120 °C	PTC triple element 3
8		(2 PTC 120 °C)		4 PTC 120 °C	

¹⁾ Instead of a KTY temperature sensor, a PT1000 temperature sensor can also be used.

The interconnection provided is a suggestion (software default setting). Which temperature sensor is connected to which input can be freely configured.

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

• Connect a KTY temperature sensor with the correct polarity.

Note

A 6FX7008-1BC.1 power cable is recommended for connecting KTY temperature sensors.

Note

The maximum length of the temperature sensor cable is 100 m. The cables must be shielded.

5.6.2.4 X524 Electronics power supply

Table 5- 50 X524: Electronics power supply

	Terminal	Designation	Technical data	
 + 	+	Electronics power supply	Voltage: 24 V DC (20.4 V – 28.8 V)	
	+	Electronics power supply	Current consumption (max./typ.): 0.5 A /	
	М	Electronics ground	0.1 A	
	Μ	Electronics ground	Max. current through the jumper in the connector: 20 A (15 A according to UL/CSA)	
Type: Screw terminal 2 (Page 331)				

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node.

5.6 Terminal Module TM120

5.6.3 Connection examples

Each TM120 is directly connected to an encoder evaluation unit (SMCxx or SMExx) by looping the corresponding DRIVE-CLiQ channel via the TM120. This ensures that encoders are automatically assigned to the temperature signals and, consequently, to the correct axis. The assignment can also be performed manually.

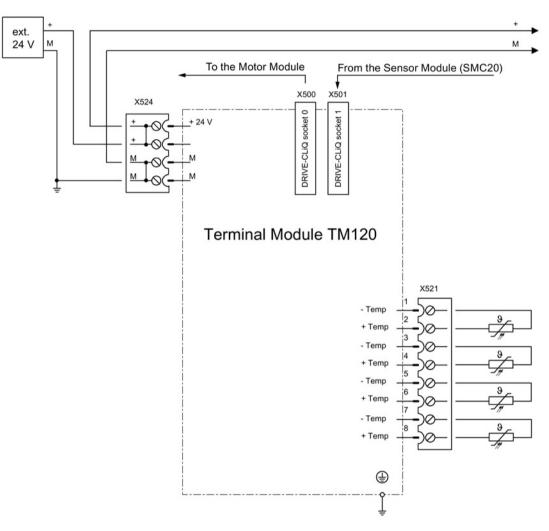


Figure 5-24 Connection example of TM120

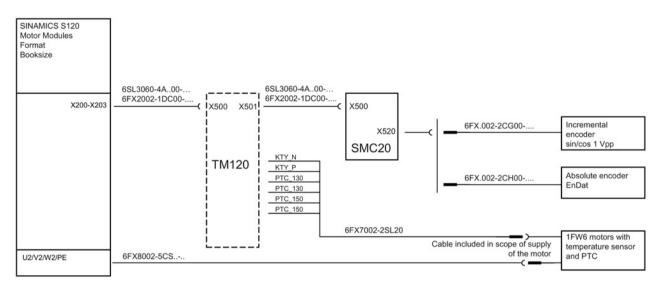


Figure 5-25 Connection example of TM120 with Motor Module and SMC20 (encoder evaluation)

5.6.4 Meaning of the LED

Table 5- 51	Meaning of the LEDs on the Terminal Module TM120
-------------	--

LED	Color	Status	Description, cause	Remedy
READY	-	Off	The electronics power supply is missing or outside the per- missible tolerance range.	Check the power supply.
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	-
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	-
	Red	Continuous light	This component has at least one fault. Note: The LED is activated irrespective of whether the correspond- ing messages have been reconfigured.	Remove and acknowledge the fault.
	Green/ red	Flashing light 0.5 Hz	Firmware is being downloaded.	-
		Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON.
	Green/ orange or red/ orange	Flashing light 2 Hz	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	-

¹⁾ The parameters for activating component recognition using LEDs can be taken from the following reference: Reference: /LH1/ SINAMICS S120/S150 List Manual 5.6 Terminal Module TM120

Cause and rectification of faults

Additional information about the cause and resolving faults can be taken from the following references:

- Reference:/LH1/SINAMICS S120/S150 List Manual
- Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER

5.6.5 Dimension drawing

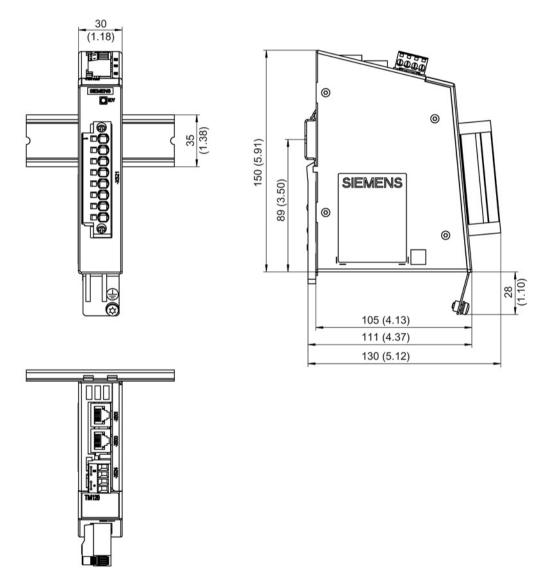


Figure 5-26 Dimension drawing of Terminal Module TM120, all data in mm and (inches)

5.6.6 Installation

Installation

- 1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
- 2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
- 3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

- 1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
- 2. Swivel the component to the front and withdraw it upwards from the DIN rail.

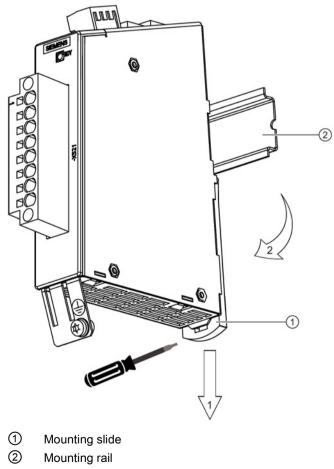



Figure 5-27 Removal of a TM120 from a DIN rail

Terminal Modules

5.6 Terminal Module TM120

5.6.7 Protective conductor connection and shield support

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

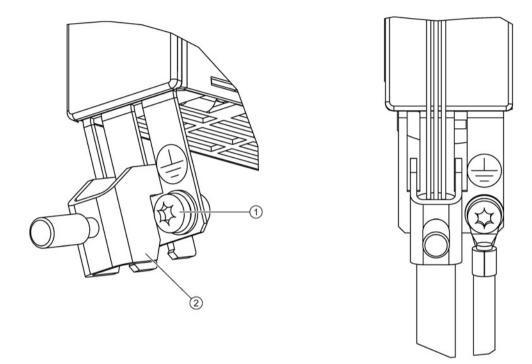

- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBUE CO1, Article number: 1753311001

Figure 5-28 Protective conductor connection and shield support

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

5.6.8 Technical data

6SL3055-0AA00-3KA.	Unit	Value
Electronics power supply		
Voltage	VDC	24 (20.4 28.8)
Current (without DRIVE-CLiQ)	A _{DC}	0.20/0.1 (typ.)
Power loss	W	2.4 (typ.)
Maximum cable length	m	30
PE/ground connection	At the housing with M4 screw	
Weight	kg	0.41

5.7 Terminal Module TM150

5.7.1 Description

The terminal module TM150 is a DRIVE-CLiQ component for temperature evaluation. The temperature is measured in a temperature range from -99 °C to +250 °C for the following temperature sensors:

- PT100 (with monitoring for wire breakage and short-circuit)
- PT1000 (with monitoring for wire breakage and short-circuit)
- KTY84 (with monitoring for wire breakage and short-circuit)
- PTC (with short-circuit monitoring)
- Bimetallic NC contact (without monitoring)

For the temperature sensor inputs, for each terminal block the evaluation can be parameterized for 1x2-wire,

2x2-wire, 3-wire or 4-wire. There is no galvanic isolation in the TM150.

The TM150 is mounted in the control cabinet and can be snapped on to a standard mounting rail (EN 60715).

The TM150 contains the following interfaces:

Table 5- 53Overview of the TM150 interfaces

Туре	Quantity
DRIVE-CLiQ interfaces	2
Temperature sensor inputs	12
Electronics power supply	1

Terminal Modules

5.7 Terminal Module TM150

5.7.2 Interface description

5.7.2.1 Overview

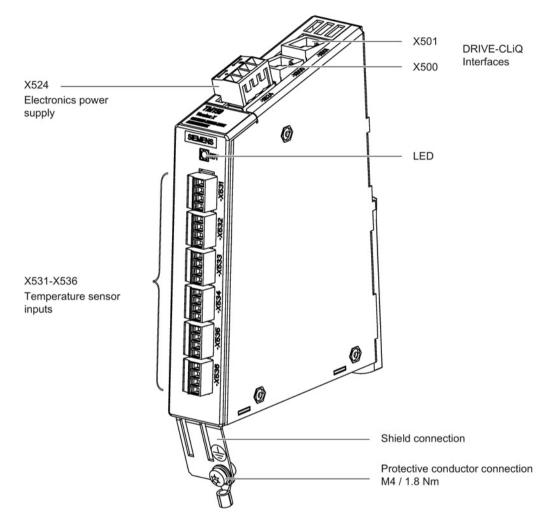


Figure 5-29 Interface overview of Terminal Module TM150

5.7.2.2 X500/X501 DRIVE-CLiQ interfaces

	Pin	Signal name	Technical data
	1	ТХР	Transmit data +
п в	2	TXN	Transmit data -
1° E L	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	А	+ (24 V)	Power supply, max. 450 mA
	В	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

Table 5- 54 X500/X501: DRIVE-CLiQ interfaces

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.

Blanking covers (50 units), article number: 6SL3066-4CA00-0AA0

Note

The maximum DRIVE-CLiQ cable length is 100 m.

5.7.2.3 X524 Electronics power supply

Table 5- 55 X524: Electronics power supply

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 V – 28.8 V)
	+ M	Electronics power supply	Current consumption (max./typ.): 0.5 A /
□ +		Electronics ground	
∐ ≤	М	Electronics ground	Max. current through the jumper in the connector: 20 A (15 A according to UL/CSA)
Type: Screw terminal 2 (Page 331)			

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node.

5.7 Terminal Module TM150

5.7.2.4 X531-X536 temperature sensor inputs

Terminal	Function 1x2- / 2x2-wire	Function 3 and 4-wire	Technical data
1	+Temp (channel x)	+ (Channel x)	Temperature sensor connection for sensors with 1x2 wires
			Connection of the 2nd measuring cable for sensors with 4 wires.
2	-Temp (channel x)	- (Channel x)	Temperature sensor connection for sensors with 1x2 wires
			Connection of the 1st measuring cable for sensors with 3 and 4 wires.
3	+Temp (channel y)	+ I _c (constant current, positive channel x)	Temperature sensor connection for sensors with 2x2, 3 and 4-wires
4	-Temp (channel y)	- I _c (constant current, nega- tive channel x)	

Table 5- 56 X531-X536: Temperature sensor inputs

Measuring current via temperature sensor connection: approx. 0.83 mA

When connecting temperature sensors with 3 wires, a jumper must be inserted between X53□.2 and X53□.4 (□ = 1...6).

Terminal	Channel number [x] for 1x2, 3 and 4-wires	Channel number [y] for 2x2 wires	
X531	0	6	
X532	1	7	
X533	2	8	
X534	3	9	
X535	4	10	
X536	5	11	

Table 5- 57 Channel assignment

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

Connect a KTY temperature sensor with the correct polarity.

NOTICE

Overheating of the motor through jumpering the temperature sensor connections

Jumpering temperature sensor connections "+Temp" and "-Temp" results in incorrect measurement results. Damage to the motor can result if the overheating is not detected.

• When using several temperature sensors, separately connect the individual sensors to "+Temp" and "-Temp".

NOTICE

Device failure as a result of unshielded or incorrectly routed cables to temperature sensors

Unshielded or incorrectly routed cables to temperature sensors can result in interference being coupled into the signal processing electronics from the power side. This can result in significant disturbance of all signals (fault messages) up to failure of individual components (destruction of the devices).

- Only use shielded cables as temperature sensor cables.
- If temperature sensor cables are routed together with the motor cable, use separately shielded cables twisted in pairs.
- Connect the cable shield at both ends to ground potential through a large surface area.
- Recommendation: Use suitable Motion Connect cables.

Note

Incorrect temperature measured values as a result of cables with an excessively high resistance

An excessively long cable length or an excessively small cable cross-section can falsify the temperature measurement (for a PT100, 10 Ω cable resistance can falsify the measurement result by 10%). As a consequence, excessively high measured values are output, which could lead to the motor being unnecessarily tripped prematurely.

- Use only cable lengths ≤ 300 m.
- For cable lengths >100 m, use cables with a cross-section of ≥1 mm².

5.7 Terminal Module TM150

5.7.3 Connection examples

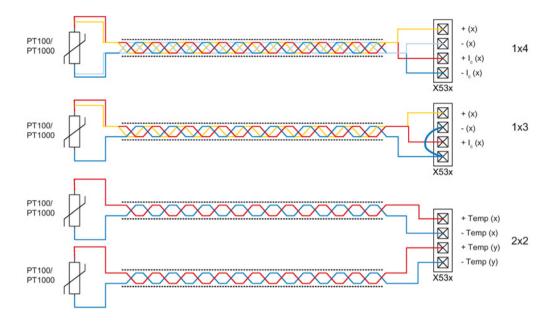


Figure 5-30 Connecting a PT100/PT1000 with 2x2, 3 and 4-wires to the temperature sensor inputs X53. of Terminal Module TM150

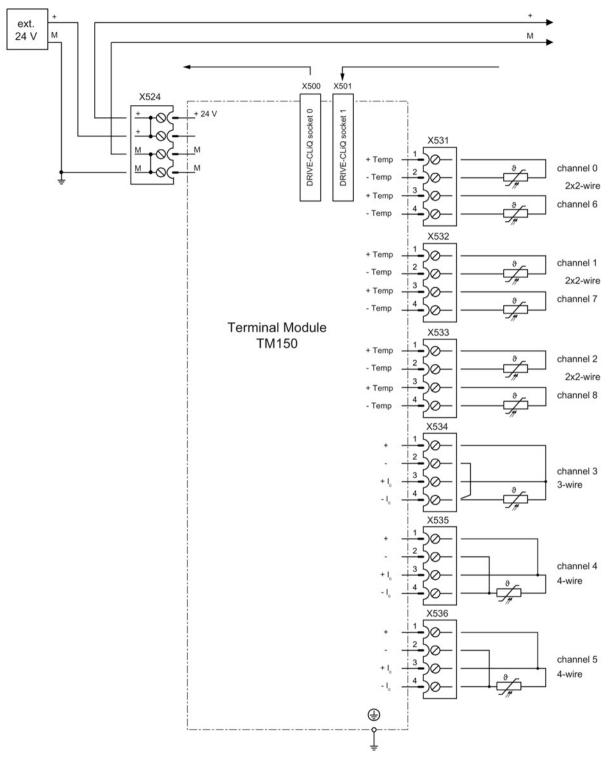


Figure 5-31 Connection example for a Terminal Module TM150

5.7 Terminal Module TM150

5.7.4 Meaning of the LED

LED	Color	Status	Description, cause	Remedy
READY	READY – Off Green Continu- ous light		The electronics power supply is missing or outside the per- missible tolerance range.	Check the power sup- ply.
			The component is ready for operation and cyclic DRIVE- CLiQ communication is taking place.	-
	Orange	Continu- ous light	DRIVE-CLiQ communication is being established.	_
	Red	Continu- ous light	This component has at least one fault. Remark: LED is controlled irrespective of the corresponding messag- es being reconfigured.	Remove and acknowledge the fault.
	Green/ red	Flashing light 0.5 Hz	Firmware is being downloaded.	_
		Flashing light 2 Hz	Firmware has been downloaded. The system waits for POWER ON.	Carry out a POWER ON
	Green/ orange or red/ orange	Flashing light 2 Hz	Component recognition via LED is activated ¹⁾ . Remark: Both options depend on the LED status when component recognition is activated.	-

Table 5-58 Meaning of the LEDs at the Terminal Module TM150


¹⁾ The parameters for activating component recognition using LEDs can be taken from the following reference: Reference: /LH1/ SINAMICS S120/S150 List Manual


Cause and rectification of faults

Additional information about the cause and resolving faults can be taken from the following references:

- Reference:/LH1/SINAMICS S120/S150 List Manual
- Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER

5.7.5 Dimension drawing

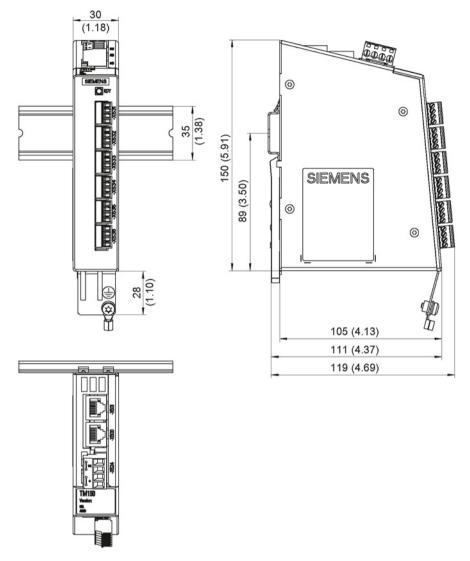

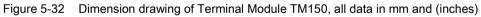

5.7 Terminal Module TM150


5.7.6 Installation

Installation

- 1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
- 2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
- 3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal


- 1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
- 2. Swivel the component to the front and withdraw it upwards from the DIN rail.

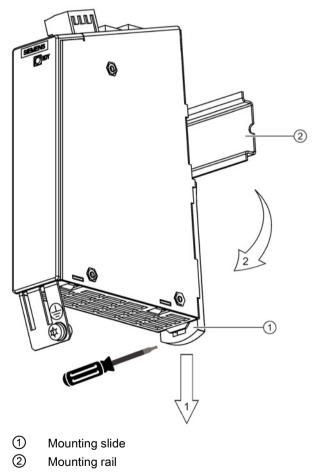



5.7.7 Protective conductor connection and shield support

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

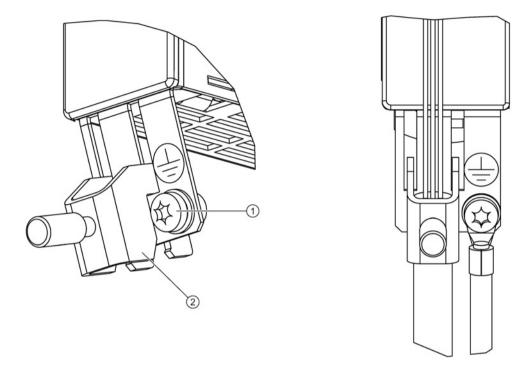

- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBUE CO1, Article number: 1753311001

Figure 5-34 Protective conductor connection and shield support

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

5.7 Terminal Module TM150

5.7.8 Technical data

Table 5- 59 Technical data

6SL3055-0AA00-3LA0	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20.4 28.8)
Current (without DRIVE-CLiQ)	A _{DC}	0.07
Power loss	W	1.6
Maximum cable length	m	30
PE/ground connection	At the housing with M4 screw	
Weight	kg	0.4

Hub Modules

6.1 Safety instructions for Hub Modules

Danger to life if the fundamental safety instructions and remaining risks are not carefully observed

If the fundamental safety instructions and remaining risks in Chapter 1 (Page 19) are not observed, accidents involving severe injuries or death may occur.

- · Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.

NOTICE

Damage through use of incorrect DRIVE-CLiQ cables

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

 Only use suitable DRIVE-CLiQ cables that have been approved by Siemens for the particular application.

Note

Function equipotential bonding for distributed DRIVE-CLiQ nodes

Integrate all of the components that are connected via DRIVE-CLiQ in the functional equipotential bonding concept. The connection should be preferably established by mounting on metallic bare machine and plant components that are connected with one another using an equipotential bonding conductor.

Alternatively, you can establish equipotential bonding using a conductor (min. 6 mm²), which as far as possible, is routed in parallel to the DRIVE-CLiQ cable. All distributed DRIVE-CLiQ nodes are involved, for example DME20, SME20, SME25, SME120, SME125 etc.

Note

Malfunctions due to polluted DRIVE-CLiQ interfaces

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.

6.2 DRIVE-CLiQ Hub Module DMC20

6.2 DRIVE-CLiQ Hub Module DMC20

6.2.1 Description

The DRIVE-CLiQ Hub Module DMC20 is an expansion module for snapping on to a standard mounting rail acc. to EN 60715. It is used to distribute a DRIVE-CLiQ line with a star-type topology. With the DMC20, an axis grouping can be expanded with 5 DRIVE-CLiQ sockets for additional subgroups.

The component is especially suitable for applications which require DRIVE-CLiQ nodes to be removed in groups, without interrupting the DRIVE-CLiQ line and, therefore, the data exchange process.

Risk of fire through overheating if there are insufficient ventilation clearances

Insufficient ventilation clearances lead to overheating with associated risk to persons as a result of smoke and fire. This can also result in more downtimes and a reduced service life for the Hub Module.

• For this reason, it is imperative that you maintain the 50 mm clearances above and below the Hub Module.

6.2.2 Interface description

6.2.2.1 Overview

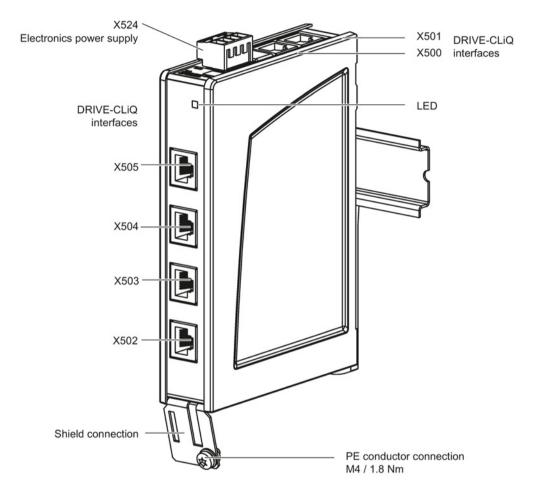


Figure 6-1 Interface overview of the DMC20

6.2 DRIVE-CLiQ Hub Module DMC20

6.2.2.2 X500-X505 DRIVE-CLiQ interfaces

	Pin	Signal name	Technical data	
	1	ТХР	Transmit data +	
П В	2	TXN	Transmit data -	
	3	RXP	Receive data +	
	4	Reserved, do not use		
	5	Reserved, do not use		
	6	RXN	Receive data -	
	7	Reserved, do not use		
	8	Reserved, do not use		
	А	+ (24 V)	Power supply	
	В	M (0 V)	Electronics ground	
Connector type	DRIVE-CLiQ socket			

Table 6-1 X500-X505: DRIVE-CLiQ interfaces

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.

Blanking covers (50 x) Article No.: 6SL3066-4CA00-0AA0

Note

Only MOTION-CONNECT DRIVE-CLiQ cables may be used to establish connections. The maximum length of MOTION-CONNECT 500 is 100 m and for MOTION-CONNECT 800PLUS cables, 75 m.

6.2.2.3 X524 Electronics power supply

Table 6-2	X524: Electronics power supply
-----------	--------------------------------

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 28.8 V)
	+	Electronics power supply	Current consumption: max. 2.4 A
 ≑ +]	М	Electronics ground	Max. current through the jumper in the
	М	Electronics ground	connector: 20 A (15 A according to UL/CSA)
Type: Screw te	Type: Screw terminal 2 (Page 331)		

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ participants.

6.2.3 Meaning of the LED

LED	Color	Status	Description, cause	Remedy
READY	-	Off	The electronics power supply is missing or outside the per- missible tolerance range.	-
	Green	Continu- ous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	-
	Orange	Continu- ous light	DRIVE-CLiQ communication is being established.	-
	Red	Continu-	This component has at least one fault.	Remove and
		ous light	Note:	acknowledge the fault.
			LED is controlled irrespective of the corresponding messages being reconfigured.	
	Green/red	Flashing light 0.5 Hz	Firmware is being downloaded.	_
		Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON.
	Green/ orange	Flashing light	Component recognition via LED is activated (p0154 = 1). Note:	-
	or		Both options depend on the LED status when component	
	Red/		recognition is activated.	
	orange			

Table 6-3 Description of the LEDs on the DRIVE-CLiQ Hub Module DMC20

Cause and rectification of faults

Additional information about the cause and resolving faults can be taken from the following references:

- Reference:/LH1/SINAMICS S120/S150 List Manual
- Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER

Hub Modules

6.2 DRIVE-CLiQ Hub Module DMC20

6.2.4 Dimension drawing

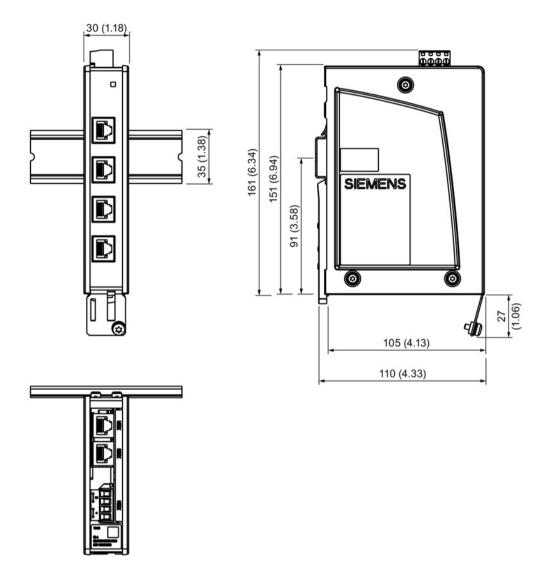


Figure 6-2 Dimension drawing of the DRIVE-CLiQ Hub Module DMC20, all data in mm and (inches)

6.2.5 Installation

Installation


- 1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
- 2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
- 3. Slide the components along the mounting rail to either the left or right up to their final position.

Hub Modules

6.2 DRIVE-CLiQ Hub Module DMC20

Removal


- 1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
- 2. Swivel the component to the front and withdraw it upwards from the DIN rail.

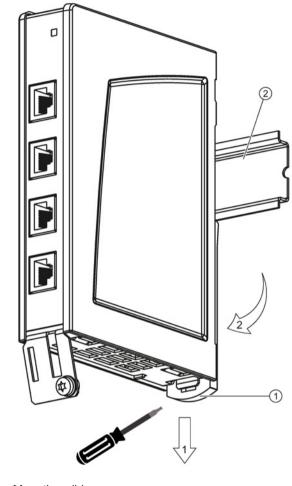

- ① Mounting slide
- ② Mounting rail
- Figure 6-3 Removing from a DIN mounting rail

6.2.6 Protective conductor connection and shield support

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

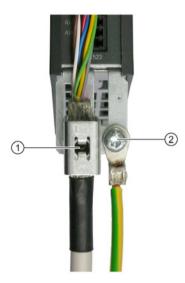

- Shield connection terminal, Weidmüller company, type: KLBUE CO1, Article number: 1753311001
- 2 Protective conductor connection M4 / 1.8 Nm

Figure 6-4 Protective conductor connection and shield support

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

6.2.7 Technical data

Table 6- 4	Technical data	of the DMC20

6SL3055-0AA00-6AA1	Unit	Value
Electronics power supply		
Voltage	VDC	24 V DC (20.4 28.8)
Current (without DRIVE-CLiQ node)	A _{DC}	0.15
Maximum cable length	m	30
PE/ground connection	At the housing w	ith M4 screw
Weight	kg	0.36

6.3 DRIVE-CLiQ Hub Module External DME20

6.3.1 Description

The DRIVE-CLiQ Hub Module External DME20 is used to implement star-shaped distribution of a DRIVE-CLiQ line. With the DME20, an axis grouping can be expanded with 5 DRIVE-CLiQ sockets for additional subgroups.

The component has degree of protection IP67 and is especially suitable for applications which require DRIVE-CLiQ nodes to be removed in groups, without interrupting the DRIVE-CLiQ line and therefore the data exchange.

NOTICE

Damage due to leaking plug connections

If IP67 protection is not ensured, water or dirt can enter and lead to damage.

• Ensure that all connectors are correctly screwed into place and appropriately locked.

6.3.2 Interface description

6.3.2.1 Overview

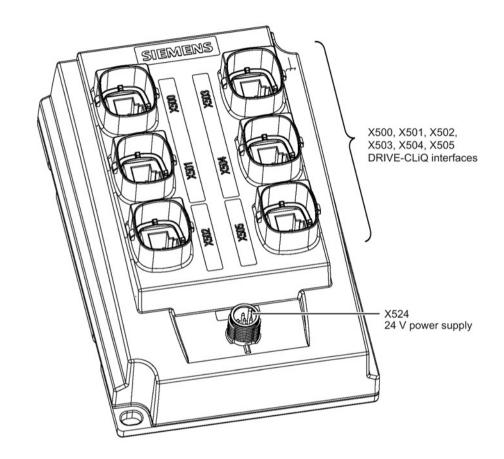


Figure 6-5 Interface overview of the DME20

6.3.2.2 X500-X505 DRIVE-CLiQ interfaces

	Pin	Signal name	Technical data	
	1	ТХР	Transmit data +	
г в	2	TXN	Transmit data -	
* The second sec	3	RXP	Receive data +	
	4	Reserved, do not use		
	5	Reserved, do not use		
	6	RXN	Receive data -	
	7	Reserved, do not use		
	8	Reserved, do not use		
	A	+ (24 V)	Power supply	
	В	M (0 V)	Electronics ground	
Connector type	DRIVE-C	CLiQ socket		

Table 6-5 X500-X505: DRIVE-CLiQ interfaces

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery. Blanking covers (6 units), article number: 6SL3066-4CA01-0AA0

Note

Only MOTION-CONNECT DRIVE-CLiQ cables may be used to establish connections. The maximum length of MOTION-CONNECT 500 is 100 m and for MOTION-CONNECT 800PLUS cables, 75 m.

6.3.2.3 X524 Electronics power supply

Table 6- 6 X524: Electronics power supply

	Pin	Designation	Technical data	
	1	Electronics power supply	The connection voltage of 20.4 V to	
2	2	Electronics power supply	28.8 V refers to the (terminal) voltage at	
	3	Electronics ground	the DME20. This must be taken into account when selecting the cable cross-	
	4	Electronics ground	section and supply cable lengths.	
40	5	not connected	Pins 1 and 2: jumpered internally Pins 3 and 4: jumpered internally	
5-pin socket, max. connectable cross-section: 4 x 0.75 mm ²				

Note

The maximum cable length for the 24 V supply of the DME20 is 100 m.

If a UL-compliant design is not required, the use of the following cables and connectors from Siemens is recommended:

Pre-assembled cables

Connecting cable for power supply with M12 plug and M12 socket, A-coded, 4-pin, Article number: 6XV1801-5D..

Cables to be assembled by the user

Cable	Connector
24 V DC cable,	M12 plug connector,
2-wire, 2 x 0.75 mm ² ,	4-pin, A-coded,
Article number: 6XV1812-8A	Article number: 6GK1907-0DC10-6AA3

Table 6-7 Cable length P24 supply cable

Connected loads ¹⁾ m	1	2	3	4	5
Cross-section					
0.34 mm ²	75 m	45 m	30 m	25 m	20 m
2 x 0.34 mm²	100 m	90 m	65 m	50 m	40 m
0.75 mm ²	100 m	100 m	75 m	60 m	50 m
2 x 0.75 mm²	100 m				
T _a = 55 °C 100 m DRIVE-CLiQ	·				·

1) Connected motors with DRIVE-CLiQ encoder, DRIVE CLiQ mounted encoder SME

Hub Modules

6.3 DRIVE-CLiQ Hub Module External DME20

6.3.3 Dimension drawing


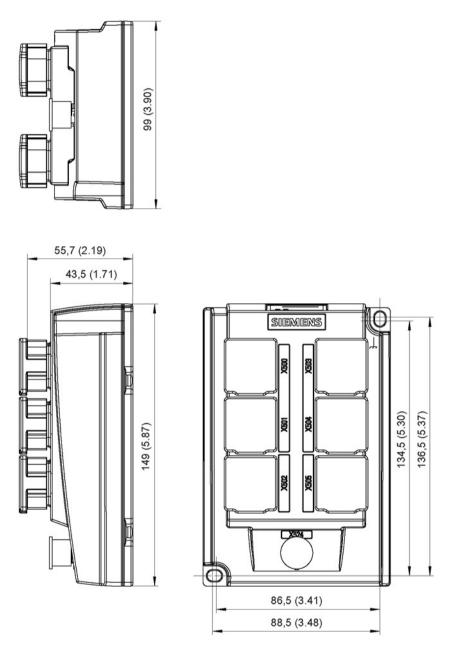


Figure 6-6 Dimension drawing of the DRIVE-CLiQ Hub Module External DME20, all data in mm and (inches)

6.3.4 Installation

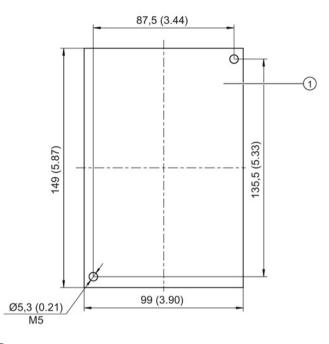

Contact surface

Figure 6-7 Mounting dimensions DME20

Installation

- 1. Place the drilling pattern on the mounting surface. Make sure that the contact surface is bare, unpainted metal.
- 2. Drill two holes with Ø 5.3 or M5 threaded holes according to the drilling pattern.
- 3. Mount the DME20 DRIVE-CLiQ Hub Module External on the contact surface. The tightening torque is 6.0 Nm.

6.3.5 Technical data

6SL3055-0AA00-6AB.	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20.4 28.8)
Current (without DRIVE-CLiQ node)	ADC	0.15
PE/ground connection	Screwed to the housing M5	
Weight	kg	0.8

6.3.6 Specifications for use with UL approval

Pre-assembled cables

Sensor/actuator cable, 5-pin, variable cable, free cable end at straight socket M12-SPEEDCON, cable length: 2, 5, 10, 15 m SAC-5P-...-186/FS SCO Up to 100 m on request

Phoenix Contact

Cables to be assembled by the user

Cable	Connector			
Cable coil, black PUR/PVC, 5-pin Conductor colors: brown/white/blue/black/gray Cable length: 100 m SAC-5P-100.0-186/0.75 Article number: 1535590	Sensor/actuator connector, socket, straight, 5-pin, M12, A-coded Screw connection, metal knurl, cable gland Pg9 SACC-M12FS-5CON-PG9-M Article number: 1681486			
Phoenix Contact				

Power supply

The DME20 must use one of the following 24 V power supplies with voltage limiting:

- SITOP 6EP1x.. or 6ES7307..
- SINAMICS Control Supply Module 6SL3100-1DE22-0A...

Cable pin assignment

Table 6-9 Connection to X524 electronics power supply

	Pin	Designation	Technical data
$ \begin{array}{c} 2 \\ 3 \\ 0 \\ 4 \\ 0 \end{array} $	1 (brown) ¹⁾	Electronics power supply	The supply voltage of 20.4 V 28.8 V refers to the
	2 (white) 1)	Electronics power supply	(terminal) voltage at the DME20. This must be taken
	3 (black) 1)	Electronics ground	into account when selecting the cable cross-section and supply cable lengths.
	4 (blue) 1)	Electronics ground	Pins 1 and 2: jumpered internally
	5 (gray) ¹⁾	Not connected internally	Pins 3 and 4: jumpered internally

¹⁾ The colors refer to the cable specified above

Voltage Sensing Module VSM10

7.1 Description

The Voltage Sensing Module VSM10 is an expansion module for snapping on to a standard mounting rail acc. to EN 60715. It is used to sense the actual value of a voltage. For example, it can be used to sense the three-phase line supply voltage, which is then provided to the closed-loop control. The phase differential voltage can be measured, either grounded (in the delivery state) or isolated.

The Voltage Sensing Module can be used for the following line types:

- Up to 600 V 3-ph. AC for all line types
- Up to 690 V 3-ph. AC for networks with grounded start point and IT networks

A 100 V 3-ph. AC input is available for transducer transformers. It is not permissible to use both voltage connections simultaneously!

For booksize units, these components can be optionally used to increase the degree of ruggedness against irregularities in the line supply.

A VSM is already integrated for Active Interface Modules Chassis and Smart Line Modules Chassis.

In addition to the voltage sensing, a temperature sensor can be connector to the VSM10 to thermally monitor the line reactor. Further, the functionality of the line filter can checked using two analog inputs. All data recorded are transferred to the higher-level system via DRIVE-CLiQ.

The Voltage Sensing Module achieves radio interference category C2 with limit classes A1 for interference voltage and A for emitted interference.

Туре	Quantity
Analog inputs	2
Voltage connection (690 V)	1 (3-phase)
Voltage connection (100 V)	1 (3-phase)
Temperature sensor input (KTY/PT1000/PTC)	1
Neutral point grounding	1
DRIVE-CLiQ interface	1

Table 7-1 Interface overview of the VSM10

7.2 Safety instructions for the Voltage Sensing Module (VSM10)

7.2 Safety instructions for the Voltage Sensing Module (VSM10)

Danger to life if the fundamental safety instructions and remaining risks are not carefully observed

If the fundamental safety instructions and remaining risks in Chapter 1 (Page 19) are not observed, accidents involving severe injuries or death may occur.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.

Risk of fire through overheating if there are insufficient ventilation clearances

Insufficient ventilation clearances lead to overheating with associated risk to persons as a result of smoke and fire. This can also result in more downtimes and reduced service lives of the Voltage Sensing Module.

• For this reason, it is imperative that you maintain the 50 mm clearances above and below the Voltage Sensing Module.

NOTICE

Destruction of the VSM10 as a result of voltage measurements incorrectly carried out

If the voltage measurement is carried out incorrectly, the VSM10 can be destroyed as a result of the high voltage stress across the insulating clearance.

• When using long motor cables, it is not permissible that the output voltage of the Motor Module is directly measured at the motor.

NOTICE

Destruction of the VSM10 as a result of a terminal assignment which is not permissible

The VSM10 has two terminal strips, X521 and X522, to sense the three-phase line supply voltage. A terminal assignment which is not permissible results in the module being destroyed.

- Use just one of the two terminal strips.
- Only connect voltages to terminal strip X521 up to a maximum 100 V (phase-to-phase) via a transformer.
- Only connect voltages to terminal strip X522 up to a maximum 690 V (phase-to-phase) directly.

7.2 Safety instructions for the Voltage Sensing Module (VSM10)

NOTICE

Damage through use of incorrect DRIVE-CLiQ cables

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

 Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

Note

Function equipotential bonding for distributed DRIVE-CLiQ nodes

Integrate all of the components that are connected via DRIVE-CLiQ in the functional equipotential bonding concept. The connection should be preferably established by mounting on metallic bare machine and plant components that are connected with one another using an equipotential bonding conductor.

Alternatively, you can establish equipotential bonding using a conductor (min. 6 mm²), which as far as possible, is routed in parallel to the DRIVE-CLiQ cable. All distributed DRIVE-CLiQ nodes are involved, for example DME20, SME20, SME25, SME120, SME125 etc.

Note

Malfunctions due to polluted DRIVE-CLiQ interfaces

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

• Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.

Note

Malfunctions when using various generations of the VSM10 with parallel infeed

When connecting infeeds in parallel, only Voltage Sensing Modules of the same generation may be used (either 6SL3053-0AA00-3AA0 or 6SL3053-0AA00-3AA1), as otherwise malfunctions can occur.

• Especially when replacing a VSM10 (Page 226)it is important that all of the other VSM10 connected in parallel are replaced.

7.3 Interface description

7.3 Interface description

7.3.1 Overview

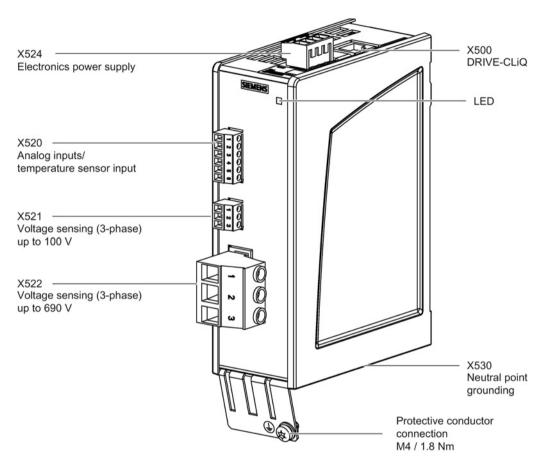


Figure 7-1 Interface overview of the VSM10

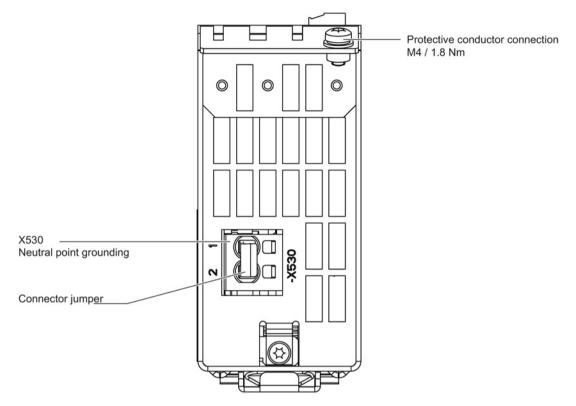


Figure 7-2 X530 interface at the VSM10 (view from below)

7.3.2 X500 DRIVE-CLiQ interface

Table 7-2 X500: DRIVE-CLiQ interface

	Pin	Signal name	Technical data	
	1	ТХР	Transmit data +	
	2	TXN	Transmit data -	
	3	RXP	Receive data +	
	4	Reserved, do not use		
	5	Reserved, do not use		
	6	RXN	Receive data -	
	7	Reserved, do not use		
	8	Reserved, do not use		
	А	+ (24 V)	Power supply	
	В	M (0 V)	Electronics ground	
Connector type	DRIVE-CLiQ socket			

The blanking cover for the DRIVE-CLiQ port is included in the scope of delivery.

Blanking covers (50 x) Article No.: 6SL3066-4CA00-0AA0

7.3 Interface description

7.3.3 X520 analog inputs/temperature sensor

	Terminal	Designation	Technical data
	1	AI 0-	2 analog differential inputs
	2	AI 0+	Voltage: -10 … +10 V; Ri > 100 kΩ Resolution: 12 bits + sign
	3	AI 1-	
	4	AI 1+	
	5	+ Temp ¹⁾	Temperature sensor KTY84-1C130 / PT1000 / PTC Measuring current via temperature sensor connection: 2 mA
	6	- Temp 1)	
Type: Screw to	erminal 1 (Page	331)	

Table 7-3 X520: Analog inputs/temperature sensor

¹⁾ Accuracy of the temperature measurement:

- KTY: ±7 °C (including evaluation)

- PT1000: ±5 °C (PT1000 tolerance class B according to DIN EN 60751 including evaluation)

- PTC: ±5 °C (including evaluation)

Note

Permissible voltage values

The common mode range must not be violated in order to avoid incorrect analog-digital conversion results. The following voltages are permissible:

- Input voltage: ±30 V (destruction limit)
- Common mode voltage: ±10 V with respect to ground potential (increased errors when exceeded)

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

Connect a KTY temperature sensor with the correct polarity.

Note

In order to minimize noise emission, shielded cables should be used.

Note

The maximum cable length for a shielded cable applied on both sides to the temperature sensor and to the analog inputs is 30 m.



Danger to life due to electric shock in the event of voltage flashovers on the temperature sensor cable

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Only use temperature sensors that fully comply with the specifications of the safety isolation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

7.3.4 X521 three-phase voltage sensing up to 100 V 3-ph. AC

Table 7-4	X521: Voltage sensing 100 V	

	Terminal	Designation	Technical data
	1	Phase voltage U	Connection to the voltage sensing for medi-
	2	Phase voltage V	um-voltage networks via a safe electrically
	3	Phase voltage W	 isolated transformer Resistance to neutral point: ~500 kΩ Insulation resistance, neutral point - ground when the jumper is not inserted: >10 MΩ
Type: Screw	erminal 1 (Pa	ge 331)	

NOTICE

Damage to the VSM10 as a result of an impermissible terminal assignment

The VSM10 has two terminal strips, X521 and X522, to sense the three-phase line supply voltage. A terminal assignment which is not permissible results in the module being damaged.

- Use just one of the two terminal strips.
- Only connect voltages to terminal strip X521 up to a maximum 100 V (phase-to-phase) via a transformer.
- Only connect voltages to terminal strip X522 up to a maximum 690 V (phase-to-phase) directly.

7.3 Interface description

7.3.5 X522 three-phase voltage sensing up to 690 V 3-ph. AC

	Terminal	Designation	Technical data
	1	Phase voltage U	Directly connected to the line voltage sens-
	2	Phase voltage V	ing
	3	Phase voltage W	Resistance to neutral point: ~3500 kΩ
2 3			Insulation resistance, neutral point - ground when the jumper is not inserted: >10 M Ω

Table 7- 5X522: Voltage sensing 690 V

Type: Screw terminal 5 (Page 331)

NOTICE

Damage to the VSM10 as a result of an impermissible terminal assignment

The VSM10 has two terminal strips, X521 and X522, to sense the three-phase line supply voltage. A terminal assignment which is not permissible results in the module being damaged.

- Use just one of the two terminal strips.
- Only connect voltages to terminal strip X521 up to a maximum 100 V (phase-to-phase) via a transformer.
- Only connect voltages to terminal strip X522 up to a maximum 690 V (phase-to-phase) directly.

NOTICE

Damage to the VSM10 through overcurrent with an incorrect connection sequence

Enabling the Line Module with an incorrect connection sequence results in overcurrent.

 Connect the line phases to the VSM10 in the same sequence as the one to the Line Module.

Note

Line voltage tap

If the configuration has a line filter, then the phase voltages for the VSM (X522) must be taken from in front of the line filter. If the configuration does not have a line filter, then X522 must be connected to the line side of the line reactor (voltages are taken from in front of the line reactor).

7.3.6 X524 Electronics power supply

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 28.8 V)
	+	Electronics power supply	Current consumption: max. 0.2 A
 ≑ +]	М	Electronics ground	
∐ ≤	М	Electronics ground	Max. current through the jumper in the connector: 20 A
Type: Screw	terminal 3 (Pag	e 331)	•

Table 7- 6	X524: Electronics power supply
------------	--------------------------------

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

7.3.7 X530 neutral point grounding

Table 7- 7	X530: Neutral point grounding
------------	-------------------------------

	Terminal	Designation	Technical data	
	1	Neutral point of the voltage sensing	Jumper inserted: Grounded meas- urement	
1 2	2	Ground potential	Jumper not inserted: isolated meas- urement	
Type: Spring-loaded terminal 5 (Page 331)				

The Voltage Sensing Module is supplied with inserted jumper. When delivered, the neutral point is connected to the protective conductor via the connector jumper. Current can flow to PE. This connection is removed by removing the connector jumper. The measurement is then electrically isolated.


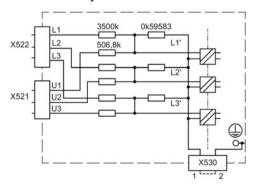


Figure 7-3 Internal circuit of the Voltage Sensing Module VSM10

7.4 Connection example

7.4 Connection example

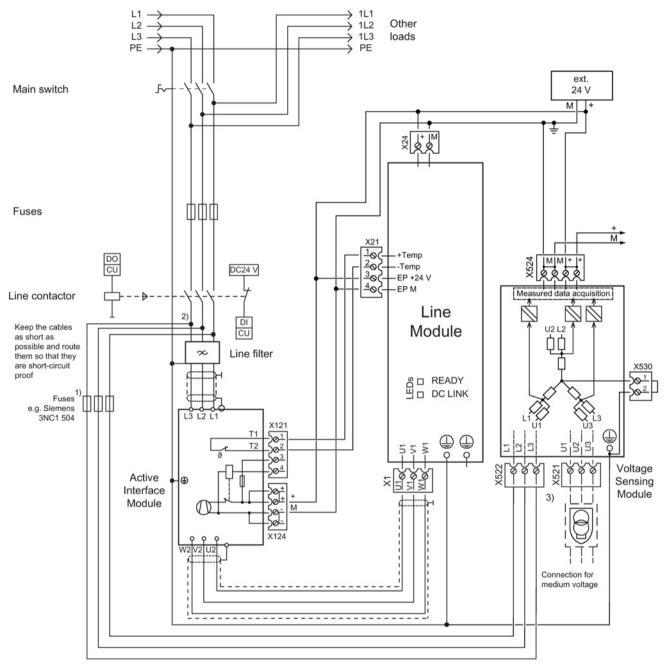

- 1) It is only possible to omit the fuses if the cables to the Voltage Sensing Module are routed so that no short-circuit or ground fault can be expected under normal operating conditions (short-circuit proof routing).
- 2) Tap the line voltage as actual value for the Voltage Sensing Module VSM10 corresponding to the system design, for example refer to the table.
- 3) Only one of the two terminals X521 and X522 may be used at one time!
- Figure 7-4 Connection example for the VSM10 to measure the line voltage

Conductor cross-section	Connection via	For components	
Up to 6 mm ²	Direct connection possible	Smart Line Modules 5 kW and 10 kW	
6 mm ² to 16 mm ²	ST16-TWIN terminal blocks, if required with a reducing jumper and ST4-TWIN or ST2.5-TWIN (Phoenix Contact company)	Active Line Modules 16 kW Smart Line Modules 16 kW Active Interface Module 16 kW	
16 mm ² to 50 mm ²	AGK10 UKH tap-off terminals with UKH terminals (Phoenix Contact company)	Active Line Modules 36 kW and 55 kW Smart Line Modules 36 kW and 55 kW Active Interface Module 36 kW and 55 kW	
> 50 mm ²	Ring cable lug without insulation (Page 333) 8 mm/2.5 mm ²	Components with M8 connection bolts Active Line Modules 55 kW, 80 kW, and	
	Intermediate high-current connector, type UHV (Phoenix Contact) and ring cable lug without insulation (Page 333) 8 mm/2.5 mm ²	120 kW Active Interface Module 80 kW and 120 kW	

Table 7-8 Suggestions for terminals and cable lugs which can be used to connect a VSM10 to the line

7.5 Meaning of the LED

LED	Color	Status	Description, cause	Remedy
READY	-	Off	The electronics power supply is missing or outside the per- missible tolerance range.	-
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	-
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	-
	Red	Continuous light	This component has at least one fault. Note: LED is controlled irrespective of the corresponding messag- es being reconfigured.	Remove and acknowledge the fault.
	Green/red	Flashing light 0.5 Hz	Firmware is being downloaded.	-
		Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON.
	Green/ orange	Flashing light	Detection of the component via LED is activated (p0144 = 1).	-
	or		Note:	
	Red/ orange		Both options depend on the LED status when component recognition is activated.	

Table 7-9 Meanings of the LEDs on the Voltage Sensing Module VSM10


Cause and rectification of faults


Additional information about the cause and resolving faults can be taken from the following references:

- Reference:/LH1/SINAMICS S120/S150 List Manual
- Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER

7.6 Dimension drawing

7.6 Dimension drawing

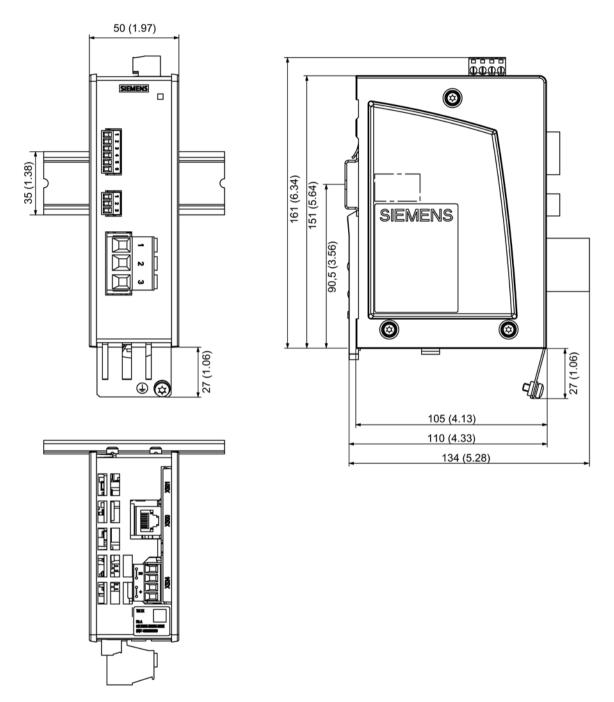

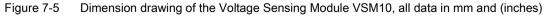

7.7 Installation

Installation

- 1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
- 2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
- 3. Slide the component along the mounting rail to either the left or the right into its final position.

Removal

- 1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
- 2. Swivel the component to the front and withdraw it upwards from the DIN rail.

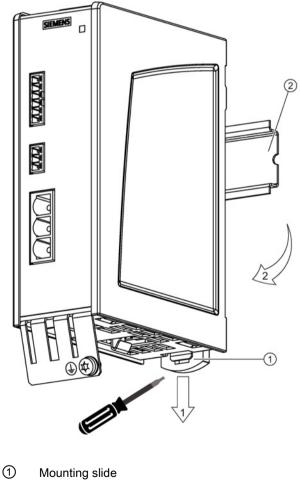


Figure 7-6 Removing from a DIN mounting rail


7.8 Protective conductor connection and shield support

7.8 Protective conductor connection and shield support

The following shield connection clamps can be used on the bottom part of the component housing for shield connection of the analog inputs:

Shield connection clamp		Article No.
Phoenix Contact	SK8	3025163
Phoenix Contact	SK14	3025176
Phoenix Contact	SK20	3025189
Weidmüller	KLBUE CO1	1753311001

The following pictures show the shield contacts with a shield connection clamp from Weidmüller.

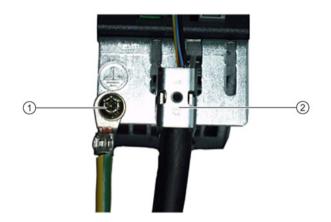

- 1 Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBUE CO1, Article number: 1753311001



NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.


- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

7.9 Operation on an isolated-neutral system (IT system)

7.9 Operation on an isolated-neutral system (IT system)

When using a Voltage Sensing Module on an insulated line supply (IT supply system), remove the connector jumper in terminal X530 at the lower side of the component.

Use two screwdrivers or a suitable tool in order to relieve the holding springs in the terminal and then withdraw the connector jumper.

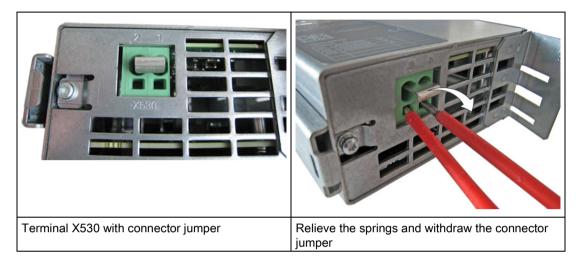

7.10 Technical data

6SL3053-0AA00-3AA1	Unit	Value
Electronics power supply		
Voltage Current (without DRIVE-CLiQ) Maximum cable length	V _{DC} A _{DC} m	24 (20.4 28.8) 0.3 30
Power loss	W	< 10
PE/ground connection	With M4 screw	
Weight	kg	1

7.11 Service and maintenance

7.11 Service and maintenance

Replacing the Voltage Sensing Module VSM10 in Smart Line Modules Chassis and Active Interface Modules Chassis

When using a Voltage Sensing Module VSM10 in an Active Interface Module Chassis or Smart Line Module Chassis, it is essential that you observe the following application cases:

1. Replacing a VSM10 with article number 6SL3053-0AA00-3AA0 by a VSM10 with article number 6SL3053-0AA00-3AA1:

It is NOT permissible that the connector jumper ① at terminal X530 at the lower side of the VSM10 is removed!



2. Replacing a VSM10 with article number 6SL3053-0AA00-3AA1 by a VSM10 with article number 6SL3053-0AA00-3AA1:

Proceed with the connector jumper ① at terminal X530 of the new VSM10 (spare part) just the same as at the previously installed VSM10.



Danger to life due to electric shock when incorrectly replacing spare parts

If you remove the connector jumper at terminal X530 when replacing a VSM10 with article number 6SL3053-0AA00-3AA0 by a VSM10 with article number 6SL3053-0AA00-3AA1, then a hazardous voltage is present in the Active Interface Module Chassis or Smart Line Module Chassis. Death or serious injury can result when live parts are touched.

• When replacing the VSM10 proceed as specified above.

Encoder system connection

8.1 Introduction

The encoder system should be connected to SINAMICS S120 via DRIVE-CLiQ.

Motors with DRIVE-CLiQ interfaces (e.g. synchronous motors 1FK7 and 1FT7, and induction motors 1PH7 and 1PH8) are designed for this purpose. These motors simplify commissioning and diagnostics because the motor and encoder type are identified automatically.

Motors and external encoders without DRIVE-CLiQ interface

Motors without DRIVE-CLiQ interfaces, as well as external encoders without integrated DRIVE-CLiQ interface, must be connected via Sensor Modules to enable the encoder and temperature signals to be evaluated. Sensor Modules Cabinet-Mounted (SMC) are available for installation in control cabinets and Sensor Modules External (SME) for installation outside control cabinets.

If not otherwise specified, only one encoder system can be connected to each Sensor Module.

Motors and external encoders with DRIVE-CLiQ interface

Motors with DRIVE-CLiQ interfaces can be connected to the associated Motor Module directly via the MOTION-CONNECT DRIVE-CLiQ cables available. The connection of the MOTION-CONNECT DRIVE-CLiQ cable at the motor has degree of protection IP67.

The DRIVE-CLiQ interface supplies the motor encoder via the integrated 24 V DC supply and transfers the motor encoder and temperature signals and the electronic rating plate data, such as a unique identification number, rated data (voltage, current, torque) directly to the Control Unit. Different encoder cables are therefore no longer required for the various encoder types, e.g. resolvers or absolute encoders. Wiring can be effected throughout with a MOTION-CONNECT DRIVE-CLiQ cable.

DRIVE-CLiQ encoder

A DRIVE-CLiQ encoder is an absolute encoder with integrated DRIVE-CLiQ interface (see Chapter DRIVE-CLiQ encoder (Page 313)).

8.2 Overview of Sensor Modules

8.2 Overview of Sensor Modules

Sensor Modules Cabinet-Mounted (SMC)

Sensor Modules Cabinet-Mounted SMC10, SMC20, SMC30 and SMC40 can be ordered and configured separately. They are used when a motor with a DRIVE-CLiQ interface is not available or when external encoders in addition to the motor encoder are required. Only one encoder system may be connected to the Sensor Modules Cabinet-Mounted SMC10, SMC20 and SMC30. The SMC40 supports two encoder systems. The Sensor Modules Cabinet-Mounted evaluate these measuring systems and convert the calculated values to DRIVE-CLiQ. Motor or encoder data are not saved.

Note

The Sensor Module Cabinet-Mounted supplies the power to the encoder; however, the Sensor Module Cabinet-Mounted must be provided separately with 24 V DC.



Figure 8-1 Overview of Sensor Modules Cabinet-Mounted (SMC)

Sensor Modules External (SME)

The Sensor Modules External SME20, SME25, SME120, and SME125 are only intended for use on machines (in North America, in accordance with the NFPA 79 "Electrical Standard for Industrial Machinery"). It is not permissible to connect DRIVE-CLiQ interfaces to other networks, e.g. Ethernet, but only to the DRIVE-CLiQ interfaces of the components.

Direct encoder systems outside the cabinet can be connected to the Sensor Modules External. The Sensor Modules External evaluate these encoder systems and convert the calculated values to DRIVE-CLiQ. No motor or encoder data is stored in the Sensor Modules External.

Note

The Sensor Module External provides the encoder power supply. The power supply for the Sensor Module External is provided from the connected DRIVE-CLiQ cable. This fact must be taken into consideration when the DRIVE-CLiQ cable is selected.

The Sensor Modules External have a higher degree of protection (IP67) and are therefore suitable for installation outside the cabinet.



Figure 8-2 Overview of Sensor Modules External (SME)

Connectable encoder systems

Table 8-1	Overview of the connectable encoder systems
-----------	---

		S	NC			SI	ME	
Encoder systems	SMC10	SMC20	SMC30	SMC40	SME20	SME25	SME120	SME125
Resolver	Yes	-	-	-	-	-	-	-
Incremental encoder sin/cos (1 Vpp) with/without reference signal	-	Yes	-	-	Yes	-	Yes	-
Incremental encoder TTL / HTL	-	-	Yes	-	-	-	-	-
Absolute encoder EnDat 2.11)	-	Yes	-	-	-	Yes	-	Yes
Absolute encoder EnDat 2.2 ²⁾	-	-	-	Yes	-	-	-	-
Absolute encoder SSI	-	Yes 3)	Yes 4)	-	-	Yes 3)	-	Yes 3)
Temperature evaluation	Yes	Yes	Yes	-	Yes ⁵⁾	-	Yes (protec- tive electrical separa- tion)	Yes (protec- tive electrical separa- tion)

¹⁾ Absolute encoders EnDat 2.2 with Article No. 02 can also be connected

²⁾ Absolute encoders EnDat 2.2 with Article No. 22 can be connected, absolute encoders EnDat 2.2 with Article No. 02 cannot be connected

- ³⁾ Only possible for SSI encoders with 5 V supply
- ⁴⁾ Possible for SSI encoders with 5 V or 24 V supply
- ⁵⁾ With specified 6FX8002-2CA88 adapter cable

8.3 Safety instructions for Sensor Modules and encoders

8.3 Safety instructions for Sensor Modules and encoders

Danger to life if the fundamental safety instructions and remaining risks are not carefully observed

If the fundamental safety instructions and remaining risks in Chapter 1 (Page 19) are not observed, accidents involving severe injuries or death may occur.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.

Danger to life due to fire if overheating occurs because of insufficient ventilation clearances

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

• For this reason, it is imperative that you maintain the 50 mm clearances above and below the Sensor Module Cabinet-Mounted.

Note

Risk of encoder failures by encoder signal disturbances

Unfavorable material combinations generate static electricity between the belt pulley and the belt. This electrostatic charge (several kV) can discharge via the motor shaft and the encoder which leads to disturbance of the encoder signals (encoder error).

• Use an antistatic version of the belt (special conductive polyurethane mixture).



Danger to life due to electric shock when disconnecting and connecting encoder cables during operation

When opening plug connections in operation, arcs can result in severe injury or death.

 Only disconnect or connect the encoder cables to Siemens motors in a voltage-free state if hot-plugging has not been specifically released. When using direct measuring systems (third-party encoders), ask the manufacturer whether it is permissible to disconnect/connect under voltage.

8.3 Safety instructions for Sensor Modules and encoders

NOTICE

Damage when connecting an impermissible number of encoder systems

If more than the maximum permissible number of encoder systems are connected to a Sensor Module, this will cause damage.

- At a Sensor Module only connect the maximum permissible number of encoder systems.
 - Sensor Modules SMC10, SMC20 and SMC30: Single-encoder system
 - Sensor Module SMC40: Two-encoder systems
 - Sensor Modules SMEx: Single-encoder system

Note

Diminished level of interference immunity due to equalizing currents via the electronics ground

Ensure that there are no electrical connections between the encoder system housing and the signal cables, or the encoder system electronics.

If this is not carefully observed, under certain circumstances the system will not be able to reach the required interference immunity level (there is then a danger of equalization currents flowing through the electronics ground).

NOTICE

Damage through use of incorrect DRIVE-CLiQ cables

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

• Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

Note

Function equipotential bonding for distributed DRIVE-CLiQ nodes

Integrate all of the components that are connected via DRIVE-CLiQ in the functional equipotential bonding concept. The connection should be preferably established by mounting on metallic bare machine and plant components that are connected with one another using an equipotential bonding conductor.

Alternatively, you can establish equipotential bonding using a conductor (min. 6 mm²), which as far as possible, is routed in parallel to the DRIVE-CLiQ cable. All distributed DRIVE-CLiQ nodes are involved, for example DME20, SME20, SME25, SME120, SME125 etc.

Note

Malfunctions due to polluted DRIVE-CLiQ interfaces

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

• Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.

8.4 Sensor Module Cabinet-Mounted SMC10

8.4.1 Description

The Sensor Module Cabinet-Mounted SMC10 is an expansion module for snapping on to a standard mounting rail acc. to EN 60715. It evaluates encoder signals and transmits the speed, actual position value, rotor position and, if necessary, the motor temperature via DRIVE-CLiQ to the Control Unit.

The SMC10 is used to evaluate sensor signals from resolvers.

8.4.2 Interface description

8.4.2.1 Overview

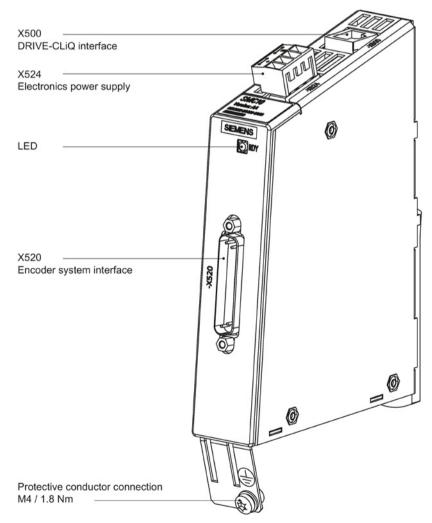


Figure 8-3 Interface overview for the SMC10

8.4.2.2 X500 DRIVE-CLiQ interface

	Pin	Signal name	Technical data
	1	ТХР	Transmit data +
Г В	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	А	Reserved, do not use	
	В	M (0 V)	Electronics ground
Connector type	DRIVE-C	CLiQ socket	

The blanking cover for the DRIVE-CLiQ port is included in the scope of delivery.

Blanking covers (50 x) Article No:: 6SL3066-4CA00-0AA0

8.4.2.3 X520 encoder system interface

	Pin	Signal name	Technical data
	1	Reserved, do not use	
\bigcirc	2	Reserved, do not use	
	3	S2	Resolver signal A (sin+)
• 25	4	S4	Inverted resolver signal A (sin-)
	5	Ground	Ground (for internal shield)
	6	S1	Resolver signal B (cos+)
:•	7	S3	Inverted resolver signal B (cos-)
	8	Ground	Ground (for internal shield)
::	9	R1	Resolver excitation positive
	10	Reserved, do not use	
	11	R2	Resolver excitation negative
	12	Reserved, do not use	
	13	+ Temp ¹⁾	Temperature sensor KTY84-1C130 / PT1000 / PTC
\bigcirc	14	Reserved, do not use	
	15	Reserved, do not use	
	16	Reserved, do not use	
	17	Reserved, do not use	
	18	Reserved, do not use	
	19	Reserved, do not use	
	20	Reserved, do not use	
	21	Reserved, do not use	
	22	Reserved, do not use	
	23	Reserved, do not use	
	24	Ground	Ground (for internal shield)
	25	- Temp ¹⁾	Temperature sensor KTY84-1C130 / PT1000 / PTC
Connector type:	25-pin S	SUB D connector	
Measuring curren	nt via temp	perature sensor connection: 2 m	Α

Table 8-3 X520: Encoder system interface

¹⁾ Accuracy of the temperature measurement:

- KTY: ±7 °C (including evaluation)

- PT1000: ±5 °C (PT1000 tolerance class B according to DIN EN 60751 including evaluation)

- PTC: ±5 °C (including evaluation)

NOTICE

Damage to motor due to incorrectly connected KTY temperature sensor

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

• Connect a KTY temperature sensor with the correct polarity.

Data regarding the parameterization of the KTY temperature sensor can be taken from the following reference:

Reference: /FH1/ SINAMICS S120 Function Manual, Chapter "Monitoring and protective functions/thermal motor protection"



Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that comply with the specifications relating to protective separation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

8.4.2.4 X524 Electronics power supply

Table 8-4	X524: Electronics power supply
-----------	--------------------------------

	Terminal	Function	Technical data
	+	Electronics power supply	Voltage: 24 V (20.4 28.8 V)
 ≓ +]	+	Electronics power supply	Current consumption: max. 0.35 A
	М	Electronics ground	Max. current via jumper in connector: 20 A
l⊒_₹	М	Electronics ground	(15 A according to UL/CSA)
Type: Screw	terminal 2 (P	Page 331)	

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

8.4.3 Connection example

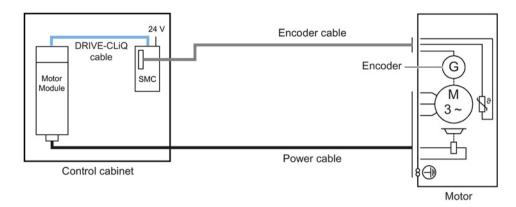


Figure 8-4 Connection of an encoder system via a Sensor Module Cabinet-Mounted (SMC) for a motor without a DRIVE-CLiQ interface

8.4.4 Meaning of the LED

 Table 8-5
 Meaning of the LEDs on the Sensor Module Cabinet-Mounted SMC10

LED	Color	Status	Description, cause	Remedy
RDY READY	-	Off	The electronics power supply is missing or outside the per- missible tolerance range.	-
	Green	Continu- ous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	-
	Orange	Continu- ous light	DRIVE-CLiQ communication is being established.	-
	Red	Continu- ous light	This component has at least one fault. Note: The LED is activated irrespective of whether the corre- sponding messages have been reconfigured.	Remove and acknowledge the fault.
	Green/red Flashing light 0.5 Hz		Firmware is being downloaded.	-
		Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON.
	Green/ orange or Red/ orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	-

¹⁾ The parameters for activating component recognition using LEDs can be taken from the following reference: Reference: /LH1/ SINAMICS S120/S150 List Manual

Cause and rectification of faults

Additional information about the cause and resolving faults can be taken from the following references:

- Reference:/LH1/SINAMICS S120/S150 List Manual
- Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER

8.4.5 Dimension drawing

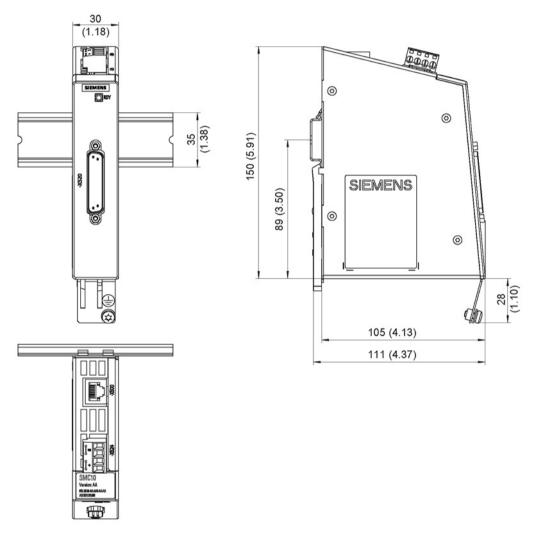


Figure 8-5

Dimension drawing of the Sensor Module Cabinet SMC10, all dimensions in mm and (inches)


8.4.6 Mounting

Installation

- 1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
- 2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
- 3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

- 1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
- 2. Swivel the component to the front and withdraw it upwards from the DIN rail.

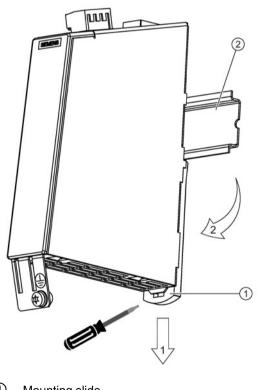

- Mounting slide
- 2 Mounting rail
- Figure 8-6 Removing from a DIN mounting rail

8.4.7 Technical data

Table 8- 6	Technical	data
	roonnou	aata

6SL3055-0AA00-5AA.	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20.4 28.8)
Current (without encoder system)	A _{DC}	≤ 0.20
Current (with encoder system)	A _{DC}	≤ 0.35
Power loss	W	≤ 10
Max. cable length	m	30
Specification		
Transformation ratio of the resolver (ü)		0.5
Excitation voltage on the SMC10 when ü=0.5	V _{rms}	4.1
Amplitude monitoring threshold (secondary	V _{rms}	1
tracks) of the SMC10		
Excitation voltage (cannot be parameterized)	V _{rms}	4.1
Excitation frequency (synchronized to the current	kHz	5 to 16
controller clock cycle)		
PE/ground connection	At the housi	ng with M4 screw
Max. encoder cable length	m	130
Weight	kg	0.45

Table 8-7 Max. frequency that can be evaluated (speed)

Resolver			Max. speed resolver /	motor
Number of poles	Number of pole pairs	8 kHz / 125 µs	4 kHz / 250 μs	2 kHz / 500 μs
2-pole	1	120000 rpm	60000 rpm	30000 rpm
4-pole	2	60000 rpm	30000 rpm	15000 rpm
6-pole	3	40000 rpm	20000 rpm	10000 rpm
8-pole	4	30000 rpm	15000 rpm	7500 rpm

The ratio between the ohmic resistance R and the inductance L (the primary winding of the resolver) determines whether the resolver can be evaluated with the SMC10. See the following diagram:

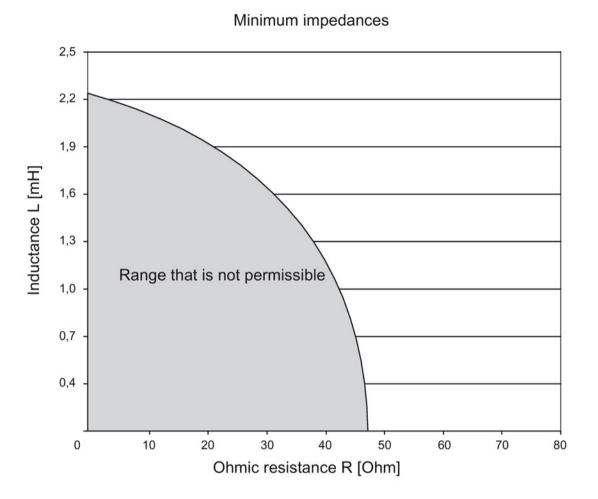


Figure 8-7 Rotor impedances that can be connected with excitation frequency f = 5000 Hz

To check as shown in the figure above, the impedances Z_{rs} or Z_{ro} (impedance between R1 and R2 with short-circuited or open outputs) from the encoder manufacturer's data sheet must be used.

8.5 Sensor Module Cabinet-Mounted SMC20

8.5.1 Description

The Sensor Module Cabinet-Mounted SMC20 is an expansion module for snapping on to a standard mounting rail acc. to EN 60715. It evaluates encoder signals and transmits the speed, actual position, rotor position and, if applicable, the motor temperature and reference point via DRIVE-CLiQ to the Control Unit.

The SMC20 is used to evaluate encoder signals from incremental encoders with SIN/COS (1 Vpp) or absolute encoders with EnDat 2.1. EnDat 2.2 article designation 02 or SSI.

8.5.2 Interface description

8.5.2.1 Overview

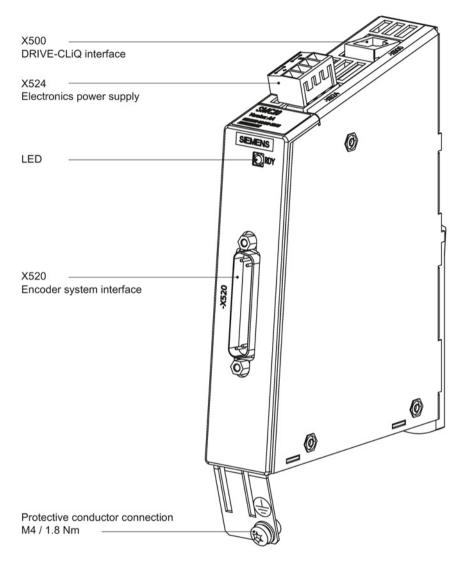


Figure 8-8 Interface description of the SMC20

8.5.2.2 X500 DRIVE-CLiQ interface

Table 8- 8	X500: DRIVE-CLiQ interface

	Pin	Signal name	Technical data
	1	ТХР	Transmit data +
Г В	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	А	Reserved, do not use	
	В	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

The blanking cover for the DRIVE-CLiQ port is included in the scope of delivery.

Blanking covers (50 x) Article No:: 6SL3066-4CA00-0AA0

8.5.2.3 X520 encoder system interface

	Pin	Signal name	Technical data
	1	P encoder	Encoder power supply
	2	M encoder	Ground for encoder power supply
	3	A	Incremental signal A
• 25	4	A*	Inverse incremental signal A
	5	Ground	Ground (for internal shield)
	6	В	Incremental signal B
	7	B*	Inverse incremental signal B
	8	Ground	Ground (for internal shield)
	9	Reserved, do not use	
	10	Clock	Clock, EnDat interface, SSI clock
::	11	Reserved, do not use	
	12	Clock*	Inverted clock, EnDat interface, inverted SSI clock
	13	+Temp ¹⁾	Temperature sensor KTY84-1C130 / PT1000 / PTC
	14	P sense	Sense input of encoder power supply
	15	Data	Data, EnDat interface, SSI data
	16	M sense	Ground sense input encoder power supply
	17	R	Reference signal R
	18	R*	Inverse reference signal R
	19	С	Absolute track signal C
	20	C*	Inverse absolute track signal C
	21	D	Absolute track signal D
	22	D*	Inverse absolute track signal D
	23	Data*	Inverse data, EnDat interface, Inverse SSI data
	24	Ground	Ground (for internal shield)
	25	-Temp ¹⁾	Temperature sensor KTY84-1C130 / PT1000 / PTC
Connector type:	25-pin SUI	B D connector	
Measuring curren	leasuring current via temperature sensor connection: 2 mA		

Table 8-9 X520: Encoder system interface

¹⁾ Accuracy of the temperature measurement:

- KTY: ±7 °C (including evaluation)

- PT1000: ±5 °C (PT1000 tolerance class B according to DIN EN 60751 including evaluation)

- PTC: ±5 °C (including evaluation)

NOTICE

Damage to motor due to incorrectly connected KTY temperature sensor

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

• Connect a KTY temperature sensor with the correct polarity.

Data regarding the parameterization of the KTY temperature sensor can be taken from the following reference:

Reference: /FH1/ SINAMICS S120 Function Manual, Chapter "Monitoring and protective functions/thermal motor protection"



Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that comply with the specifications relating to protective separation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

8.5.2.4 X524 Electronics power supply

Table 8- 10	X524: Electronics power supply
-------------	--------------------------------

	Terminal	Function	Technical data	
	+	Electronics power supply	Voltage: 24 V (20.4 28.8 V)	
 ≒ + 	+	Electronics power supply	Current consumption: max. 0.35 A	
		Electronics ground	Max. current via jumper in connector: 20 A	
<u></u> ≤	М	Electronics ground	(15 A according to UL/CSA)	
Type: Screw terminal 2 (Page 331)				

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

8.5.3 **Connection example**

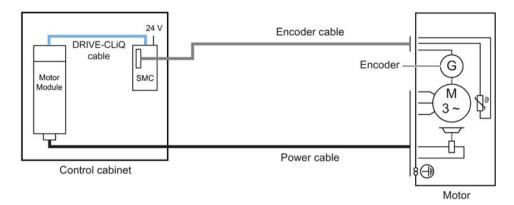


Figure 8-9 Connection of an encoder system via a Sensor Module Cabinet-Mounted (SMC) for a motor without a DRIVE-CLiQ interface

8.5.4 Meaning of the LED

LED	Color	Status	Description, cause	Remedy
RDY READY	-	Off	The electronics power supply is missing or outside the per- missible tolerance range.	-
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	-
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	-
	Red	Continuous light	It is component has at least one fault. Note: The LED is activated irrespective of whether the correspond- ing messages have been reconfigured.	
	Green/red	Flashing light 0.5 Hz	Firmware is being downloaded.	-
		Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON.
	Green / orange or	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component	-
	Red / orange		recognition is activated.	

¹⁾ The parameters for activating component recognition using LEDs can be taken from the following reference: Reference: /LH1/ SINAMICS S120/S150 List Manual

Cause and rectification of faults

Additional information about the cause and resolving faults can be taken from the following references:

- Reference:/LH1/SINAMICS S120/S150 List Manual
- Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER

8.5.5 Dimension drawing

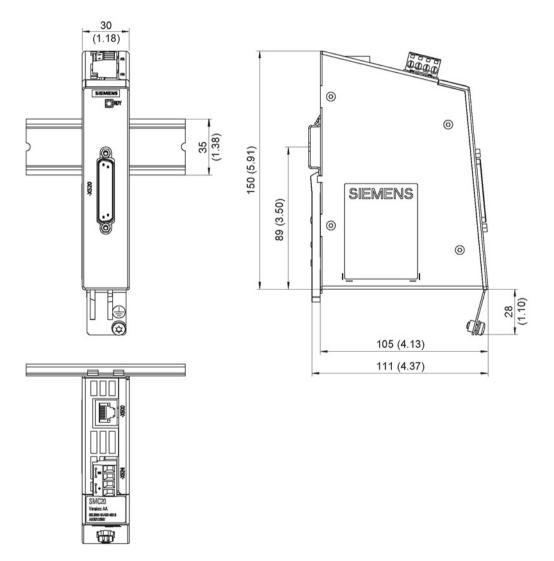


Figure 8-10 Dimension drawing of the Sensor Module Cabinet SMC20, all data in mm and (inches)


8.5.6 Mounting

Installation

- 1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
- 2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
- 3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

- 1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
- 2. Swivel the component to the front and withdraw it upwards from the DIN rail.

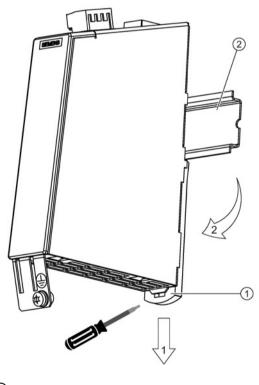

Mounting slide

② Mounting rail

Figure 8-11 Removing from a DIN mounting rail

8.5.7 Technical data

Table 8- 12 Technical data

6SL3055-0AA00-5BA.	Unit	Value
Electronics power supply		
Voltage	VDC	24 (20.4 28.8)
Current (without encoder system)	A _{DC}	≤ 0.20
Current (with encoder system)	A _{DC}	≤ 0.35
Power loss	W	≤ 10
Max. Cable length	m	30
Encoder system power supply		
Voltage	VDC	5 V DC (with remote sense) ¹⁾
Current	A _{DC}	0.35
Encoder frequency that can be evaluated (fencoder)	kHz	≤ 500
SSI baud rate ²⁾	kBd	100 - 1000 ³⁾
Max. encoder cable length	m	100
PE/ground connection		At the housing with M4 screw
Weight	kg	0.45

¹⁾ A controller compares the encoder system supply voltage - sensed via the Remote Sense cables - with the reference supply voltage of the encoder system, and adjusts the supply voltage for the encoder system at the output of the sensor module until the required supply voltage is obtained directly at the encoder system (only for 5 V encoder system power supply).

²⁾ Only possible for SSI encoders with 5 V supply.

Note

³⁾ See the diagram "Maximum cable length depending on the SSI baud rate for SSI encoders"

Current controller clock cycle

For a current controller cycle clock of 31.25 $\mu s,$ use an SMC20 with Article No. 6SL3055-0AA00-5BA3.

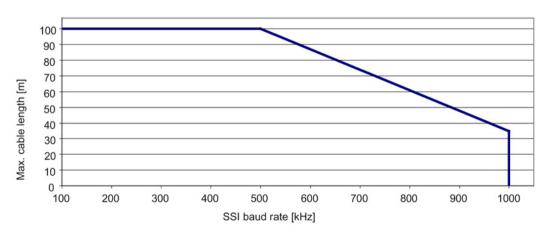


Figure 8-12 Maximum cable lengths depending on the SSI baud rate for SSI encoders

8.6.1 Description

The Sensor Module Cabinet-Mounted SMC30 is an expansion module for snapping on to a standard mounting rail acc. to EN 60715. It evaluates encoder signals and transmits the speed, actual position, and, if applicable, the motor temperature and reference point via DRIVE-CLiQ to the Control Unit.

The SMC30 is used to evaluate encoder signals from encoders with TTL, HTL, or SSI interfaces.

A combination of TTL/HTL signal and SSI absolute signal is possible at terminals X521/X531, if both signals are derived from the same measured variable.

8.6.2 Interface description

8.6.2.1 Overview

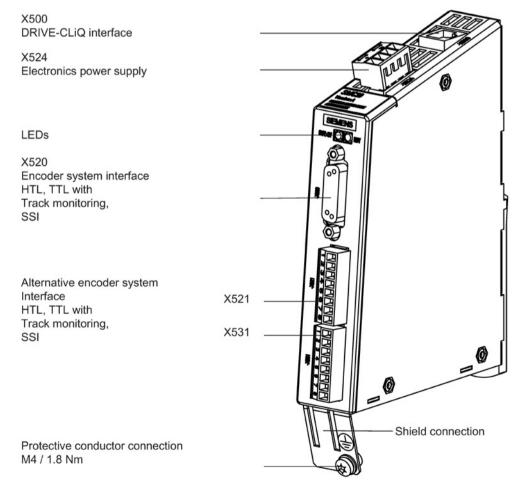


Figure 8-13 Interface description of the SMC30

8.6.2.2 X500 DRIVE-CLiQ interface

	Table 8-13	X500: DRIVE-CLiQ interface
--	------------	----------------------------

	Pin	Signal name	Technical data
Гетав	1	ТХР	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	А	Reserved, do not use	
	В	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

The blanking cover for the DRIVE-CLiQ port is included in the scope of delivery. Blanking covers (50 x) Article No:: 6SL3066-4CA00-0AA0

8.6.2.3 X520 encoder system interface

Table 8- 14	X520: Encoder system interface
-------------	--------------------------------

	Pin	Signal name	Technical data
	1	+ Temp ¹⁾	Temperature sensor KTY84-1C130 / PT1000 / PTC
	2	Clock	SSI clock
	3	Clock*	Inverse SSI clock
	4	P encoder 5 V / 24 V	Encoder power supply
000	5	P encoder 5 V / 24 V	
	6	P sense	Sense input encoder power supply
0000-	7	M encoder (M)	Ground, encoder power supply
	8	- Temp ¹⁾	Temperature sensor KTY84-1C130 / PT1000 / PTC
	9	M sense	Ground sense input
	10	R	Reference signal R
	11	R*	Inverse reference signal R
	12	B*	Inverse incremental signal B
	13	В	Incremental signal B
	14	A* / data*	Inverted incremental signal A/inverted SSI data
	15	A / data	Incremental signal A/SSI data
Connector type:	15-pin Su	b-D socket	
Measuring curren	uring current via temperature sensor connection: 2 mA		

1) Accuracy of the temperature measurement:

- KTY: ±7 °C (including evaluation)
- PT1000: ±5 °C (PT1000 tolerance class B according to DIN EN 60751 including evaluation)

- PTC: ±5 °C (including evaluation)

NOTICE

Damage to the encoder due to incorrect supply voltage

The encoder supply can be parameterized to 5 V or 24 V. Incorrect parameter assignment can cause damage to the encoder.

• Select the appropriate supply voltage.

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

• Connect a KTY temperature sensor with the correct polarity.

Data regarding the parameterization of the KTY temperature sensor can be taken from the following reference:

Reference: /FH1/ SINAMICS S120 Function Manual, Chapter "Monitoring and protective functions/thermal motor protection"



Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that comply with the specifications relating to protective separation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

8.6.2.4 X521 / X531 alternative encoder system interface

	Pin	Designation	Technical data
X521	1	A	Incremental signal A
	2	A*	Inverse incremental signal A
	3	В	Incremental signal B
l°₃	4	В*	Inverse incremental signal B
	5	R	Reference signal R
5	6	R*	Inverse reference signal R
6	7	CTRL	Control signal
	8	М	Ground
8			
X531	1	P_Encoder 5 V / 24 V	Encoder power supply
×331	2	M_Encoder	Ground, encoder power supply
1	3	- Temp ¹⁾	Temperature sensor KTY84-1C130 / PT1000 / PTC
2 3 4	4	+ Temp ¹⁾	Temperature sensor KTY84-1C130 / PT1000 / PTC
	5	Clock	SSI clock
	6	Clock*	Inverse SSI clock
5	7	Data	SSI data
6	8	Data*	Inverse SSI data
Max. connectable cross-section: 1.5 mm ²			

Table 8- 15 X521/X531: Alternative encoder system interface

Max. connectable cross-section: 1.5 mm

Measuring current via the temperature sensor connection: 2 mA

When unipolar HTL encoders are used, A*, B*, and R* on the terminal block must be jumpered with M_Encoder (X531)²).

¹⁾ Accuracy of the temperature measurement:

- KTY: ±7 °C (including evaluation)
- PT1000: ±5 °C (PT1000 tolerance class B according to DIN EN 60751 including evaluation)
- PTC: ±5 °C (including evaluation)
- ²⁾ Because the physical transmission media is more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.



WARNING

Danger to life through electric shock due to unconnected cable shields

Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.

Attach the cable shield to the component for the encoder system connection at the terminals.

Temperature sensor connection

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

• Connect a KTY temperature sensor with the correct polarity.

Data regarding the parameterization of the KTY temperature sensor can be taken from the following reference:

Reference: /FH1/ SINAMICS S120 Function Manual, Chapter "Monitoring and protective functions/thermal motor protection"

Note

The maximum length of the temperature sensor cable is 100 m. The cables must be shielded.



Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that comply with the specifications regarding safe electrical separation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

8.6.2.5 X524 Electronics power supply

Table 8- 16 X524: Electronics power supply
--

	Terminal	Function	Technical data		
	+	Electronics power supply	Voltage: 24 V (20.4 28.8 V)		
	+	Electronics power supply	Current consumption: max. 0.55 A		
+ ≤]	М	Electronics ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)		
	М	Electronics ground			
Type: Screw terminal 2 (Page 331)					

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

8.6.3 Connection examples

Connection example 1: HTL encoder, bipolar, with reference signal


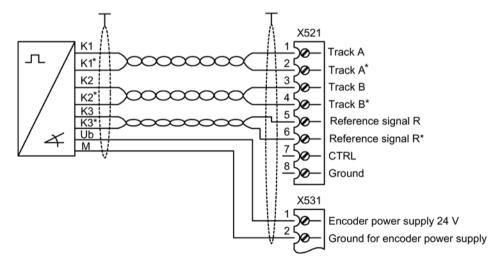


Figure 8-14 Connection example 1: HTL encoder, bipolar, with reference signal

Signal cables must be twisted in pairs to improve immunity to induced noise.

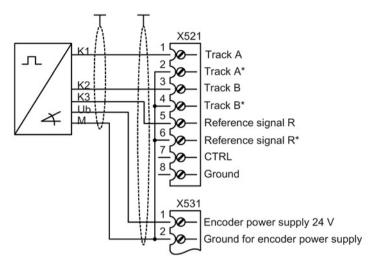

Connection example 2: HTL encoder, unipolar, with reference signal

Figure 8-15 Connection example 2: HTL encoder, unipolar, with reference signal¹⁾

¹⁾ Because the physical transmission media is more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.



Figure 8-16 Photo of connection example 2: SMC30, 30 mm wide

The photo above shows the wire jumpers for connecting unipolar HTL encoders with a reference signal.

8.6.4 Meaning of the LEDs

LED	Color	Status	Description, cause	Remedy
RDY READY	-	Off	The electronics power supply is missing or outside the per- missible tolerance range.	-
	Green	Continu- ous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	-
	Orange	Continu- ous light	DRIVE-CLiQ communication is being established.	-
	Red	Continu- ous light	This component has at least one fault. Note: LED is controlled irrespective of the corresponding messag- es being reconfigured.	Remedy and acknowledge fault
	Green/red	Flashing light 0.5 Hz	Firmware is being downloaded.	-
	Green/red	Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON
	Green/ orange or Red/ orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	-
OUT > 5 V	-	Off	The electronic power supply is missing or outside permissible tolerance range. Power supply $\leq 5 V$.	-
	Orange	Continu- ous light	The electronics power supply for the encoder system is available. Power supply > 5 V	-

Table 8- 17 Meaning of LEDs on the Sensor Module Cabinet SMC30

¹⁾ The parameters for activating component recognition using LEDs can be taken from the following reference: Reference: /LH1/ SINAMICS S120/S150 List Manual

Cause and rectification of faults

Additional information about the cause and resolving faults can be taken from the following references:

- Reference:/LH1/SINAMICS S120/S150 List Manual
- Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER

8.6.5 Dimension drawing

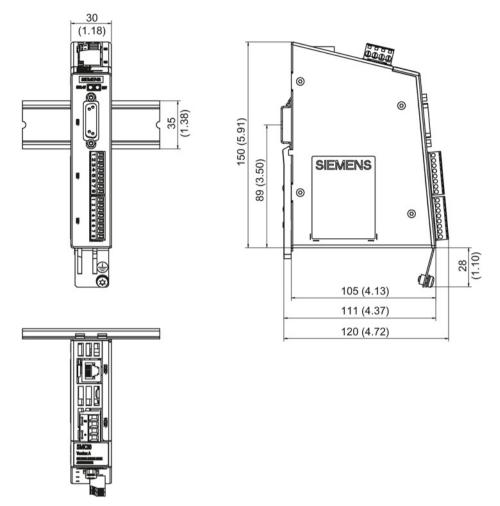


Figure 8-17 Dimension drawing of the Sensor Module Cabinet SMC30, all data in mm and (inches)


8.6.6 Mounting

Installation

- 1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
- 2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
- 3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal


- 1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
- 2. Swivel the component to the front and withdraw it upwards from the DIN rail.

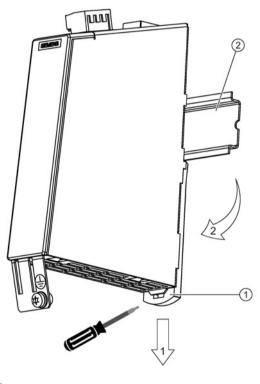

- Mounting slide
- 2 Mounting rail
- Figure 8-18 Removing from a DIN mounting rail

8.6.7 Protective conductor connection and shield support

Shield contacts are only required if the system is connected to X521/X531.

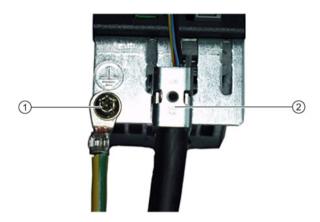

- ① Protective conductor connection with M4 screw / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBUE CO1, Article number: 1753311001

Figure 8-19 Shield support and PE conductor connection

The bending radii of the cables must be observed (see MOTION-CONNECT description).

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

8.6.8 Technical data

6SL3055-0AA00-5CA2	Unit	Value
Electronics power supply		
Voltage	VDC	24 (20.4 28.8)
Current (without encoder system)	Add	≤ 0.20
Current (with encoder system)	A _{DC}	≤ 0.55
Power loss	W	≤ 10
Max. cable length	m	30
Encoder system power supply		
Voltage	V _{DC}	5 (with or without remote sense) $^{1)}$ or V _{DC} - 1 V
Current	ADC	0.35

6SL3055-0AA00-5CA2	Unit	Value
Encoder frequency that can be evaluated (fencoder)	kHz	≤ 300
SSI baud rate	kBd	100 - 1000 ²⁾
PE/ground connection		At the housing with M4 screw
Weight	kg	0.45

A controller compares the encoder system supply voltage - sensed via the Remote Sense cables - with the reference supply voltage of the encoder system, and adjusts the supply voltage for the encoder system at the output of the sensor module until the required supply voltage is obtained directly at the encoder system (only for 5 V encoder system power supply). Remote Sense only to X520.

2) See the diagram "Maximum cable length depending on the SSI baud rate for SSI encoders"

Connectable encoder systems

Parameter	Designation	Threshold	Min.	Max.	Unit
High signal level (TTL bipolar at X520 or X521/X531) ¹⁾	U _{Hdiff}		2	5	V
Low signal level (TTL bipolar at X520 or X521/X531) ¹⁾	U _{Ldiff}		-5	-2	V
High signal level	U _H ³⁾	High	17	Vcc	V
(HTL unipolar)		Low	10	Vcc	V
Low signal level	UL ³⁾	High	0	7	V
(HTL unipolar)		Low	0	2	V
High signal level (HTL bipolar) ²⁾	U _{Hdiff}		3	Vcc	V
Low signal level (HTL bipolar) ²⁾	ULdiff		-Vcc	-3	V
High signal level (SSI bipolar at X520 or X521/X531) ¹⁾	U _{Hdiff}		2	5	V
Low signal level (SSI bipolar at X520 or X521/X531) ¹⁾	ULdiff		-5	-2	V
Signal frequency	fs		-	300	kHz
Edge clearance	t _{min}		100	-	ns
"Zero pulse inactive time" (before and after A=B=high)	t∟o		640	(t _{ALo-BHi} - t _{Hi})/2 ⁴⁾	ns
"Zero pulse active time" (while A=B=high and beyond)	t _{Hi}		640	t _{ALo-BHi} - 2*t _{Lo} ⁴⁾	ns

Table 8-19 Specification of encoder systems that can be connected

 $^{1)}\,\,$ Other signal levels according to the RS 422 standard.

 $^{2)}$ The absolute level of the individual signals varies between 0 V and Vcc of the encoder system.

³⁾ Only with Article No. 6SL3055-0AA00-5CA2 and firmware version 2.5 SP1 or higher can this value be configured using software. For older firmware releases and Article Nos. less than 6SL3055-0AA00-5CA2, the "low" threshold applies.

⁴⁾ t_{ALo-BHi} is not a specified value, but is the time between the falling edge of track A and the next but one rising edge of track B.

	X520 (SUB-D)	X521 (terminal)	X531 (terminal)	Track monitoring	Remote Sense ²⁾
HTL bipolar 24 V	Yes	Yes		Yes	no
HTL unipolar 24 V ¹⁾	Yes	Yes (however, a bipolar connec- tion is recommended) ¹⁾		no	no
TTL bipolar 24 V	Yes	Yes		Yes	no
TTL bipolar 5 V	Yes	Yes		Yes	At X520
SSI 24 V/5 V	Yes	Yes		no	no
TTL unipolar	no				

Table 8-20 Encoders that can be connected

¹⁾ Because the physical transmission media is more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.

²⁾ A controller compares the encoder system supply voltage - sensed via the Remote Sense cables - with the reference supply voltage of the encoder system, and adjusts the supply voltage for the encoder system at the output of the sensor module until the required supply voltage is obtained directly at the encoder system (only for 5 V encoder system power supply).


Maximum encoder cable lengths

Table 8- 21	Maximum encoder cable length
-------------	------------------------------

Encoder type	Maximum encoder cable length in m	
TTL ¹⁾	100	
HTL unipolar ²⁾	100	
HTL bipolar	300	
SSI	100 ³⁾	

 $^{1)}$ $\,$ For TTL encoders at X520 \rightarrow Remote Sense \rightarrow 100 m $\,$

- ²⁾ Because the physical transmission media is more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.
- ³⁾ See the diagram "Maximum cable length depending on the SSI baud rate for SSI encoders"

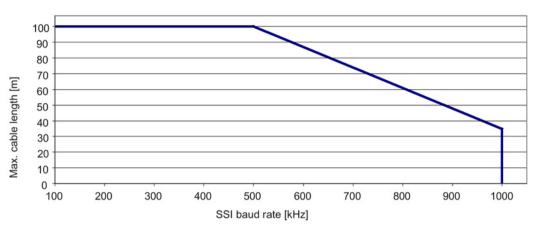





Encoders with 5 V supply connected to X521/X531

For encoders with a 5 V supply at X521/X531, the cable length depends on the encoder current (for 0.5 mm² cable cross-sections):

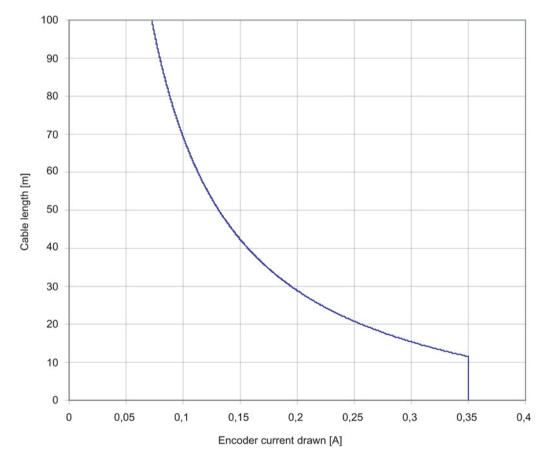


Figure 8-21 Max. cable length as a function of the encoder current drawn

Encoders without Remote Sense

When encoders without Remote Sense are used, the permissible cable length is limited to 100 m max. because the voltage drop depends on the cable length and the encoder current.

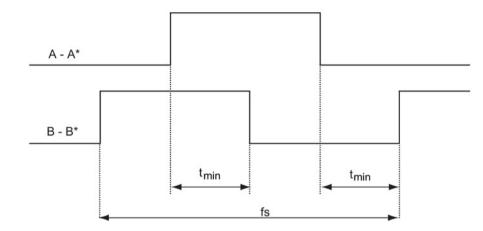


Figure 8-22 Signal characteristic of track A and track B between two edges: Time between two edges with pulse encoders

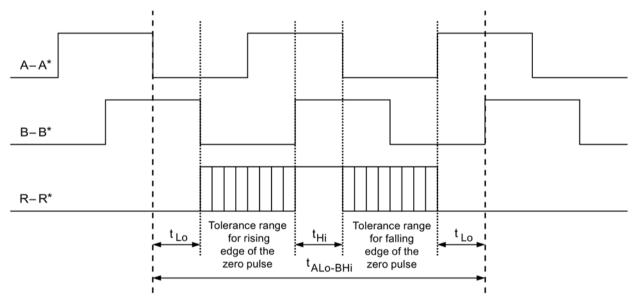


Figure 8-23 Position of the zero pulse to the track signals

8.7 Sensor Module Cabinet-Mounted SMC40

8.7.1 Description

The Sensor Module Cabinet-Mounted SMC40 is an expansion module for snapping on to a standard mounting rail acc. to EN 60715. It is used to convert encoder signals from absolute encoders with EnDat 2.2 Article No. 22 to DRIVE-CLiQ and send these to the Control Unit. At the SMC40, two encoder systems with EnDat 2.2 Article No. 22 can be connected, which, independent of one another, are converted over to two DRIVE-CLiQ encoder signals.

Note

Permissible encoders

- Only use absolute encoders EnDat 2.2 with Article No. 22. Do not connect an absolute encoder EnDat 2.2 with Article N o. 02.
- Only use absolute encoders (not incremental encoders) with software versions 4.5 and 4.6.
- Do not use any battery-buffered encoders, such as e.g. Heidenhain EBI 1135.

Configuration and commissioning

To make sure that the Sensor Module Cabinet-Mounted SMC40 is integrated into the topology during first commissioning, you must absolutely observe the following connection conditions:

- Connect at least one of the DRIVE-CLiQ interfaces X500/1 or X500/2 on the SMC40 using DRIVE-CLiQ.
- Connect one EnDat encoder to the corresponding encoder interface X520/1 (to X500/1) or X520/2 (to X500/2).
- Operate the SMC40 only in a star topology. The DRIVE-CLiQ sockets X500/1 and X500/2 can **not** be used for a series connection.

Note

The SMC40 will only be subsequently integrated into the actual topology if the DRIVE-CLiQ interfaces X500/. and the corresponding encoder interfaces X520/. are assigned. Without a connected encoder, it is not possible to subsequently integrate the SMC40 into the topology.

Temperature signals

If the EnDat2.2 encoder already evaluates the temperature, the temperature signals can be transferred through the SMC40 via DRIVE-CLiQ.

8.7.2 Interface descriptions

8.7.2.1 Overview

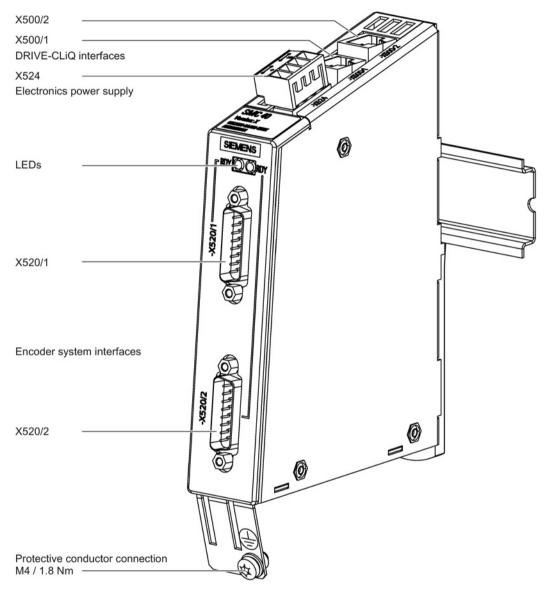


Figure 8-24 Interface overview for the SMC40

Interface assignment

The DRIVE-CLiQ and encoder interfaces of channel 1 and channel 2 are logically completely independently of one another and permanently assigned.

		X500/1 DRIVE-CLiQ socket	X500/2 DRIVE-CLiQ socket	Left RDY LED	Right RDY LED
X520/1	EnDat 2.2 input	channel 1		channel 1	
X520/2	EnDat 2.2 input		channel 2		channel 2

Connector X524 for the electronics power supply is used for both channels.

8.7.2.2 X500/1 and X500/2 DRIVE-CLiQ interfaces

	Pin	Signal name	Technical data
	1	ТХР	Transmit data +
Г В	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	А	Reserved, do not use	
	В	M (0 V)	Electronics ground
Connector type	DRIVE-CLIC	socket	

Table 8- 22 X500/1 and X500/2: DRIVE-CLiQ interfaces

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.

Blanking covers (50 x) Article No.: 6SL3066-4CA00-0AA0

Note

The maximum DRIVE-CLiQ cable length is 30 m.

8.7.2.3 X520/1 and X520/2 encoder system interfaces

	Pin	Signal name	Technical data
	1	P encoder	Encoder power supply
\bigcirc	2	M encoder	Ground, encoder power supply
	3	Reserved, do not use	
0 15	4	Reserved, do not use	
00	5	Data	Data, EnDat interface
00	6	Reserved, do not use	
	7	Reserved, do not use	
	8	Data*	Inverse data EnDat interface
00	9	P encoder	Encoder power supply
	10	Reserved, do not use	
	11	M encoder	Ground, encoder power supply
(\bigcirc)	12	Reserved, do not use	
	13	Reserved, do not use	
	14	Clock	Clock, EnDat interface
	15	Clock*	Inverse clock EnDat interface
Connector type:	15-pin Sl	JB D connector	

Table 8- 23 X520/1 and X520/2: Encoder system interfaces

Note

The maximum cable length to encoder systems is 100 m. The specified supply voltage of the encoder must be observed.

Note

Pins 1/9 and 2/11 on the SMC40 side and on the encoder side (in the M12 connector, pin 8/2 and pin 5/1) are connected in parallel, and to increase the cable cross-section each must be wired with a separate conductor.



Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that fully comply with the specifications of the safety isolation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Terminal Module TM120.

8.7.2.4 X524 Electronics power supply

Table 8- 24	X524: Ele	ectronics	power	supply
-------------	-----------	-----------	-------	--------

	Terminal	Function	Technical data		
+	+	Electronics power supply	Voltage: 24 V (20.4 28.8 V)		
	+	Electronics power supply	Current consumption: max. 0.35 A		
	М	Electronics ground	Maximum current via jumper in connect-		
Ĩ≥	М	Electronics ground	or: 20 A (15 A according to UL/CSA)		
Type: Screw terminal 2 (Page 331)					

The maximum cable length that can be connected is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

8.7.3 Connection example

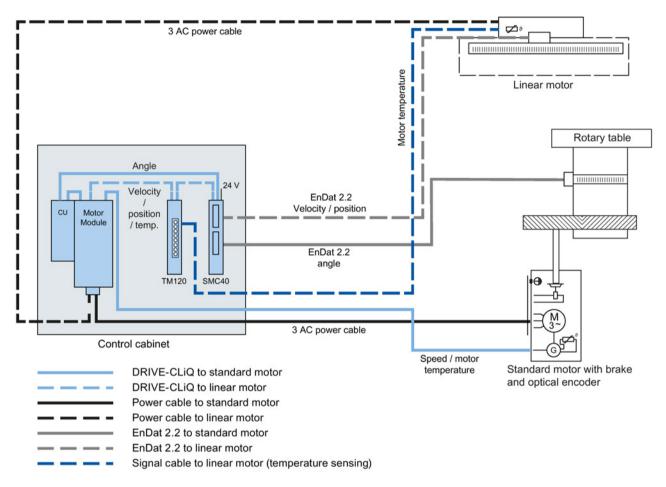


Figure 8-25 Encoder system connection via a Sensor Module Cabinet-Mounted SMC40

The wiring diagram shows two different applications of the SMC40. For each conversion of an EnDat 2.2 encoder signal into a DRIVE-CLiQ signal, a dedicated DRIVE-CLiQ cable must be used, as the electronics in the SMC40 is designed so that each channel is independent. The DRIVE-CLiQ cables cannot be interchanged.

Connecting a standard motor with brake and optical encoder

A standard motor with gearbox for a rotary indexing table drive is shown in the connection example. The rotary indexing table has an angular position measuring system with EnDat 2.2 interface. The measured angular data are transferred via EnDat 2.2 to the SMC40 and from there via DRIVE-CLiQ to the Control Unit.

The motor contains an integrated encoder and temperature evaluation, which transfers data via DRIVE-CLiQ directly to the Motor Module.

Connecting a linear motor without DRIVE-CLiQ interface

From a linear motor with linear scale, velocity and position are first transferred via the EnDat 2.2 connection to the SMC40 and from there, via DRIVE-CLiQ to a Terminal Module TM120.

The temperature sensors of the linear motor supply their analog temperature values directly to the TM120, which guarantees the safe electrical separation of the temperature cable and which transfers the temperature data together with the velocity and position data in the DRIVE-CLiQ protocol to the Motor Module.

8.7.4 Meaning of the LEDs

Table 8- 25	Meaning of the LEDs on the Sensor Module Cabinet-Mounted SMC40

LED	Color	Status	Description, cause	Remedy
RDY READY	-	Off	The electronics power supply is missing or outside the per- missible tolerance range.	-
	Green	Continu- ous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	_
	Orange	Continu- ous light	DRIVE-CLiQ communication is being established.	_
	Red	Continu- ous light	This component has at least one fault. Note: LED is controlled irrespective of the corresponding messag- es being reconfigured.	Remove and acknowledge the fault.
	Green/red	Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON.
	Green/ orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note:	-
	or Red/ orange		Both options depend on the LED status when component recognition is activated.	

¹⁾ The parameter for activating component recognition can be taken from the following reference: Reference: /LH1/ SINAMICS S120/S150 List Manual

Each channel has a multifunction LED.

Cause and rectification of faults

Additional information about the cause and resolving faults can be taken from the following references:

- Reference:/LH1/SINAMICS S120/S150 List Manual
- Reference: /IH1/ SINAMICS S120 Commissioning Manual with STARTER

8.7.5 Dimension drawing

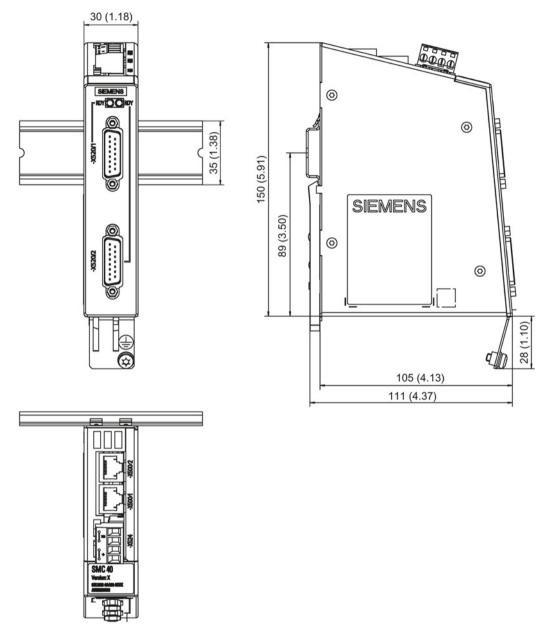


Figure 8-26 Dimension drawing of the Sensor Module Cabinet SMC40, all data in mm and (inches)


8.7.6 Installation

Installation

- 1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
- 2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
- 3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

- 1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
- 2. Swivel the component to the front and withdraw it upwards from the DIN rail.

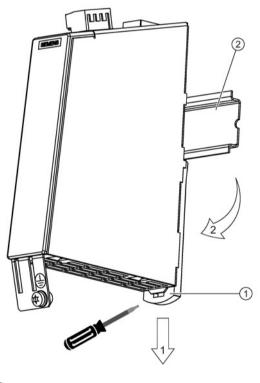

- Mounting slide
- ② Mounting rail
- Figure 8-27 Removing from a DIN mounting rail

Mounting clearances

The SMC40 can be installed in the line-up together with other SMC as required. When mounting next to heat sources, the following minimum lateral clearances must be observed:

- 50 mm for Line Modules and Motor Modules
- 100 mm for hotter components (e.g. pulsed resistor)

8.7.7 Technical data

Table 8-26	Technical data

6SL3055-0AA00-5DA0	Unit	Value
Electronics power supply		
Voltage	VDC	24 (20.4 28.8)
Current (without encoder system)	A _{DC}	≤ 0.10
Current (with encoder system)	ADC	≤ 0.35
Power loss	W	≤ 4
Max. cable length	m	30
Encoder system power supply		
Voltage	VDC	5.1 (without Remote Sense)
Current	A _{DC}	0.5
Evaluable encoder protocol		EnDat 2.2 with Article number 22
Max. encoder cable length	m	100
PE/ground connection		At the housing with M4 screw
Weight	kg	0.45

8.8 Sensor Module External SME20

8.8.1 Description

Direct encoder systems outside the cabinet can be connected to the Sensor Module External SME20. The SME20 evaluates these encoder systems and converts the calculated values to DRIVE-CLiQ.

Incremental direct encoder systems with SIN/COS (1 Vpp) and reference signal can be connected.

It is possible to connect a motor with a 17-pole circular connector for the encoder to the 12-pole circular connector of the SME20 using adapter cable 6FX 8002-2CA88-xxxx.

- KTY, PT1000 and PTC temperature sensors can be used to evaluate to the motor temperature.
- The Sensor Module is only suitable for motors without absolute track signals (C/D track):
 - Induction motors (e.g. 1PH)
 - Synchronous motors with pole position identification (e.g. 1FN, 1FW, 1FE)

Neither motor nor encoder data are saved in the SME20.

8.8.2 Interface description

8.8.2.1 Overview

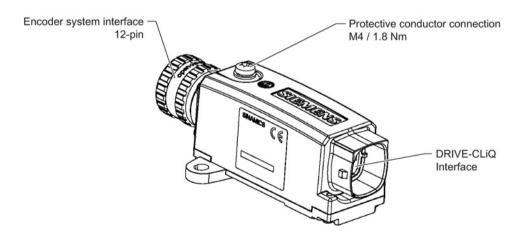


Figure 8-28 Interface description SME20

8.8.2.2 DRIVE-CLiQ interface

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
₽ ₽ ₽	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	А	+ (24 V)	Power supply
	В	M (0 V)	Electronics ground
Connector type	DRIVE-C	LiQ socket	
Power consu	mption max	. 0.25 A	

The blanking cover for the DRIVE-CLiQ port to secure the degree of protection IP 67 is not included in the scope of delivery.

Blanking covers (6 units), article number: 6SL3066-4CA01-0AA0

Note

Only MOTION-CONNECT DRIVE-CLiQ cables may be used for connections. The maximum cable length is 100 m for MOTION-CONNECT 500, and 75 m for MOTION-CONNECT 800PLUS cables.

8.8.2.3 Encoder system interface

Table 8-28	Encoder	svstem	interface	SME20
	Encouch	0,00000	maoo	

	Pin	Signal name	Technical data	
	1	B*	Inverse incremental signal B	
<u>A</u>	2	P5	Encoder power supply	
8 9 1	3	R	Reference signal R	
	4	R*	Inverse reference signal R	
	5	А	Incremental signal A	
6° 11 °3	6	A*	Inverse incremental signal A	
5 4	7	-Temp ^{1) 2)}	Temperature sensor connection ³⁾ KTY84-1C130 / PT1000 / PTC	
	8	В	Incremental signal B	
	9	+Temp ^{1) 2)}	Temperature sensor connection ³⁾ KTY84-1C130 / PT1000 / PTC	
	10	М	Ground, encoder power supply	
	11	М	Ground, encoder power supply	
	12	P5	Encoder power supply	
Connector kit:	12 pole, article number: 6FX2003-0SA12			
Measuring current via temperature sensor connection: 2 mA Blanking cover for encoder system interface: Pöppelmann GmbH & Co. KG, Lohne, Article number: GPN 300 F211				

- ¹⁾ These connections do not have protective separation!
- ²⁾ Accuracy of the temperature measurement:
 - KTY: ±7 °C (including evaluation)
 - PT1000: ±5 °C (PT1000 tolerance class B according to DIN EN 60751 including evaluation)
 - PTC: ±5 °C (including evaluation)
- ³⁾ Connecting cable: Article number 6FX8002-2CA88-....

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

• Connect a KTY temperature sensor with the correct polarity.





Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.


- Use temperature sensors that comply with the specifications relating to protective separation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

8.8.3 Connection example

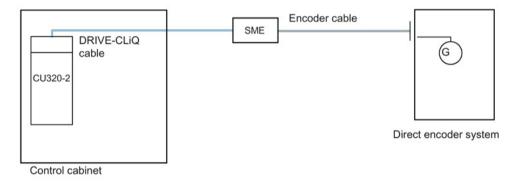

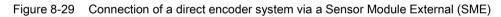


8.8.4 Dimension drawing

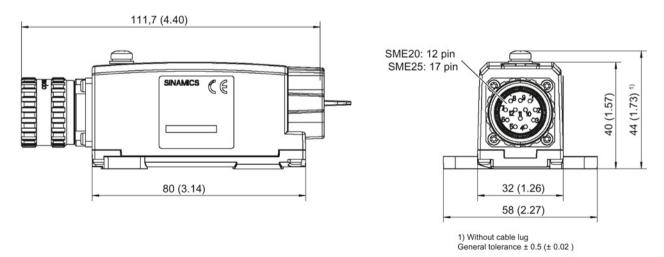



8.8.5 Installation

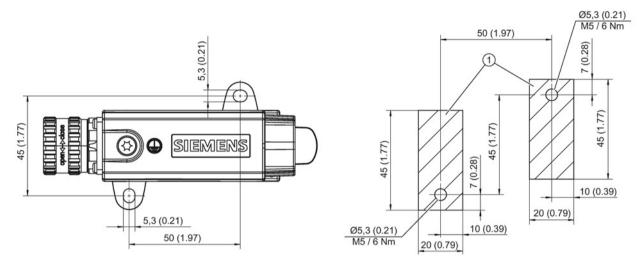

① Contact surface

Figure 8-31 Drilling pattern for installing the SME20/SME25

Installation

- 1. Place the drilling pattern on the mounting surface. Make sure that the contact surface is bare, unpainted metal.
- 2. Drill two holes with Ø 5.3 or M5 threaded holes according to the drilling pattern.
- 3. Fix the Sensor Module to the mounting surface. The tightening torque is 6 Nm.

8.8.6 Technical data

Table 8-29 Technical data


6SL3055-0AA00-5EA.	Unit	Value	
Electronics power supply			
Voltage	VDC	24 (20.4 28.8)	
Current (without encoder system)	ADC	≤ 0.15	
Current (with encoder system)	A _{DC}	≤ 0.25	
Power loss	W	≤ 4	
Max. cable length	m	30	
Encoder system power supply			
Voltage	V _{DC}	5	
Current	ADC	0.35	
Encoder frequency that can be evaluated	kHz	≤ 500	
(fencoder)			
PE/ground connection		At the housing with M4 screw	
Weight	kg	0.31	

Note

Current controller clock cycle

For a current controller clock cycle of 31.25 $\mu s,$ an SME20 with article number 6SL3055-0AA00-5EA3 must be used.

The maximum cable length for the encoder system interface depends on the current consumption of the encoder system and the cross-section of the wire in the cable. However, the maximum length is 30 m. The figure below applies to encoder systems that operate in the supply voltage range between 4.75 V and 5.25 V. The sample parameters shown are 0.28 mm² cross-section (0.14 mm² supply plus 0.14 mm² Remote Sense wires) and 0.64 mm² (0.5 mm² supply plus 0.14 mm² Remote Sense wires).

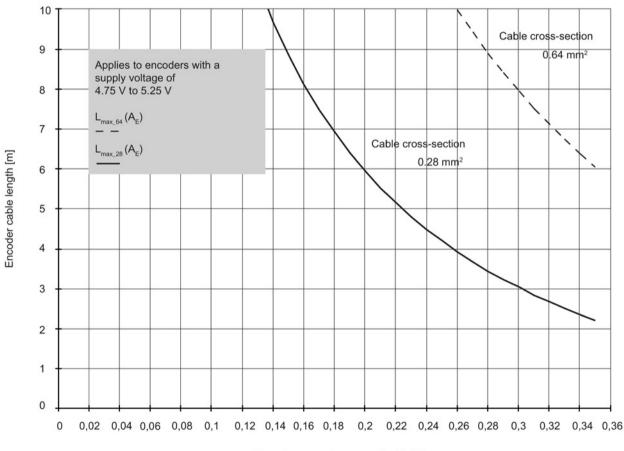

Encoder current consumption A_{E} [A]

Figure 8-32 Max. cable length as a function of the current drawn by the encoder system

In addition to the encoder systems for the supply voltage range of 4.75 V to 5.25 V in the diagram above, encoder systems are also available for the extended range down to 3.6 V. These are generally operable using encoder system cables up to 30 m in length, provided that the total cross-section of the supply plus Remote Sense wires does not fall below 0.14 mm^2 .

8.9 Sensor Module External SME25

8.9.1 Description

Direct encoder systems outside the cabinet can be connected to the Sensor Module External SME25. The SME25 evaluates these encoder systems and converts the calculated values to DRIVE-CLiQ.

Direct encoder systems with EnDat 2.1, EnDat 2.2 article designation 02 or SSI with SIN/COS (1 Vpp) incremental signals can be connected, however without reference signal.

Neither motor nor encoder data are saved in the SME25.

8.9.2 Interface description

8.9.2.1 Overview

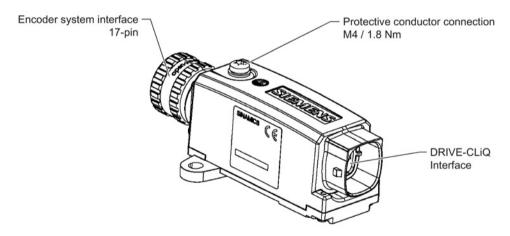


Figure 8-33 Interface description SME25

Receive data -

Power supply

Electronics ground

8.9.2.2 DRIVE-CLiQ interface

	Pin	Signal name	Technical data
	1	ТХР	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	

RXN

+ (24 V)

M (0 V)

DRIVE-CLiQ socket

Reserved, do not use

Reserved, do not use

Reserved, do not use

Table 8- 30	DRIVE-CLiQ interface
-------------	----------------------

4 5

6

7

8

А

В

Power consumption max. 0.25 A

The blanking cover for the DRIVE-CLiQ port to secure the degree of protection IP 67 is not included in the scope of delivery.

Blanking covers (6 units), article number: 6SL3066-4CA01-0AA0

Note

Connector

type


Only MOTION-CONNECT DRIVE-CLiQ cables may be used for connections. The maximum cable length is 100 m for MOTION-CONNECT 500, and 75 m for MOTION-CONNECT 800PLUS cables.


8.9.2.3 Encoder system interface

	Pin	Signal name	Technical data	
$\begin{array}{c} & & & \\ & & & \\ 2 & & & 12 \\ 2 & & & 12 \\ 3 & & 13 \\ 0 & & 0 \\ 3 & & 0 \\ 0 & & 0 \\ 4 & & 17 \\ 0 & & 0 \\ 4 & 14 \\ 5 \\ 0 & & 0 \\ 6 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\$	1	P5	Encoder power supply	
	2	Reserved, do not use		
	3	Reserved, do not use		
	4	Μ	Ground, encoder power supply	
	5	Reserved, do not use		
	6	Reserved, do not use		
6	7	P5	Encoder power supply	
	8	Clock	Clock, EnDat interface, SSI clock	
	9	Clock*	Inverted clock, EnDat interface, inverted SSI clock	
	10	Μ	Ground, encoder power supply	
	11	Housing potential		
	12	В	Incremental signal B	
	13	B*	Inverse incremental signal B	
	14	Data	Data, EnDat interface, SSI data	
	15	Α	Incremental signal A	
	16	A*	Inverse incremental signal A	
	17	Data*	Inverse data, EnDat interface, Inverse SSI data	
Connector kit:	17 pole, article number: 6FX2003-0SA17			
Blanking plate for e Article number: GPl	•	interface: Company Pöppe	Imann GmbH & Co. KG, Lohne,	

Table 8-31 Encoder system interface SME25

8.9.3 Connection example

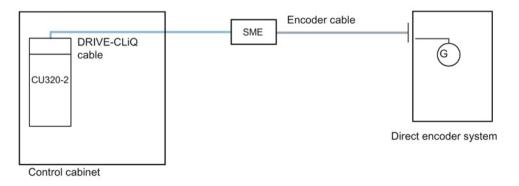

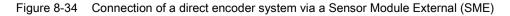

8.9.4 Dimension drawing


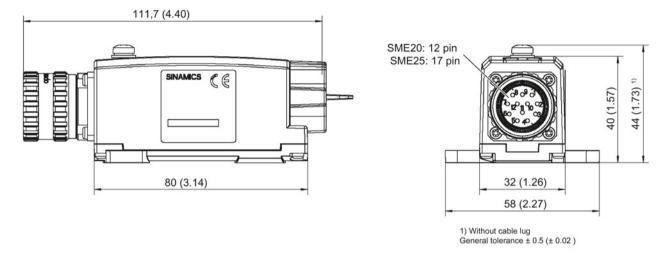


Figure 8-35 Dimension drawing of the Sensor Module External SME25, all data in mm and (inches)

8.9.5 Installation

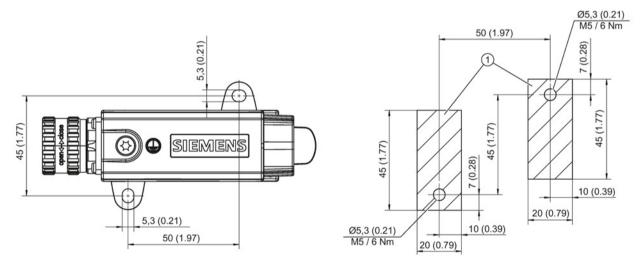

Contact surface

Figure 8-36 Drilling pattern for installing the SME20/SME25

Installation

- 1. Place the drilling pattern on the mounting surface. Make sure that the contact surface is bare, unpainted metal.
- 2. Drill two holes with Ø 5.3 or M5 threaded holes according to the drilling pattern.
- 3. Fix the Sensor Module to the mounting surface. The tightening torque is 6 Nm.

8.9.6 Technical data

Table 8-32 Technical data


6SL3055-0AA00-5HA.	Unit	Value	
Electronics power supply			
Voltage	VDC	24 (20.4 28.8)	
Current (without encoder system)	A _{DC}	≤ 0.15	
Current (with encoder system)	ADC	≤ 0.25	
Power loss	W	≤ 4	
Max. cable length	m	30	
Encoder system power supply			
Voltage	VDC	5	
Current	A _{DC}	0.35	
Encoder frequency that can be evaluated	kHz	≤ 500	
(f _{encoder})			
SSI/EnDat baud rate	kBd	100	
PE/ground connection		At the housing with M4 screw	
Weight	kg	0.31	

Note

Current controller clock cycle

For a current controller clock cycle of 31.25 $\mu s,$ an SME25 with article number 6SL3055-0AA00-5HA3 must be used.

The maximum cable length for the encoder system interface depends on the current consumption of the encoder system and the cross-section of the wire in the cable. However, the maximum length is 30 m. The figure below applies to encoder systems that operate in the supply voltage range between 4.75 V and 5.25 V. The sample parameters shown are 0.28 mm² cross-section (0.14 mm² supply plus 0.14 mm² Remote Sense wires) and 0.64 mm² (0.5 mm² supply plus 0.14 mm² Remote Sense wires).

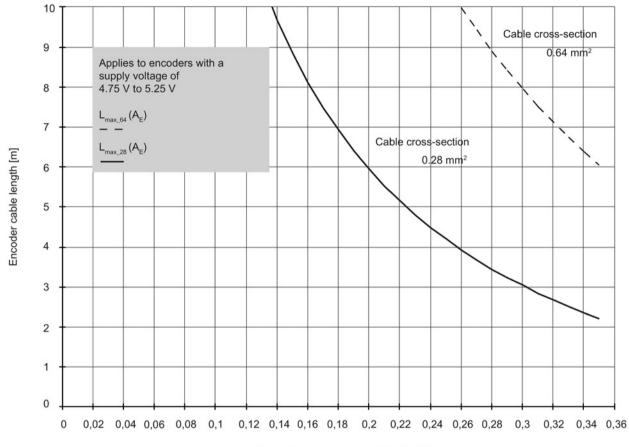

Encoder current consumption A_F [A]

Figure 8-37 Max. cable length as a function of the current drawn by the encoder system

In addition to the encoder systems for the supply voltage range of 4.75 V to 5.25 V in the diagram above, encoder systems are also available for the extended range down to 3.6 V. These are generally operable using encoder system cables up to 30 m in length, provided that the total cross-section of the supply plus Remote Sense wires does not fall below 0.14 mm².

8.10 Sensor Module External SME120

8.10.1 Description

Direct encoder systems outside the cabinet can be connected to the Sensor Module External SME120. The SME120 evaluates these encoder systems and converts the calculated values to DRIVE-CLiQ. Neither motor nor encoder data are saved in the SME120. Incremental direct encoder systems with SIN/COS (1 Vpp) and reference signal can be connected.

An SME120 is always used when the temperature signals of the motors do not have protective separation or where this separation is not possible for certain reasons.

The SME120 is especially used for linear motor applications. A Hall sensor box can be connected to determine the commutation position of a linear motor.

8.10.2 Safety instructions for Sensor Modules External

The safety instructions listed here apply specifically for the Sensor Modules External SME12..

Note

When handling/using a Sensor Module External, you must also observe the safety instructions for Sensor Modules as well as the safety instructions in Chapter 1 (Page 19).

A Sensor Module External SME12. is a device of safety class I.

Death or severe injury can occur when an SME12. is incorrectly used and handled.

When an SME12. is incorrectly used and handled, protective devices can be disabled; which means that death or severe injury can occur when touching.

- It is mandatory that you connect a protective conductor with a minimum cross-section of 2.5 mm² in order to guarantee safe electrical separation.
- In order to ensure degree of protection IP67, close all connections, even connections that are not used, with connectors or suitable sealing caps. You must observe the specified torques.
- Before commissioning, always replace the plastic covers of connections X100 to X500 using the corresponding connectors, as otherwise the Sensor Modules External SME12. will not conform with degree of protection IP67.
- Under no circumstances open the Sensor Modules, as this can mean that they are no longer properly sealed! Only a certified SIEMENS service center should carry out repair and maintenance work.
- If it appears that the Sensor Module packaging has been damaged by water, do not commission the Sensor Module.

NOTICE

Damage caused by connecting a grounded encoder system power supply

The devices can be damaged by connecting encoder systems with grounded encoder system power supplies.

Only connect those encoder systems where the power supply is not grounded.

8.10.3 Interface description

8.10.3.1 Overview

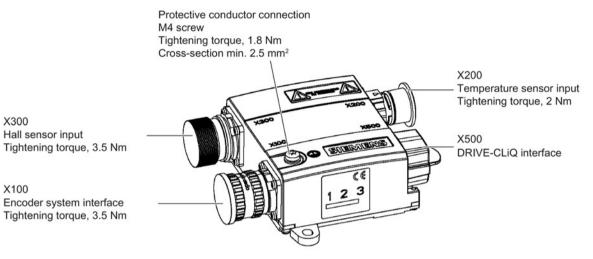


Figure 8-38 Interface description, SME120

8.10.3.2 X100 encoder system interface

	Pin	Signal name	Technical data	
$ \begin{array}{c} $	1	B*	Inverse incremental signal B	
	2	P5	Encoder power supply	
	3	R	Reference signal R	
	4	R*	Inverse reference signal R	
	5	A	Incremental signal A	
	6	A*	Inverse incremental signal A	
	7	Reserved, do not use		
	8	В	Incremental signal B	
	9	Reserved, do not use		
	10	М	Ground, encoder power supply	
	11	М	Ground, encoder power supply	
	12	P5	Encoder power supply	
Connector kit:	12 pole, article number: 6FX2003-0SA12			
Blanking plate for encoder system interface: Company Pöppelmann GmbH & Co. KG, Lohne, Article number: GPN 300 F211,				

Table 8-33 X100: Encoder system interface

8.10.3.3 X200 thermistor sensor input

	Pin	Function	Technical data
2 +Temp ¹ PTC /bimetallic switch with NC for linear and torque motor app	Temperature sensor connection KTY84-1C130 / PT1000 /		
	PTC /bimetallic switch with NC contact for linear and torque motor applications, connect the KTY84- 1C130 or PT1000 motor temperature sensor here		
	3	+Temp ¹⁾	Temperature sensor connection KTY84-1C130 / PT1000 /
	4	-Temp ¹⁾	PTC /bimetallic switch with NC contact for linear and torque motor applications, connect the PTC triple element 1 or bimetallic switch here
	5	+Temp ¹⁾	Temperature sensor connection KTY84-1C130 / PT1000 /
0	6	-Temp ¹⁾	PTC /bimetallic switch with NC contact for torque motor applications, connect a PTC triplet 2 here
Connector kit:	6+1-pole, article number: 6FX2003-0SU07		
Measuring current via temperature sensor connection: 2 mA			

Table 8- 34 X200: Temperature sensor input

¹⁾ Accuracy of the temperature measurement:

- KTY: ±7 °C (including evaluation)
- PT1000: ±5 °C (PT1000 tolerance class B according to DIN EN 60751 including evaluation)
- PTC: ±5 °C (including evaluation)

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

• Connect a KTY temperature sensor with the correct polarity.

NOTICE

Overheating of the motor through jumpering the temperature sensor connections

Jumpering temperature sensor connections "+Temp" and "-Temp" results in incorrect measurement results. Damage to the motor can result if the overheating is not detected.

• When using several temperature sensors, separately connect the individual sensors to "+Temp" and "-Temp".

8.10.3.4 X300 hall sensor input

	Pin	Signal name	Technical data
	1	С	Absolute track signal C
	2	C*	Inverse absolute track signal C
	3	P5	Encoder power supply
	4	М	Ground, encoder power supply
	5	D	Absolute track signal D
40'0'0'	6	D*	Inverse absolute track signal D
9 0 0	7	Not assigned	
	8	Not assigned	
	9	Ground	Ground (for internal shield)

8.10.3.5 X500 DRIVE-CLiQ interface

Table 8- 36 X50	0: DRIVE-CLiQ interface
-----------------	-------------------------

	Pin	Signal name	Technical data	
	1	ТХР	Transmit data +	
П В	2	TXN	Transmit data -	
	3	RXP	Receive data +	
	4	Reserved, do not use		
	5	Reserved, do not use		
	6	RXN	Receive data -	
	7	Reserved, do not use		
	8	Reserved, do not use		
	А	+ (24 V)	Power supply	
	В	M (0 V)	Electronics ground	
Connector type	DRIVE-CLiQ socket			
Power consur	nption max.	0.30 A		


The blanking cover for the DRIVE-CLiQ port to secure the degree of protection IP 67 is not included in the scope of delivery.

Blanking covers (6 units), article number: 6SL3066-4CA01-0AA0

Note

Only MOTION-CONNECT DRIVE-CLiQ cables may be used for connections. The maximum cable length is 100 m for MOTION-CONNECT 500, and 75 m for MOTION-CONNECT 800PLUS cables.

8.10.4 Connection examples

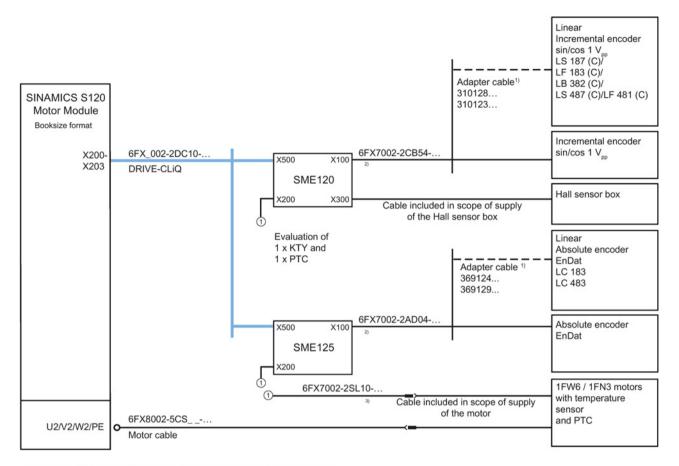


¹⁾ Cable can be ordered from the manufacturer of the linear scale

²⁾ Max. encoder cable length, see diagram in Chapter "Technical data"

³⁾ Max. cable length between SME and motor connection: 10 m

Figure 8-39 Connecting motor encoders via SME for motors without a DRIVE-CLiQ interface and molded connecting cables with terminated cable ends

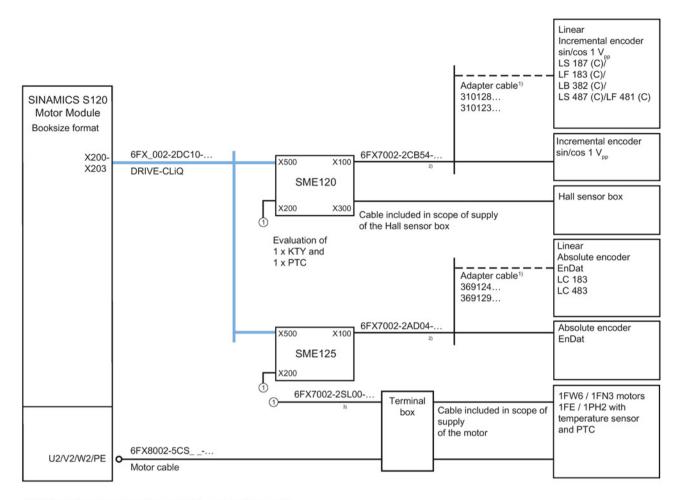


¹⁾ Cable can be ordered from the manufacturer of the linear scale

2) Max. encoder cable length, see diagram in Chapter "Technical data"

³⁾ Max. cable length between SME and motor connection: 10 m

Figure 8-40 Connecting motor encoders via SME for motors without a DRIVE-CLiQ interface and molded connecting cables with open cable ends

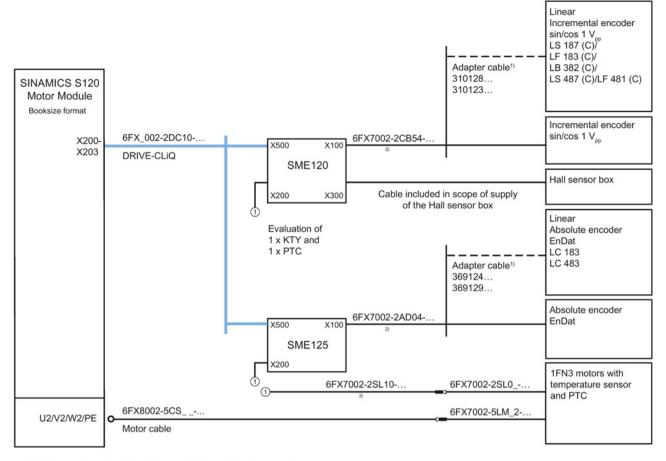


¹⁾ Cable can be ordered from the manufacturer of the linear scale

²⁾ Max. encoder cable length, see diagram in Chapter "Technical data"

³⁾ Max. cable length between SME and motor connection: 10 m

Figure 8-41 Connecting motor encoders via SME for motors without a DRIVE-CLiQ interface, with an integrated 2-hole terminal box

Connection examples for motors connected in parallel

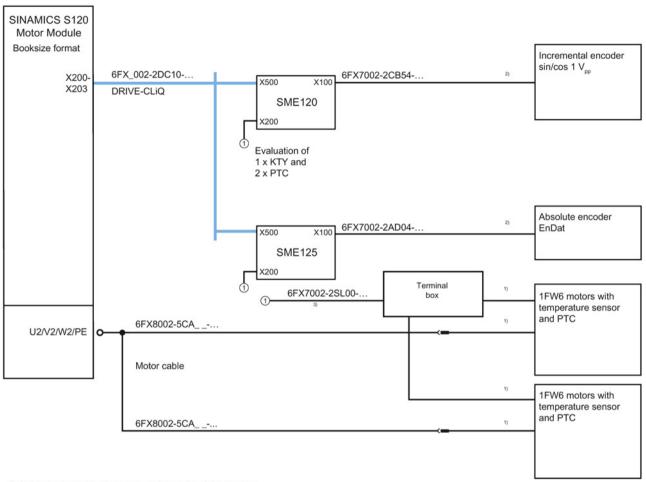


¹⁾ Cable included in the scope of supply of the motor

²⁾ Max. encoder cable length, see diagram in Chapter "Technical data"

³⁾ Max. cable length between SME and motor connection: 10 m

Figure 8-42 Connecting motor encoders via SME for torque motors connected in parallel without a DRIVE-CLiQ interface

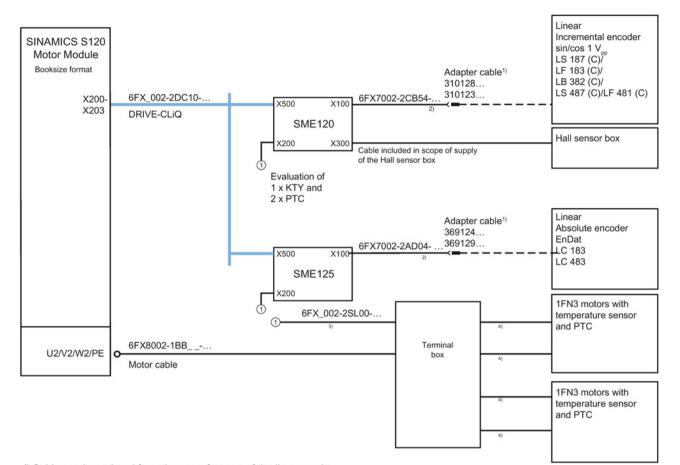

¹⁾ Cable can be ordered from the manufacturer of the linear scale


²⁾ Max. encoder cable length, see diagram in Chapter "Technical data"


³⁾ Max. cable length between SME and motor connection: 10 m

⁴⁾ For motors without terminal box, the cables are included in the scope of supply of the motor. For motors with 2-hole terminal boxes, 6FX7002-2SL0_-... cables must be used.


Figure 8-43 Connecting motor encoders via SME for linear motors connected in parallel without a DRIVE-CLiQ interface

8.10.5 Dimension drawing

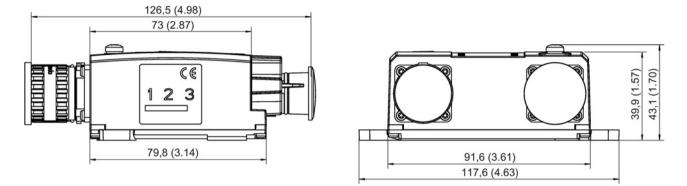

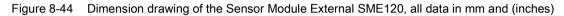

8.10.6 Installation

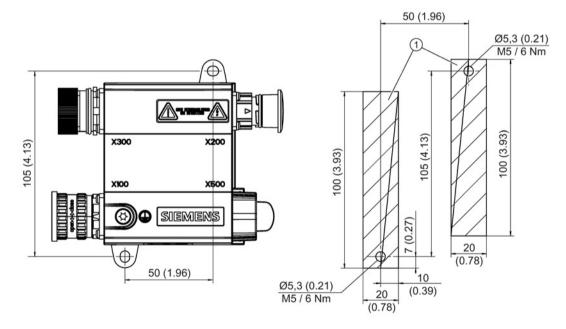

① Contact surface

Figure 8-45 Hole drilling pattern for installation

Installation

- 1. Place the drilling pattern on the mounting surface. Make sure that the contact surface is bare, unpainted metal.
- 2. Drill two holes with Ø 5.3 or M5 threaded holes according to the drilling pattern.
- 3. Fix the Sensor Module to the mounting surface. The tightening torque is 6 Nm.

8.10.7 Technical data

6SL3055-0AA00-5JA	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20.4 28.8)
Current (without encoder system)	A _{DC}	≤ 0.20
Current (with encoder system)	ADC	≤ 0.30
Power loss	W	≤ 4.5
Max. cable length	m	30
Encoder system power supply		
Voltage	V _{DC}	5
Current	A _{DC}	0.35
Encoder frequency that can be evaluated	kHz	≤ 500
(f _{encoder})		
PE/ground connection	At the housing with M4 screw	
Weight	kg	0.7

Note


Current controller clock cycle

For a current controller clock cycle of 31.25 $\mu s,$ an SME120 with article number 6SL3055-0AA00-5JA3 must be used.


Note

In order to guarantee the degree of protection, all of the plug connectors must be correctly screwed into place and appropriately locked.

The maximum cable length for the encoder system interface depends on the current consumption of the encoder system and the cross-section of the wire in the cable. However, the maximum length is 30 m. The figure below applies to encoder systems that operate in the supply voltage range between 4.75 V and 5.25 V. The sample parameters shown are 0.28 mm² cross-section (0.14 mm² supply plus 0.14 mm² Remote Sense wires) and 0.64 mm² (0.5 mm² supply plus 0.14 mm² Remote Sense wires).

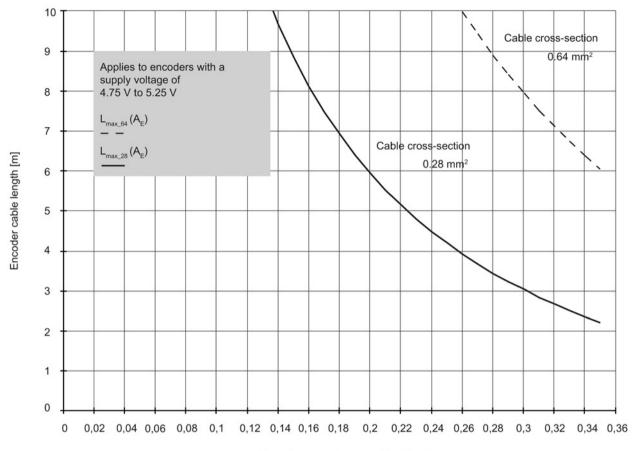

Encoder current consumption A_E [A]

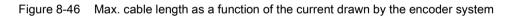

In addition to the encoder systems for the supply voltage range of 4.75 V to 5.25 V in the diagram above, encoder systems are also available for the extended range down to 3.6 V. These are generally operable using encoder system cables up to 30 m in length, provided that the total cross-section of the supply plus Remote Sense wires does not fall below 0.14 mm^2 .

8.11.1 Description

Direct encoder systems outside the cabinet can be connected to the Sensor Module External SME125. The SME125 evaluates these encoder systems and converts the calculated values to DRIVE-CLiQ.

The components are always used when the temperature signals of the motors do not have protective separation or where this separation is not possible for certain reasons. SME125 is mainly used in linear motor applications.

Direct encoder systems with EnDat 2.1, EnDat 2.2 article designation 02 or SSI with SIN/COS (1 Vpp) incremental signals can be connected, however without reference signal.

Neither motor nor encoder data are saved in the SME125.

8.11.2 Safety instructions for Sensor Modules External

The safety instructions listed here apply specifically for the Sensor Modules External SME12..

Note

When handling/using a Sensor Module External, you must also observe the safety instructions for Sensor Modules as well as the safety instructions in Chapter 1 (Page 19).

A Sensor Module External SME12. is a device of safety class I.

Death or severe injury can occur when an SME12. is incorrectly used and handled.

When an SME12. is incorrectly used and handled, protective devices can be disabled; which means that death or severe injury can occur when touching.

- It is mandatory that you connect a protective conductor with a minimum cross-section of 2.5 mm² in order to guarantee safe electrical separation.
- In order to ensure degree of protection IP67, close all connections, even connections that are not used, with connectors or suitable sealing caps. You must observe the specified torques.
- Before commissioning, always replace the plastic covers of connections X100 to X500 using the corresponding connectors, as otherwise the Sensor Modules External SME12. will not conform with degree of protection IP67.
- Under no circumstances open the Sensor Modules, as this can mean that they are no longer properly sealed! Only a certified SIEMENS service center should carry out repair and maintenance work.
- If it appears that the Sensor Module packaging has been damaged by water, do not commission the Sensor Module.

NOTICE

Damage caused by connecting a grounded encoder system power supply

The devices can be damaged by connecting encoder systems with grounded encoder system power supplies.

• Only connect those encoder systems where the power supply is not grounded.

8.11.3 Interface description

8.11.3.1 Overview

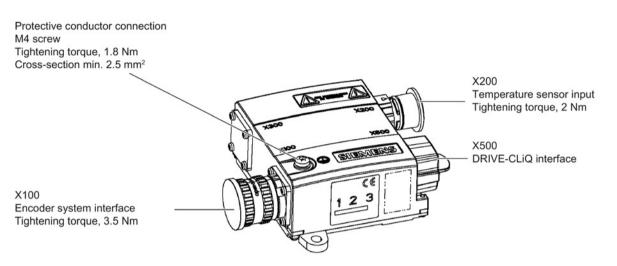


Figure 8-47 Interface description, SME125

8.11.3.2 X100 encoder system interface

	Pin	Signal name	Technical data
	1	P5	Encoder power supply
Α	2	Reserved, do not use	
	3	Reserved, do not use	
$\begin{pmatrix} 20 & 12 & 00 \\ 3 & 13 & 0 & 16 & 09 \\ 0 & 0 & 0 & 0 & 0 & 0 \end{pmatrix}$	4	М	Ground, encoder power supply
	5	Reserved, do not use	
4 14 15 08 0 0 7	6	Reserved, do not use	
3 6	7	P5	Encoder power supply
	8	Clock	Clock, EnDat interface, SSI clock
	9	Clock*	Inverted clock, EnDat interface, inverted SSI clock
	10	М	Ground, encoder power supply
	11	Housing potential	
	12	В	Incremental signal B
	13	B*	Inverse incremental signal B
	14	Data	Data, EnDat interface, SSI data
	15	A	Incremental signal A
	16	A*	Inverse incremental signal A
	17	Data*	Inverse data, EnDat interface, Inverse SSI data
Connector kit:	nnector kit: 17 pole, article number: 6FX2003-0SA17		
Blanking plate for encoder system interface: Company Pöppelmann GmbH & Co. KG, Lohne, Article number: GPN 300 F211			

Table 8-38 X100: Encoder system interface

8.11.3.3 X200 thermistor sensor input

	Pin	Function	Technical data
	1	-Temp ¹⁾	Temperature sensor connection KTY84-1C130 / PT1000 /
for linear and torque m	PTC /bimetallic switch with NC contact for linear and torque motor applications, connect the KTY84- 1C130 or PT1000 motor temperature sensor here		
	3	+Temp ¹⁾	Temperature sensor connection KTY84-1C130 / PT1000 /
	4	-Temp ¹⁾	PTC /bimetallic switch with NC contact for linear and torque motor applications, connect the PTC triple element 1 or bimetallic switch here
	5	+Temp ¹⁾	Temperature sensor connection KTY84-1C130 / PT1000 /
000	6	-Temp ¹⁾ PTC /bimetallic switch with NC contact for torque motor applications, connect a PTC triplet	PTC /bimetallic switch with NC contact for torque motor applications, connect a PTC triplet 2 here
Connector kit:	6+1-pole, article number: 6FX2003-0SU07		
Measuring current via temperature sensor connection: 2 mA			

Table 8- 39 X200: Temperature sensor input

¹⁾ Accuracy of the temperature measurement:

- KTY: ±7 °C (including evaluation)
- PT1000: ±5 °C (PT1000 tolerance class B according to DIN EN 60751 including evaluation)
- PTC: ±5 °C (including evaluation)

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

• Connect a KTY temperature sensor with the correct polarity.

NOTICE

Overheating of the motor through jumpering the temperature sensor connections

Jumpering temperature sensor connections "+Temp" and "-Temp" results in incorrect measurement results. Damage to the motor can result if the overheating is not detected.

• When using several temperature sensors, separately connect the individual sensors to "+Temp" and "-Temp".

8.11.3.4 X500 DRIVE-CLiQ interface

	Table 8-40	X500: DRIVE-CLiQ interface
--	------------	----------------------------

	Pin	Signal name	Technical data	
	1	ТХР	Transmit data +	
Б	2	TXN	Transmit data -	
	3	RXP	Receive data +	
	4	Reserved, do not use		
	5	Reserved, do not use		
	6	RXN	Receive data -	
	7	Reserved, do not use		
	8	Reserved, do not use		
	А	+ (24 V)	Power supply	
	В	M (0 V)	Electronics ground	
Connector type	DRIVE-CLiQ socket			
Power consur	mption max. 0	.30 A		


The blanking cover for the DRIVE-CLiQ port to secure the degree of protection IP 67 is not included in the scope of delivery.

Blanking covers (6 units), article number: 6SL3066-4CA01-0AA0

Note

Only MOTION-CONNECT DRIVE-CLiQ cables may be used for connections. The maximum cable length is 100 m for MOTION-CONNECT 500, and 75 m for MOTION-CONNECT 800PLUS cables.

8.11.4 Connection examples

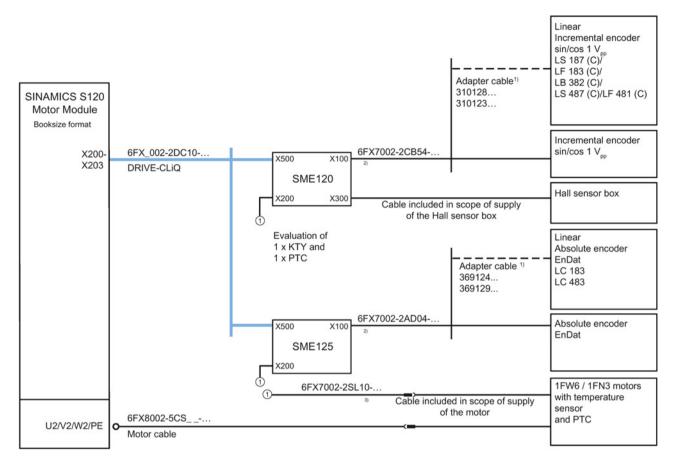


¹⁾ Cable can be ordered from the manufacturer of the linear scale

²⁾ Max. encoder cable length, see diagram in Chapter "Technical data"

³⁾ Max. cable length between SME and motor connection: 10 m

Figure 8-48 Connecting motor encoders via SME for motors without a DRIVE-CLiQ interface and molded connecting cables with terminated cable ends

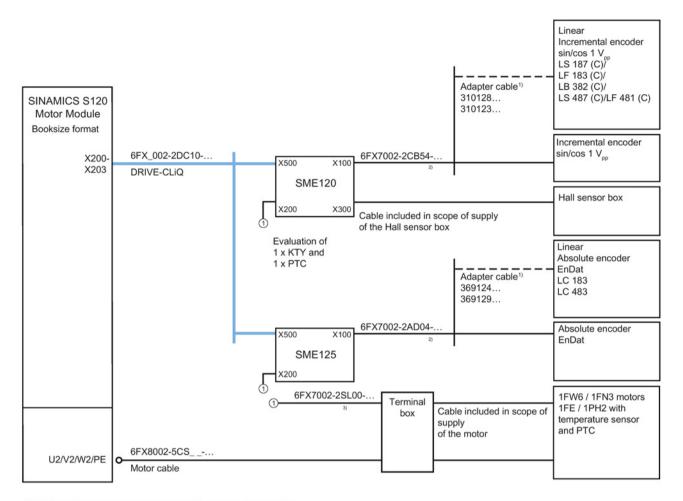


¹⁾ Cable can be ordered from the manufacturer of the linear scale

2) Max. encoder cable length, see diagram in Chapter "Technical data"

³⁾ Max. cable length between SME and motor connection: 10 m

Figure 8-49 Connecting motor encoders via SME for motors without a DRIVE-CLiQ interface and molded connecting cables with open cable ends

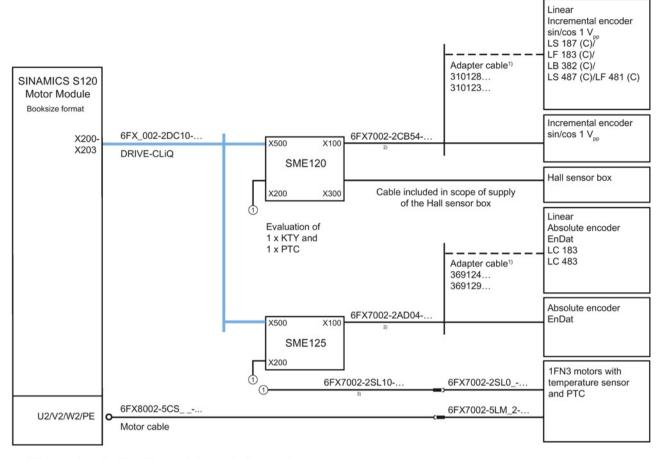


¹⁾ Cable can be ordered from the manufacturer of the linear scale

²⁾ Max. encoder cable length, see diagram in Chapter "Technical data"

³⁾ Max. cable length between SME and motor connection: 10 m

Figure 8-50 Connecting motor encoders via SME for motors without a DRIVE-CLiQ interface, with an integrated 2-hole terminal box

Connection examples for motors connected in parallel

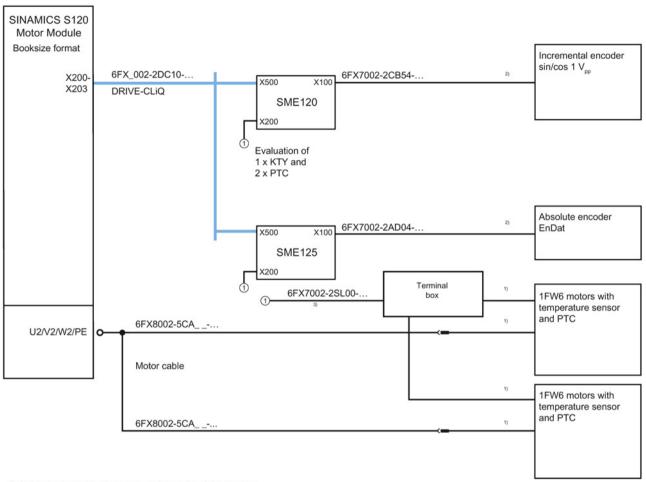


¹⁾ Cable included in the scope of supply of the motor

²⁾ Max. encoder cable length, see diagram in Chapter "Technical data"

³⁾ Max. cable length between SME and motor connection: 10 m

Figure 8-51 Connecting motor encoders via SME for torque motors connected in parallel without a DRIVE-CLiQ interface

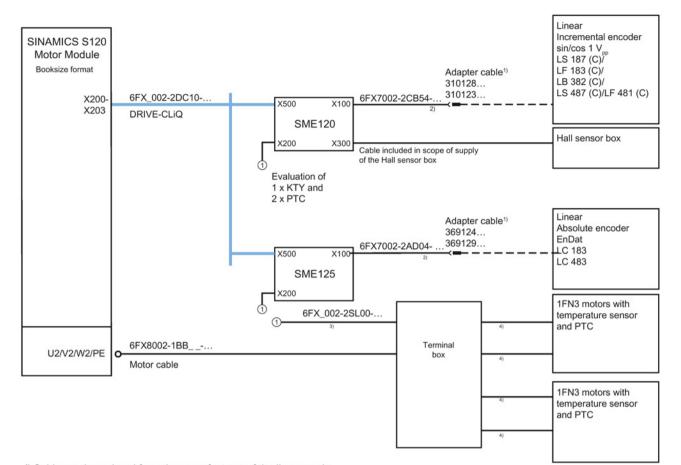

¹⁾ Cable can be ordered from the manufacturer of the linear scale


²⁾ Max. encoder cable length, see diagram in Chapter "Technical data"


³⁾ Max. cable length between SME and motor connection: 10 m

⁴⁾ For motors without terminal box, the cables are included in the scope of supply of the motor. For motors with 2-hole terminal boxes, 6FX7002-2SL0_-... cables must be used.


Figure 8-52 Connecting motor encoders via SME for linear motors connected in parallel without a DRIVE-CLiQ interface

8.11.5 Dimension drawing

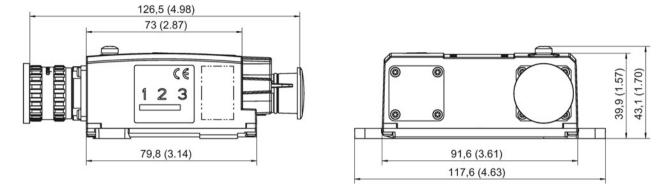

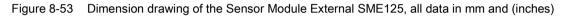

8.11.6 Installation

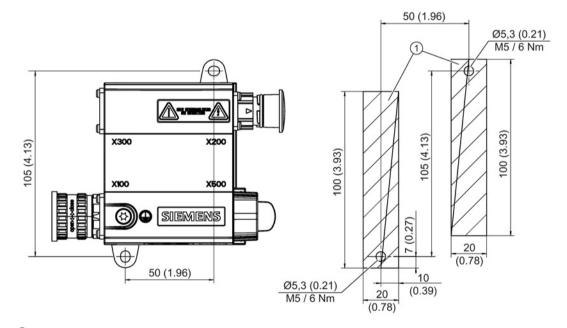

① Contact surface

Figure 8-54 Hole drilling pattern for installation

Installation

- 1. Place the drilling pattern on the mounting surface. Make sure that the contact surface is bare, unpainted metal.
- 2. Drill two holes with Ø 5.3 or M5 threaded holes according to the drilling pattern.
- 3. Fix the Sensor Module to the mounting surface. The tightening torque is 6 Nm.

8.11.7 Technical data

6SL3055-0AA00-5KA	Unit	Value
Electronics power supply		
Voltage	VDC	24 (20.4 28.8)
Current (without encoder system)	A _{DC}	≤ 0.20
Current (with encoder system)	ADC	≤ 0.30
Power loss	W	≤ 4.5
Max. cable length	m	30
Encoder system power supply		
Voltage	V _{DC}	5
Current	A _{DC}	0.35
Encoder frequency that can be evaluated	kHz	≤ 500
(f _{encoder})		
SSI/EnDat baud rate	kBd	100
PE/ground connection	At the housing with M4 screw	
Weight	kg	0.7

Note


Current controller clock cycle

For a current controller clock cycle of 31.25 $\mu s,$ an SME125 with article number 6SL3055-0AA00-5KA3 must be used.


Note

In order to guarantee the degree of protection, all of the plug connectors must be correctly screwed into place and appropriately locked.

The maximum cable length for the encoder system interface depends on the current consumption of the encoder system and the cross-section of the wire in the cable. However, the maximum length is 30 m. The figure below applies to encoder systems that operate in the supply voltage range between 4.75 V and 5.25 V. The sample parameters shown are 0.28 mm² cross-section (0.14 mm² supply plus 0.14 mm² Remote Sense wires) and 0.64 mm² (0.5 mm² supply plus 0.14 mm² Remote Sense wires).

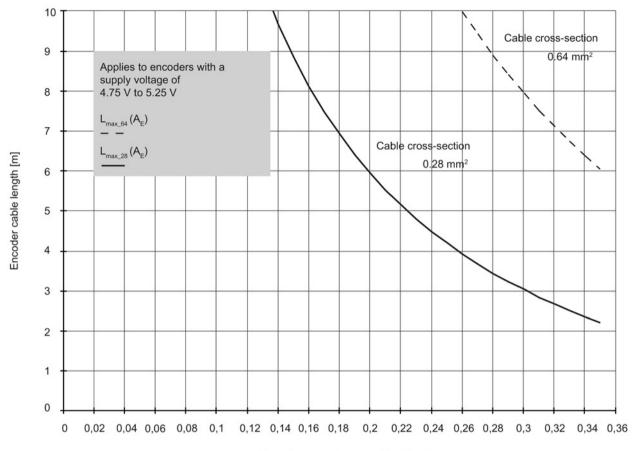

Encoder current consumption A_E [A]

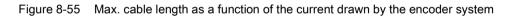

In addition to the encoder systems for the supply voltage range of 4.75 V to 5.25 V in the diagram above, encoder systems are also available for the extended range down to 3.6 V. These are generally operable using encoder system cables up to 30 m in length, provided that the total cross-section of the supply plus Remote Sense wires does not fall below 0.14 mm^2 .

8.12 DRIVE-CLiQ encoder

8.12.1 Description

The DRIVE-CLiQ encoder is available as an absolute encoder with integrated DRIVE-CLiQ interface. The multiturn design of the encoder senses absolute position values extending over 4096 revolutions. The singleturn design senses the absolute position within a revolution.

The most important advantages are:

- Automatic commissioning via DRIVE-CLiQ
- High operating temperatures of 100 °C are possible
- Integrated diagnostics concept

Table 8- 42 Encoder for mounting with DRIVE-CLiQ

Designation	Article No.	Description
DRIVE-CLiQ synchronous flange VW 6 mm	6FX2001-5FD13-0AA.	Absolute encoder with DRIVE-CLiQ, single-turn
DRIVE-CLiQ clamping flange VW 10 mm	6FX2001-5QD13-0AA.	Absolute encoder with DRIVE-CLiQ, single-turn
DRIVE-CLiQ hollow shaft 10 mm	6FX2001-5VD13-0AA.	Absolute encoder with DRIVE-CLiQ, single-turn
DRIVE-CLiQ hollow shaft 12 mm	6FX2001-5WD13-0AA.	Absolute encoder with DRIVE-CLiQ, single-turn
DRIVE-CLiQ synchronous flange VW 6 mm	6FX2001-5FD25-0AA.	Absolute encoder with DRIVE-CLiQ, multiturn
DRIVE-CLiQ clamping flange VW 10 mm	6FX2001-5QD25-0AA.	Absolute encoder with DRIVE-CLiQ, multiturn
DRIVE-CLiQ hollow shaft 10 mm	6FX2001-5VD25-0AA.	Absolute encoder with DRIVE-CLiQ, multiturn
DRIVE-CLiQ hollow shaft 12 mm	6FX2001-5WD25-0AA.	Absolute encoder with DRIVE-CLiQ, multiturn

8.12.2 Interface description

8.12.2.1 Overview



Figure 8-56 DRIVE-CLiQ encoder

8.12 DRIVE-CLiQ encoder

8.12.2.2 DRIVE-CLiQ interface

Table 8- 43	DRIVE-CLiQ interface
-------------	----------------------

	Pin	Signal name	Technical data
	1	ТХР	Transmit data +
п в	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	А	Reserved, do not use	
	В	M (0 V)	Electronics ground

The blanking cover for the DRIVE-CLiQ port to secure the degree of protection IP 67 is not included in the scope of delivery.

Blanking covers (6 units), article number: 6SL3066-4CA01-0AA0

8.12.3 Dimension drawings

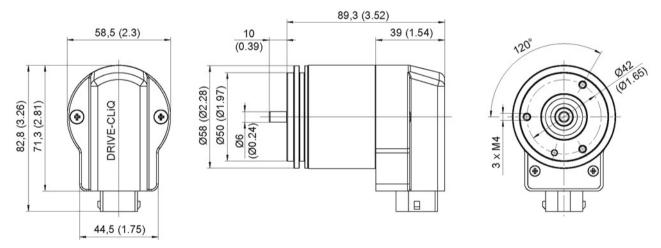


Figure 8-57 Dimension drawing of synchronous flange, all data in mm and (inches)



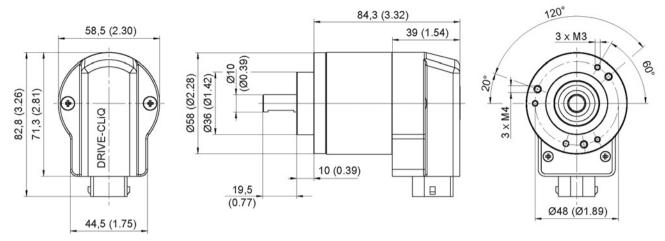



Figure 8-58 Dimension drawing of clamping flange, all data in mm and (inches)

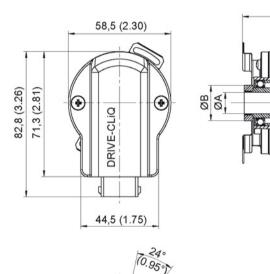

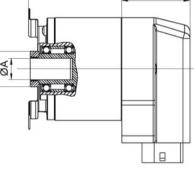

92,2 (3.63)

39 (1.54)

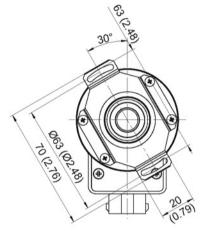

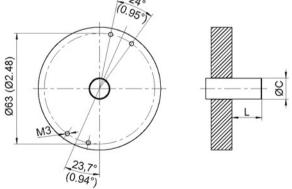


Figure 8-59 Dimension drawing of hollow shaft, all data in mm and (inches)

8.12 DRIVE-CLiQ encoder

	Dimer	Dimensions		
Hollow shaft ØA	10+0.012 (0.39)	12+0.012 (0.47)	mm (inch)	
Connection shafts ØC	10 (0.39)	12 (0.47)	mm (inch)	
Clamping ring ØB	18 (0.70)	20 (0.78)	mm (inch)	
L min.	15 (0.59)	18 (0.70)	mm (inch)	
L max.	20 (0.78)	20 (0.78)	mm (inch)	
Shaft code	2 (0.07)	7 (0.27)	mm (inch)	

L = Engaged depth of the connection shaft into the encoder

8.12.4 Installation

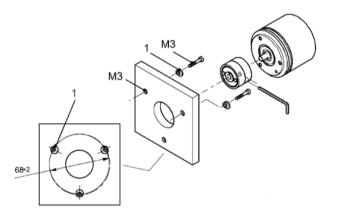


Figure 8-60 Installation: Synchronous flange, 1: Clamp straps

Clamp straps / couplings

Clamp straps and couplings are required as mounting accessories. The clamp straps are used to fix the encoders with a synchronous flange.

Table 8-45 Selection and ordering data

Designation	Article No.
Clamp strap (No.1 in the drawing) for encoder with synchronous flange (3 units are required)	6FX2001-7KP01
Spring disk coupling Shaft diameter:	
• 6 mm / 6 mm	6FX2001-7KF10
• 6 mm / 5 mm	6FX2001-7KF06
Plug-in coupling Shaft diameter:	
• 6 mm / 6 mm	6FX2001-7KS06
• 10 mm / 10 mm	6FX2001-7KS10

Product name	Spring disk coupling	Plug-in coupling
Transmission torque, max.	0.8 Nm	0.7 Nm
Shaft diameter	6 mm both ends or $d_1 = 6$ mm, $d_2 = 5$ mm	6 mm both ends or 10 mm both ends
Center offset of shafts, max.	0.4 mm	0.5 mm
Axial offset	± 0.4 mm	± 0.5 mm
Angular displacement of shafts, max.	3°	1°
Torsional rigidity	150 Nm / rad	31 Nm / rad
Lateral spring stiffness	6 N / mm	10 N / mm
Moment of inertia	19 gcm ²	20 gcm ²
Max. speed	12000 rpm	12000 rpm
Operating temperature	-20 +150 °C	-20 +80 °C
Weight, approx.	16 g	20 g

Table 8-46 Installation instructions

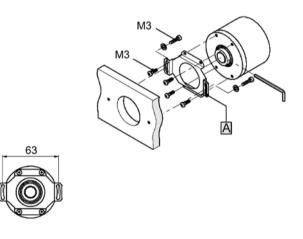


Figure 8-61 Installation: Hollow shaft, A: Spring plate (included in scope of supply)

8.12 DRIVE-CLiQ encoder

8.12.5 Technical data

	Table 8-47	Technical data of DRIVE-CLiQ encoders
--	------------	---------------------------------------

Design	Unit	Absolute encoder with DRIVE-CLiQ
Operating voltage at encoder	V	24 V -15% / +20%
Power consumption Single-turn Multiturn	mA mA	Approx. 245 Approx. 325
Interface		DRIVE-CLiQ
Speed electrically permissible mechanical, max.	rpm rpm	14000 10000
Cable length, max.	m	100
Connection		DRIVE-CLiQ connector, radial
Resolution Single-turn Multiturn	Bit Bit	22 34 (22 bit single-turn + 12 bit multiturn)
Accuracy	Angular seconds	±35
Frictional torque	Nm	≤ 0.01 (at 20°C)
Starting torque	Nm	≤ 0.01 (at 20°C)
Shaft load capability d 10 x 19.5 70° n > 6000 rpm n ≤ 6000 rpm		axial 40 N / radial 40 N at the shaft end axial 40 N / radial 60 N at the shaft end
Angular acceleration, , max.	rad/s ²	10 ⁵
Moment of inertia of the rotor Solid shaft Hollow shaft	kgm² kgm²	1.90 * 10 ⁻⁶ kgm ² 2.80 * 10 ⁻⁶ kgm ²
Vibratory load	m/s ²	≤ 100 (10 - 500 Hz)
Shock (6 ms)	m/s²	≤ 1000 (6 ms)
Operating temperature min. max.	°C °C	-20 100
Degree of protection		IP67 at the frame IP64 at the shaft input
Weight Single-turn Multiturn	kg kg	0.40 0.44

9.1 Tightening torques for screws and screw connections

For screws and screw connections of components that are described in this manual, the following tightening torques apply:

 Table 9-1
 Tightening torques for ground connections, protective conductor screw connections and control cabinet installation

Thread	Tightening torque in Nm
М3	0.8 Nm
M4	1.8 Nm
M5	3.0 Nm
М6	6.0 Nm
M8	13.0 Nm
M10	25.0 Nm

Tolerance --> 0 to +30 %

Deviating tightening torques

For screw terminals on components and for mounting individual components in the control cabinet, the following deviating tightening torques apply. The corresponding data are described in the following chapters:

- Installation for SME20 (Page 278), SME25 (Page 283), SME120 (Page 296) and SME125 (Page 310)
- Screw terminals (Page 331)

9.2 Information on control cabinet installation and EMC

9.2 Information on control cabinet installation and EMC

Information on control cabinet installation and electromagnetic compatibility (EMC), as well as on overcurrent and overvoltage protection, can be found in the following references:

- Components in the booksize format: Reference: /GH2/ SINAMICS S120 Manual for Booksize Power Units
- Components in the blocksize format: Reference: /GH6/ SINAMICS S120 Manual AC Drive
- Components in the chassis format: Reference: /GH3/ SINAMICS S120 Manual Air-Cooled Chassis Power Units Reference: /GH7/ SINAMICS S120 Manual Liquid-Cooled Chassis Power Units
- Requirements to implement EMC: Reference: /PH1/ Installation Guideline Configuration Manual / Basic system requirements (Article number 6FC5297-0AD30-0.P.)

Appendix

A.1 List of abbreviations

Note

The following list of abbreviations includes all abbreviations and their meanings used in the entire SINAMICS family of drives.

Abbreviation	Source of abbreviation	Significance
Α		
A	Alarm	Warning
AC	Alternating Current	Alternating current
ADC	Analog Digital Converter	Analog-Digital converter
AI	Analog Input	Analog input
AIM	Active Interface Module	Active Interface Module
ALM	Active Line Module	Active Line Module
AO	Analog Output	Analog output
AOP	Advanced Operator Panel	Advanced Operator Panel
APC	Advanced Positioning Control	Advanced Positioning Control
AR	Automatic Restart	Automatic restart
ASC	Armature Short Circuit	Armature short-circuit
ASCII	American Standard Code for Information Interchange	American coding standard for the exchange of information
AS-i	AS-Interface (Actuator Sensor Interface)	AS-interface (open bus system in automation technology)
ASM	Asynchronmotor	Induction motor
В		
BB	Betriebsbedingung	Operation condition
BERO	-	Contactless proximity switch
BI	Binector Input	Binector input
BIA	Berufsgenossenschaftliches Institut für Arbeitssicherheit	BG-Institute for Occupational Safety and Health
BICO	Binector Connector Technology	Binector connector technology
BLM	Basic Line Module	Basic Line Module

Appendix

A.1 List of abbreviations

Abbreviation	Source of abbreviation	Significance
во	Binector Output	Binector output
BOP	Basic Operator Panel	Basic operator panel
С		
С	Capacitance	Capacitance
C	-	Safety message
CAN	Controller Area Network	Serial bus system
CBC	Communication Board CAN	Communication Board CAN
CBE	Communication Board Ethernet	PROFINET communication module (Ethernet)
CD	Compact Disc	Compact disk
CDS	Command Data Set	Command data set
CF Card	CompactFlash Card	CompactFlash card
CI	Connector Input	Connector input
CLC	Clearance Control	Clearance control
CNC	Computerized Numerical Control	Computer-supported numerical control
СО	Connector Output	Connector output
CO/BO	Connector Output / Binector Output	Connector Output / Binector Output
COB ID	CAN Object-Identification	CAN Object-Identification
CoL	Certificate of License	Certificate of License
COM	Common contact of a changeover relay	Center contact of a changeover contact
COMM	Commissioning	Startup
CP	Communication Processor	Communications processor
CPU	Central Processing Unit	Central processing unit
CRC	Cyclic Redundancy Check	Cyclic redundancy check
CSM	Control Supply Module	Control Supply Module
CU	Control Unit	Control Unit
CUA	Control Unit Adapter	Control Unit Adapter
CUD	Control Unit DC	Control Unit DC
D		
DAC	Digital Analog Converter	Digital analog converter
DC	Direct Current	DC current
DCB	Drive Control Block	Drive Control Block
DCBRK	DC Brake	DC braking
DCC	Drive Control Chart	Drive Control Chart
DCN	Direct Current Negative	Direct current negative
DCP	Direct Current Positive	Direct current positive
DDC	Dynamic Drive Control	Dynamic Drive Control
DDS	Drive Data Set	Drive Data Set
DI	Digital Input	Digital input
DI/DO	Digital Input / Digital Output	Digital input/output, bidirectional
DMC	DRIVE-CLiQ Hub Module Cabinet	DRIVE-CLiQ Hub Module Cabinet

Appendix A.1 List of abbreviations

Abbreviation	Source of abbreviation	Significance
DME	DRIVE-CLiQ Hub Module External	DRIVE-CLiQ Hub Module External
DMM	Double Motor Module	Double Motor Module
DO	Digital Output	Digital output
DO	Drive Object	Drive object
DP	Decentralized Peripherals	Distributed I/O
DPRAM	Dual-Port Random Access Memory	Dual-Port Random Access Memory
DQ	DRIVE-CLIQ	DRIVE-CLIQ
DRAM	Dynamic Random Access Memory	Dynamic Random Access Memory
DRIVE-CLiQ	Drive Component Link with IQ	Drive Component Link with IQ
DSC	Dynamic Servo Control	Dynamic Servo Control
DTC	Digital Time Clock	Timer
E		
EASC	External Armature Short-Circuit	External armature short-circuit
EDS	Encoder Data Set	Encoder data set
EEPROM	Electrically Erasable Programmable Read-Only Memory	Electrically Erasable Programmable Read-Only-Memory
EGB	Elektrostatisch gefährdete Baugruppen	Electrostatic sensitive devices
ELCB	Earth Leakage Circuit-Breaker	Residual current operated circuit breaker
ELP	Earth Leakage Protection	Ground-fault monitoring
EMC	Electromagnetic Compatibility	Electromagnetic compatibility
EMF	Electromotive Force	Electromotive force
EMK	Elektromotorische Kraft	Electromotive force
EMV	Elektromagnetische Verträglichkeit	Electromagnetic compatibility
EN	Europäische Norm	European Standard
EnDat	Encoder-Data-Interface	Encoder interface
EP	Enable Pulses	Pulse enable
EPOS	Einfachpositionierer	Basic positioner
ES	Engineering System	Engineering system
ESB	Ersatzschaltbild	Equivalent circuit diagram
ESD	Electrostatically Sensitive Devices	Electrostatic sensitive devices
ESM	Essential Service Mode	Essential service mode
ESR	Extended Stop and Retract	Extended stop and retract
F		
F	Fault	Fault
FAQ	Frequently Asked Questions	Frequently Asked Questions
FBLOCKS	Free Blocks	Free function blocks
FCC	Function control chart	Function control chart
FCC	Flux Current Control	Flux current control
FD	Function Diagram	Function diagram
F-DI	Fail-safe Digital Input	Failsafe digital input

Appendix

A.1 List of abbreviations

Abbreviation	Source of abbreviation	Significance
F-DO	Fail-safe Digital Output	Fail-safe digital output
FEPROM	Flash-EPROM	Non-volatile write and read memory
FG	Function Generator	Function Generator
FI	-	Fault current
FOC	Fiber-Optic Cable	Fiber-optic cable
FP	Funktionsplan	Function diagram
FPGA	Field Programmable Gate Array	Field Programmable Gate Array
FW	Firmware	Firmware
G		
GB	Gigabyte	Gigabyte
GC	Global Control	Global control telegram (broadcast telegram)
GND	Ground	Reference potential for all signal and operating voltages, usually defined as 0 V (also referred to as M)
GSD	Gerätestammdatei	Generic Station Description: Describes the features of a PROFIBUS slave
GSV	Gate Supply Voltage	Gate supply voltage
GUID	Globally Unique Identifier	Globally Unique Identifier
н		
HF	High Frequency	High frequency
HFD	Hochfrequenzdrossel	Radio frequency reactor
HLA	Hydraulic Linear Actuator	Hydraulic linear actuator
HLG	Hochlaufgeber	Ramp-function Generator
НМ	Hydraulic Module	Hydraulic Module
HMI	Human Machine Interface	Human Machine Interface
HTL	High-Threshold Logic	Logic with high interference threshold
HW	Hardware	Hardware
I		
i. V.	In Vorbereitung	Under development: This property is currently not available
I/O	Input/Output	Input/output
12C	Inter-Integrated Circuit	Internal serial data bus
IASC	Internal Armature Short-Circuit	Internal armature short-circuit
IBN	Inbetriebnahme	Startup
ID	Identifier	Identification
IE	Industrial Ethernet	Industrial Ethernet
IEC	International Electrotechnical Commission	International Electrotechnical Commission
IF	Interface	Interface
IGBT	Insulated Gate Bipolar Transistor	Insulated gate bipolar transistor
IGCT	Integrated Gate-Controlled Thyristor	Semiconductor power switch with integrated control electrode

Abbreviation	Source of abbreviation	Significance				
IL	Impulslöschung	Pulse suppression				
IP	Internet Protocol	Internet protocol				
IPO	Interpolator	Interpolator				
IT	Isolé Terre	Non-grounded three-phase line supply				
IVP	Internal Voltage Protection	Internal voltage protection				
J						
JOG	Jogging	Jogging				
к						
KDV	Kreuzweiser Datenvergleich	Data cross-check				
KHP	Know-How Protection	Know-how protection				
KIP	Kinetische Pufferung	Kinetic buffering				
Кр	-	Proportional gain				
KTY84	-	Temperature sensor				
L						
L	-	Symbol for inductance				
LED	Light Emitting Diode	Light emitting diode				
LIN	Linearmotor	Linear motor				
LR	Lageregler	Position controller				
LSB	Least Significant Bit	Least Significant Bit				
LSC	Line-side converter	Line-side converter				
LSS	Line-Side Switch	Line-side switch				
LU	Length Unit	Length unit				
LWL	Lichtwellenleiter	Fiber-optic cable				
Μ						
Μ	-	Symbol for torque				
Μ	Masse	Reference potential for all signal and operating voltages, usually defined as 0 V (also referred to as GND)				
MB	Megabyte	Megabyte				
MCC	Motion Control Chart	Motion Control Chart				
MDI	Manual Data Input	Manual data input				
MDS	Motor Data Set	Motor data set				
MLFB	Maschinenlesbare Fabrikatebezeichnung	Machine-readable product code				
MM	Motor Module	Motor Module				
MMC	Man-Machine Communication	Man-machine communication				
MMC	Micro Memory Card	Micro memory card				
MSB	Most Significant Bit	Most significant bit				
MSC	Motor Side Converter	Motor-side converter				
MSCY_C1	Master Slave Cycle Class 1	Cyclic communication between master (class 1) and slave				

Appendix

A.1 List of abbreviations

Abbreviation	Source of abbreviation	Significance
MSC	Motorstromrichter	Motor-side converter
MT	Messtaster	Probe
Ν		
N. C.	Not Connected	Not connected
N	No Report	No report or internal message
NAMUR	Normenarbeitsgemeinschaft für Mess- und Regeltechnik in der chemischen Industrie	Standardization association for measurement and control in chemical industries
NC	Normally Closed (contact)	NC contacts
NC	Numerical Control	Numerical control
NEMA	National Electrical Manufacturers Association	Standardization association in USA (United States of America)
NM	Nullmarke	Zero mark
NO	Normally Open (contact)	NO contacts
NSR	Netzstromrichter	Line-side converter
NVRAM	Non-Volatile Random Access Memory	Non-volatile read/write memory
0		
OA	Open Architecture	Software component which provides additional functions for the SINAMICS drive system
OAIF	Open Architecture Interface	Version of the SINAMICS firmware as of which the OA-application can be used
OASP	Open Architecture Support Package	Expands the STARTER commissioning tool by the corresponding OA-application
OC	Operating Condition	Operation condition
OEM	Original Equipment Manufacturer	Original equipment manufacturer
OLP	Optical Link Plug	Bus connector for fiber-optic cable
OMI	Option Module Interface	Option Module Interface
Р		
p	-	Adjustable parameters
P1	Processor 1	CPU 1
P2	Processor 2	CPU 2
PB	PROFIBUS	PROFIBUS
PcCtrl	PC Control	Master control
PD	PROFIdrive	PROFIdrive
PDC	Precision Drive Control	Precision Drive Control
PDS	Power Unit Data Set	Power unit data set
PE	Protective Earth	Protective ground
PELV	Protective Extra-Low Voltage	Safety extra-low voltage
PFH	Probability of dangerous failure per hour	Probability of dangerous failure per hour
PG	Programmiergerät	Programming device
PI	Proportional integral	Proportional integral
PID	Proportional integral differential	Proportional integral differential

Abbreviation	Source of abbreviation	Significance				
PLC	Programmable Logic Controller	Programmable logic controller				
PLL	Phase-locked loop	Phase-locked loop				
PM	Power Module	Power Module				
PMSM	Permanent-Magnet Synchronous Motor	Permanent-magnet synchronous motor				
PN	PROFINET	PROFINET				
PNO	PROFIBUS Nutzerorganisation	PROFIBUS user organization				
PPI	Point-to-Point Interface	Point-to-point interface				
PRBS	Pseudo Random Binary Signal	White noise				
PROFIBUS	Process Field Bus	Serial data bus				
PS	Power Supply	Power supply				
PSA	Power Stack Adapter	Power Stack Adapter				
PT1000		Temperature sensor				
PTC	Positive Temperature Coefficient	Positive temperature coefficient				
PTP	Point-To-Point	Point-to-point				
PWM	Pulse Width Modulation	Pulse width modulation				
PZD	Prozessdaten	Process data				
Q	110203504(011					
R						
r	-	Display parameters (read only)				
RAM	Random Access Memory	Speicher zum Lesen und Schreiben				
RCCB	Residual Current Circuit Breaker	Residual current operated circuit breaker				
RCD	Residual Current Device	Residual current operated circuit breaker				
RCM	Residual Current Monitor	Residual current monitor				
REL	Reluctance motor textile	Reluctance motor textile				
RESM	Reluctance Synchronous Motor	Synchronous reluctance motor				
RFG	Ramp-Function Generator	Ramp-function Generator				
RJ45	Registered Jack 45	Term for an 8-pin socket system for data transmission with shielded or non-shielded multi- wire copper cables				
RKA	Rückkühlanlage	Cooling unit				
RLM	Renewable Line Module	Renewable Line Module				
RO	Read Only	Read only				
ROM	Read-Only Memory	Read-only memory				
RPDO	Receive Process Data Object	Receive Process Data Object				
RS232	Recommended Standard 232	Interface standard for a cable-connected serial data transmission between a sender and receiver (also known as EIA232)				
RS485	Recommended Standard 485	Interface standard for a cable-connected differential, parallel, and/or serial bus system (data transmission between a number of senders and				

receivers, also known as EIA485)

Appendix

A.1 List of abbreviations

Abbreviation	Source of abbreviation	Significance			
RTC	Real-Time Clock	Real-time clock			
RZA	Raumzeigerapproximation	Space-vector approximation			
S					
S1	-	Continuous operation			
S3	-	Intermittent duty			
SAM	Safe Acceleration Monitor	Safe acceleration monitoring			
SBC	Safe Brake Control	Safe brake control			
SBH	Sicherer Betriebshalt	Safe operating stop			
SBR	Safe Brake Ramp	Safe brake ramp monitoring			
SBT	Safe Brake Test	Safe brake test			
SCA	Safe Cam	Safe cam			
SCC	Safety Control Channel	Safety Control Channel			
SD Card	SecureDigital Card	Secure digital memory card			
SDC	Standard Drive Control	Standard Drive Control			
SDI	Safe Direction	Safe motion direction			
SE	Sicherer Software-Endschalter	Safe software limit switch			
SESM	Separately Excited Synchronous Motor	Separately excited synchronous motor			
SG	Sicher reduzierte Geschwindigkeit	Safely-limited speed			
SGA	Sicherheitsgerichteter Ausgang	Safety-related output			
SGE	Sicherheitsgerichteter Eingang	Safety-related input			
SH	Sicherer Halt	Safe stop			
SI	Safety Integrated	Safety Integrated			
SIC	Safety Info Channel	Safety Info Channel			
SIL	Safety Integrity Level	Safety Integrity Level			
SITOP	-	Siemens power supply system			
SLM	Smart Line Module	Smart Line Module			
SLP	Safely Limited Position	Safely Limited Position			
SLS	Safely-Limited Speed	Safely-limited speed			
SLVC	Sensorless Vector Control	Sensorless vector control			
SM	Sensor Module	Sensor Module			
SMC	Sensor Module Cabinet	Sensor Module Cabinet			
SME	Sensor Module External	Sensor Module External			
SMI	SINAMICS Sensor Module Integrated	SINAMICS Sensor Module Integrated			
SMM	Single Motor Module	Single Motor Module			
SN	Sicherer Software-Nocken	Safe software cam			
SOS	Safe Operating Stop	Safe operating stop			
SP	Service Pack	Service pack			
SP	Safe Position	Safe position			
SPC	Setpoint Channel	Setpoint channel			
SPI	Serial Peripheral Interface	Serial peripheral interface			

Abbreviation	Source of abbreviation	Significance				
SPS	Speicherprogrammierbare Steuerung	Programmable logic controller				
SS1	Safe Stop 1	Safe Stop 1 (monitored for time and ramp)				
SS1E	Safe Stop 1 External	Safe Stop 1 with external stop				
SS2	Safe Stop 2	Safe Stop 2				
SS2E	Safe Stop 2 External	Safe Stop 2 with external stop				
SSI	Synchronous Serial Interface	Synchronous serial interface				
SSM	Safe Speed Monitor	Safe feedback from speed monitor				
SSP	SINAMICS support package	SINAMICS support package				
STO	Safe Torque Off	Safe torque off				
STW	Steuerwort	Control word				
т						
ТВ	Terminal Board	Terminal Board				
TEC	Technology Extension	Software component which is installed as an additional technology package and which expands the functionality of SINAMICS (previously OA-application)				
TIA	Totally Integrated Automation	Totally Integrated Automation				
ТМ	Terminal Module	Terminal Module				
TN	Terre Neutre	Grounded three-phase line supply				
Tn	-	Integral time				
TPDO	Transmit Process Data Object	Transmit Process Data Object				
тт	Terre Terre	Grounded three-phase line supply				
TTL	Transistor-Transistor Logic	Transistor-Transistor-Logik				
Τv	-	Rate time				
U						
UL	Underwriters Laboratories Inc.	Underwriters Laboratories Inc.				
UPS	Uninterruptible Power Supply	Uninterruptible power supply				
USV	Unterbrechungsfreie Stromversorgung	Uninterruptible power supply				
UTC	Universal Time Coordinated	Universal time coordinated				
v						
VC	Vector Control	Vector control				
Vdc	-	DC-link voltage				
VdcN	-	Partial DC-link voltage negative				
VdcP	-	Partial DC-link voltage positive				
VDE	Verband Deutscher Elektrotechniker	Verband Deutscher Elektrotechniker [Association of German Electrical Engineers]				
VDI	Verein Deutscher Ingenieure	Verein Deutscher Ingenieure [Association of German Engineers]				
VPM	Voltage Protection Module	Voltage Protection Module				
Vpp	Volt peak to peak	Volt peak to peak				
VSM	Voltage Sensing Module	Voltage Sensing Module				

Appendix

A.1 List of abbreviations

Abbreviation W	Source of abbreviation	Significance
WEA	Wiedereinschaltautomatik	Automatic restart
WZM	Werkzeugmaschine	Machine tool
х		
XML	Extensible Markup Language	Extensible markup language (standard language for Web publishing and document management)
Y		
Z		
ZK	Zwischenkreis	DC link
ZM	Zero Mark	Zero mark
ZSW	Zustandswort	Status Word

A.2 Spring-loaded terminals

The type of spring-loaded terminal can be taken from the interface description of the particular component.

Table A-1 Connectable conductor cross-sections for spring-loaded termin	table conductor cross-sections for spring-loaded terminals
---	--

Sprii	ng-loaded terminal type					
1	Connectable cable cross- sections	Rigid Flexible Flexible with end sleeve without plastic sleeve AWG/kcmil	0.14 0.5 mm ² 0.14 0.5 mm ² 0.25 0.5 mm ² 26 20			
	Stripped length	Stripped length 8 mm				
2	Connectable cable cross- sections	Flexible	0.08 2.5 mm ²			
	Stripped length	8 9 mm				
3	Connectable cable cross- sections	Rigid Flexible Flexible with end sleeve without plastic sleeve Flexible with end sleeve with plastic sleeve AWG/kcmil	0.2 1.5 mm ² 0.2 1.5 mm ² 0.25 1.5 mm ² 0.25 0.75 mm ² 24 16			
	Stripped length	10 mm				
4	Connectable cable cross- sections	AWG	25 95 mm ² 4 4/0			
	Stripped length	35 mm				
5	Connectable cable cross- sections	Rigid Flexible Flexible with end sleeve without plastic sleeve Flexible with end sleeve with plastic sleeve AWG/kcmil	0.2 10 mm ² 0.2 6 mm ² 0.25 6 mm ² 0.25 4 mm ² 24 8			
	Stripped length 15 mm					

A.3 Screw terminals

The type of screw terminal can be taken from the interface description of the particular component.

Table A-2 Connectable conductor cross-sections and tightening torques for screw terminals

Screw terminal type						
1	Connectable cable cross- sections	Rigid, flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.08 1.5 mm ² 0.25 1.5 mm ² 0.25 0.5 mm ²			
	Stripped length	7 mm				
	ТооІ	Screwdriver 0.4 x 2.0 mm				
	Tightening torque	0.22 0.25 Nm				

A.3 Screw terminals

_1	Connectable cable cross- sections	Rigid, flexible With end sleeve, without plastic sleeve	0.14 1.5 mm ² 0.25 1.5 mm ²				
	00010110	With end sleeve, with plastic sleeve	0.25 0.5 mm ²				
	Stripped length	7 mm					
	Tool	Screwdriver 0.4 x 2.5 mm					
	Tightening torque	0.22 0.25 Nm					
2	Connectable cable cross- sections	Rigid, flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve AWG / kcmil	0.2 2.5 mm ² 0.2 2.5 mm ² 0.2 1.5 mm ² 22 12				
	Stripped length	6 7 mm					
	Tool	Screwdriver 0.5 x 3 mm					
	Tightening torque	0.4 0.5 Nm					
3	Connectable cable cross- sections	Flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.2 2.5 mm ² 0.25 1 mm ² 0.25 1 mm ²				
	Stripped length	9 mm					
	Tool	Screwdriver 0.6 x 3.5 mm					
	Tightening torque	0.5 0.6 Nm					
4	Connectable cable cross- sections	Flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.2 4 mm ² 0.25 4 mm ² 0.25 4 mm ²				
	Stripped length	7 mm					
	Tool	Screwdriver 0.6 x 3.5 mm					
	Tightening torque	0.5 0.6 Nm					
5	Connectable cable cross- sections	Flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.5 6 mm ² 0.5 6 mm ² 0.5 6 mm ²				
	Stripped length	12 mm					
	Tool	Screwdriver 1.0 x 4.0 mm					
	Tightening torque	1.2 1.5 Nm					
6	Connectable cable cross- sections	Flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.5 10 mm ² 0.5 10 mm ² 0.5 10 mm ²				
	Stripped length	11 mm					
	Tool	Screwdriver 1.0 x 4.0 mm					
	Tightening torque	1.5 1.8 Nm					
7	Connectable cable cross- sections	0.5 16 mm ²					
	Stripped length	14 mm					
	Tool	Screwdriver 1.0 x 4.0 mm					
	Tightening torque 1.5 1.7 Nm						

A.4 Cable lugs

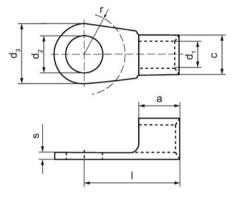


Figure A-1 Dimension drawing of cable lugs

Table A- 3	Dimensions of cable lugs
------------	--------------------------

Screw/bolt	Cable cross-section [mm ²]	a [mm]	с [mm]	d₁ [mm]	d₂ [mm]	d₃ [mm]	ا [mm]	r [mm]	s [mm]
M4	1 2.5	5	4.5	2.3	4.3	8	12	6.0	0.8
M5	1 2.5	5	4.5	2.3	5.3	10	14	6.5	0.8
M6	1 2.5	5	4.5	2.3	6.5	11	16	7.5	0.8
M8	2.5	5	4.5	2.3	8.4	14	17	10.0	0.8

A.5 Documentation overview

A.5 Documentation overview

General documentation/catalogs				
SINAMICS	G110	D11.1	- Inverter built-in units 0.12 kW up to 3 kW	
	G120	D31	- SINAMICS Inverters for Single-Axis Drives and SIMOTICS Motors	
	G130, G150	D11.1	- Inverter built-in units	
			- Inverter cabinet units	
	S120, S150	D21.3	- SINAMICS S120 Built-in units in the Chassis format and Cabinet Modules	
	,		- SINAMICS S150 Drive Converter Cabinet Units	
SIMOTION,	S120	PM21	- SIMOTION, SINAMICS S120 and Motors for Production Machines	
SINAMICS				
Manufacture	/service documentation			
SINAMICS	G110		- Getting Started	
			- Operating instructions	
			- List Manuals	
	G120		- Getting Started	
			- Operating instructions	
			- Hardware Installation Manuals	
			- Function Manual Safety Integrated	
			- List Manuals	
	G130		- Operating instructions	
			- List Manual	
	G150		- Operating instructions	
			- List Manual	
	GM150,		- Operating instructions	
	SM120/SM150,		- List Manuals	
	GL150, SL150			
	S110		- Manual	
			- Getting Started	
			- Function Manual - List Manual	
	S120		- Getting Started with STARTER	
			- Commissioning Manual with STARTER - Getting Started with Startdrive (available as of Startdrive V14 release)	
			- Commissioning Manual with Startdrive (available as of Startdrive V14 release)	
			- Commissioning Manual CANopen	
			- Function Manual Drive Functions	
			- Function Manual Safety Integrated	
			- Function Manual DCC	
			- List Manual	
			- Manual Control Unit and supplementary system components	
			- Manual LT Booksize	
			- Manual LT Booksize C/D Type	
			- Manual LT Chassis air-cooled	
			- Manual LT Chassis liquid-cooled - Manual Combi	
			- Manual Cabinet Modules	
			- Manual AC Drive	
			- SINAMICS S120M Manual Distributed Drive Technology	
			- SINAMICS HLA System Manual Hydraulic Drive	
	S150			
			- Operating instructions - List Manual	
Motors			- Configuration Manuals, Motors	
General			- Configuration Manual, EMC Guidelines	
General				

Index

Α

Address Setting the PROFIBUS address, 73

В

Basic Operator Panel BOP20, 87

С

CAN CBC10 Communication Board, 93 CBE20 Ethernet Communication Board, 99 Components Basic Operator Panel BOP20, 87 CAN CBC10 Communication Board, 93 CBE20 Ethernet Communication Board, 99 Control Unit CU320-2 DP, 63 Control Unit CU320-2 PN, 44 DRIVE-CLiQ encoder, 313 DRIVE-CLiQ Hub Module DMC20, 196 DRIVE-CLiQ Hub Module External DME20, 204 Sensor Module Cabinet-Mounted SMC10, 232 Sensor Module Cabinet-Mounted SMC20, 240 Sensor Module Cabinet-Mounted SMC30, 249 Sensor Module Cabinet-Mounted SMC40, 264 Sensor Module External SME120, 286 Sensor Module External SME125, 299 Sensor Module External SME20, 274 Sensor Module External SME25, 280 Terminal Board TB30, 104 Terminal Module TM120, 173 Terminal Module TM15, 112 Terminal Module TM150, 183 Terminal Module TM31, 124 Terminal Module TM41, 140 Terminal Module TM54F, 152 Voltage Sensing Module, 211 Connector coding Terminal Module TM15, 122 Terminal Module TM31, 139 Control Unit CU320-2 DP. 63 LEDs after booting, 80 LEDs during booting, 79

Control Unit CU320-2 PN, 44 LEDs after booting, 60 LEDs during booting, 59

D

Diagnostics via LEDs CAN CBC10 Communication Board, 97 CBE20 Ethernet Communication Board, 100 Control Unit CU320-2 DP, 80 Control Unit CU320-2 PN. 60 DRIVE-CLiQ Hub Module DMC20, 199 Sensor Module Cabinet SMC10, 236 Sensor Module Cabinet SMC20, 245 Sensor Module Cabinet SMC30, 256 Sensor Module Cabinet SMC40, 270 Terminal Module TM120, 179 Terminal Module TM15, 118 Terminal Module TM150, 190 Terminal Module TM31, 135 Terminal Module TM41, 148 Terminal Module TM54F, 168 Voltage Sensing Module VSM10, 221 **Dimension drawings** Control Unit CU320-2 DP, 82 Control Unit CU320-2 PN. 62 DRIVE-CLiQ encoder. 314 DRIVE-CLiQ Hub Module DMC20, 200 DRIVE-CLiQ Hub Module External DME20, 208 Sensor Module Cabinet SMC10, 237 Sensor Module Cabinet SMC20, 246 Sensor Module Cabinet SMC30, 257 Sensor Module Cabinet SMC40, 271 Sensor Module External SME120, 296 Sensor Module External SME125, 310 Sensor Module External SME20, 277 Sensor Module External SME25, 283 Terminal Module TM120, 180 Terminal Module TM15, 119 Terminal Module TM150, 191 Terminal Module TM31, 136 Terminal Module TM41, 149 Terminal Module TM54F, 170 Voltage Sensing Module VSM10, 222 DRIVE-CLiQ encoder, 313 DRIVE-CLiQ Hub Module DMC20, 196 DRIVE-CLiQ Hub Module External DME20, 204

F

Field of application, 27

Installation Basic Operator Panel BOP20, 90 CBE20 Ethernet Communication Board, 103 Communication Board CBC10, 98 Control Unit CU320-2 DP/PN, 83 DRIVE-CLiQ encoder, 316 DRIVE-CLiQ Hub Module DMC20, 201 Sensor Module Cabinet, 238, 247, 258 Sensor Module External SME120, 296 Sensor Module External SME125, 310 Sensor Module External SME20/SME25, 278, 284 Sensor Modules Cabinet SMC40, 272 Terminal Board TB30, 109 Terminal Module TM120, 181 Terminal Module TM150, 192 Terminal Modules, 137, 150, 171 Voltage Sensing Module VSM10, 223 Interface descriptions Basic Operator Panel BOP20, 87 CAN CBC10 Communication Board, 94 CBE20 Ethernet Communication Board, 99 Control Unit CU320-2 DP, 64 Control Unit CU320-2 PN, 45 DRIVE-CLiQ Hub Module DMC20, 197 DRIVE-CLiQ Hub Module External DME20, 205 Sensor Module Cabinet SMC10, 232 Sensor Module Cabinet SMC20, 241 Sensor Module Cabinet SMC30, 249 Sensor Module Cabinet SMC40, 265 Sensor Module External SME120, 288 Sensor Module External SME125, 301 Sensor Module External SME20, 274 Sensor Module External SME25, 280 Terminal Board TB30, 104 Terminal Module TM120, 174 Terminal Module TM150, 184 Terminal Module TM31, 125 Terminal Module TM41, 141 Terminal Module TM54F, 154 Voltage Sensing Module VSM10, 214 Interface Descriptions Terminal Module TM15, 113 Introduction, 30

L

LEDs CAN CBC10 Communication Board, 97 CBE20 Ethernet Communication Board, 100 Control Unit CU320-2 DP. 80 Control Unit CU320-2 PN. 60 DRIVE-CLiQ Hub Module DMC20, 199 Sensor Module Cabinet SMC10, 236 Sensor Module Cabinet SMC20, 245 Sensor Module Cabinet SMC30, 256 Sensor Module Cabinet SMC40, 270 Terminal Module TM120, 179 Terminal Module TM15, 118 Terminal Module TM150, 190 Terminal Module TM31, 135 Terminal Module TM41, 148 Terminal Module TM54F, 168 Voltage Sensing Module VSM10, 221

Μ

Mounting Terminal Modules, 120

Ρ

Platform Concept, 28 PROFIBUS Setting the address, 73 Protective conductor connection and shield support DRIVE-CLiQ Hub Module DMC20, 203 Terminal Module TM120, 182 Terminal Module TM15, 121 Terminal Module TM150, 193 Terminal Module TM31, 138 Terminal Module TM41, 151 Terminal Module TM54F, 172 Voltage Sensing Module VSM10, 224

S

Safety instructions Control Units, 42 Hub Modules, 195 Option boards, 93 Sensor Module External, 287, 300 Sensor Modules and encoders, 230 Terminal Modules, 111 Voltage Sensing Modules VSM10, 212 Sensor Module Cabinet-Mounted SMC10, 232

V

Voltage Sensing Module, 211

Sensor Module Cabinet-Mounted SMC20, 240 Sensor Module Cabinet-Mounted SMC30, 249 Sensor Module Cabinet-Mounted SMC40, 264 Sensor Module External SME120, 286 Sensor Module External SME125, 299 Sensor Module External SME20, 274 Sensor Module External SME25, 280 Sensor Modules Overview, 228 Specification of encoder systems and encoders Sensor Module Cabinet SMC30, 260 Switches for PROFIBUS address, 73

Т

Technical data CAN CBC10 Communication Board, 98 Control Unit CU320-2 DP, 82 Control Unit CU320-2 PN, 62 DRIVE-CLiQ encoder, 318 DRIVE-CLiQ Hub Module DMC20, 204 DRIVE-CLiQ Hub Module External DME20, 209 Electronics power supply, 35 Sensor Module Cabinet SMC10, 239 Sensor Module Cabinet SMC20, 248 Sensor Module Cabinet SMC30, 259 Sensor Module Cabinet SMC40, 273 Sensor Module External SME120, 297 Sensor Module External SME125, 311 Sensor Module External SME20, 278 Sensor Module External SME25, 284 Terminal Board TB30, 110 Terminal Module TM120, 183 Terminal Module TM15, 123 Terminal Module TM150, 194 Terminal Module TM31, 140 Terminal Module TM41, 152 Terminal Module TM54F, 173 Voltage Sensing Module VSM10, 225 Terminal Board TB30, 104 Terminal Module TM120, 173 Terminal Module TM15, 112 Terminal Module TM150, 183 Terminal Module TM31, 124 Terminal Module TM41, 140 Terminal Module TM54F, 152 Tightening torques, 319 Totally Integrated Automation, 28

Siemens AG Digital Factory Motion Control Postfach 3180 91050 ERLANGEN GERMANY Subject to change