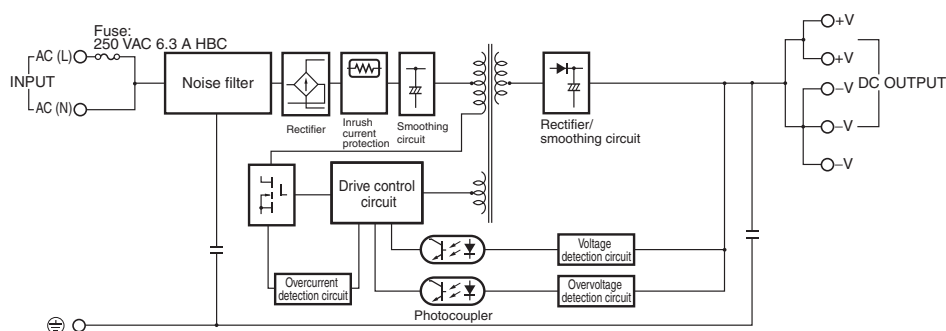
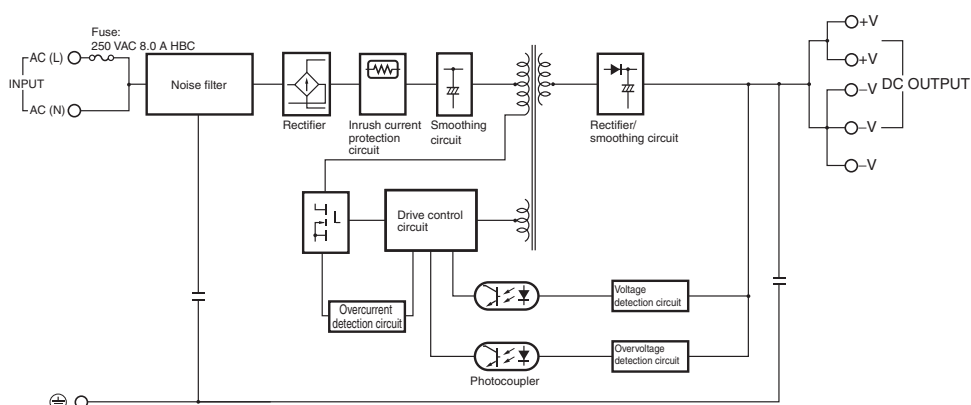
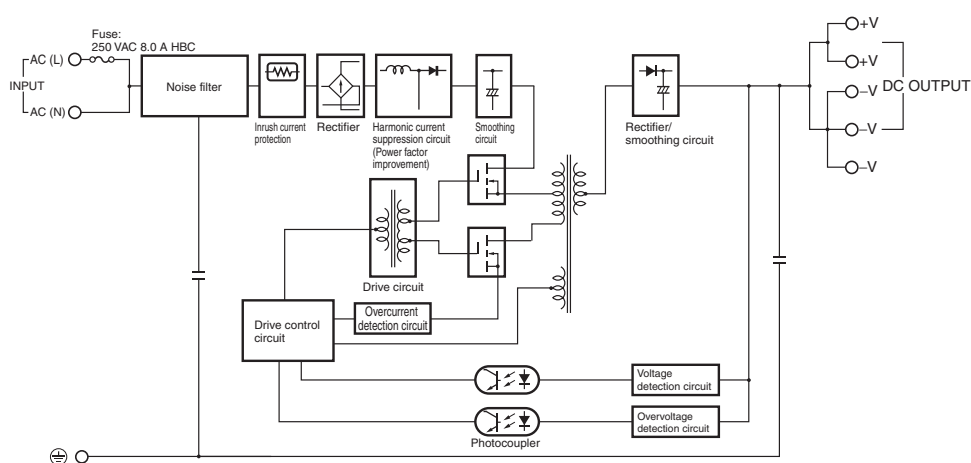
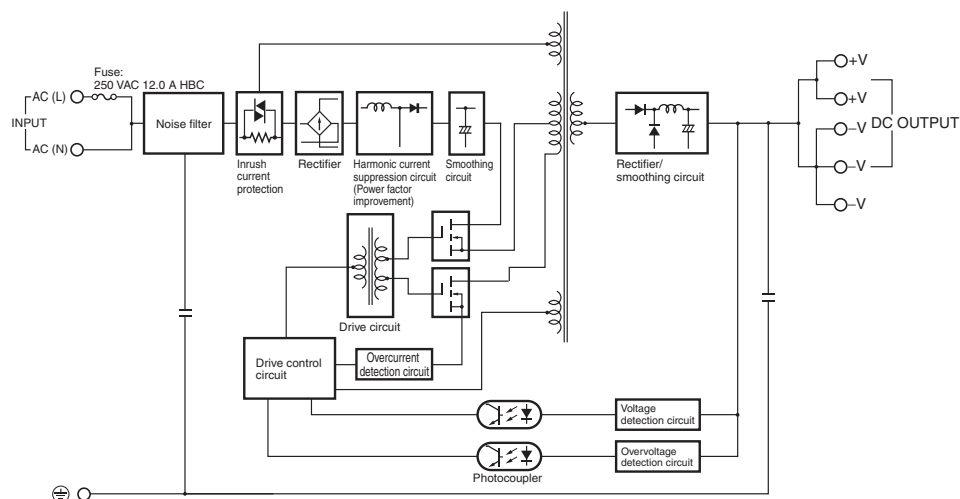


Connections

Block Diagrams

S8VK-C06024 (60W)

S8VK-C12024 (120W)

S8VK-C24024 (240W)

S8VK-C48024 (480W)


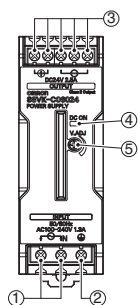
S8VK-C

Construction and Nomenclature

Nomenclature


60-W Models

S8VK-C06024




120-W Models

S8VK-C12024

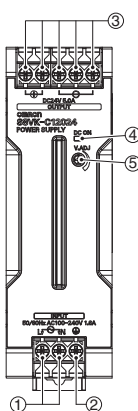


240-W Models

S8VK-C24024

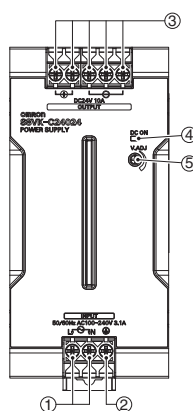

480-W Models

S8VK-C48024

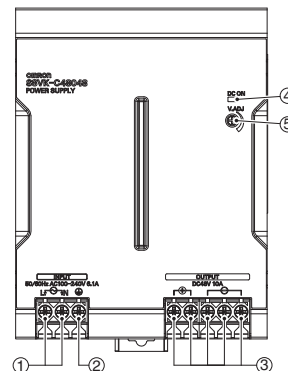

No.	Name	Function
1	Input terminals (L), (N)	Connect the input lines to these terminals. *1
2	Protective Earth terminal (PE)	Connect the ground line to this terminal. *2
3	DC Output terminals (–V), (+V)	Connect the load lines to these terminals.
4	Output indicator (DC ON: Green)	Lights while a direct current (DC) output is ON.
5	Output voltage adjuster (V.ADJ)	Use to adjust the voltage.


*1. The fuse is located on the (L) side. It is not user-replaceable. For a DC input, connect the positive voltage to the L terminal.

*2. This is the protective earth terminal specified in the safety standards. Always ground this terminal.

Engineering Data

Derating Curve

60, 120, 240, 480 W

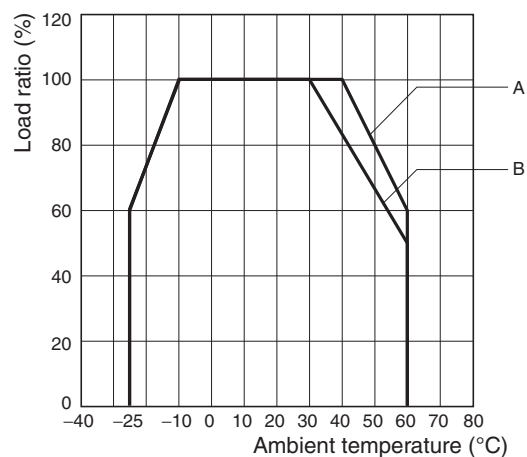

- Note:** 1. At less than 90 VAC, the derating is 2.5%/V
 2. For a DC power input, reduce the load given in the above derating curve by multiplying the following coefficients.
 S8VK-C06024/S8VK-C12024: 0.8
 S8VK-C24024/S8VK-C48024: 0.7

- A. Standard mounting
 40°C and over: the derating is 2.0%/°C
 B. Face-up mounting
 30°C and over: the derating is 1.67%/°C