Magnetic rotary angle and position sensor-control

Contactless sensor
PSC-360

Dimensions

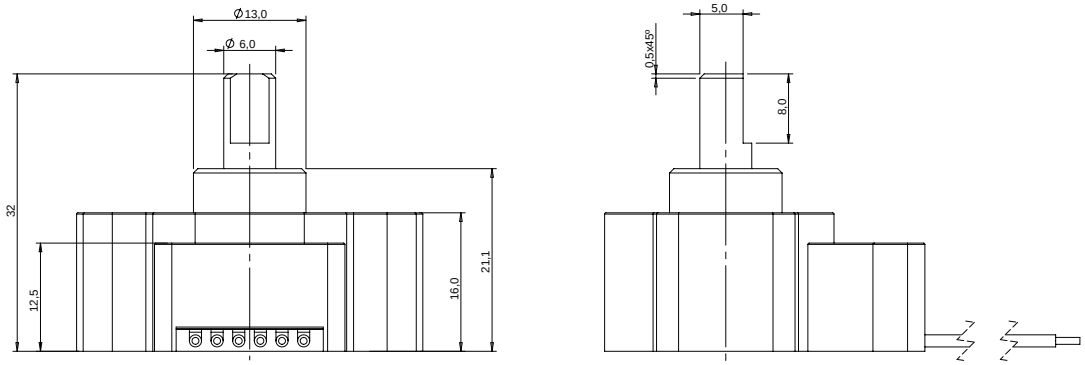

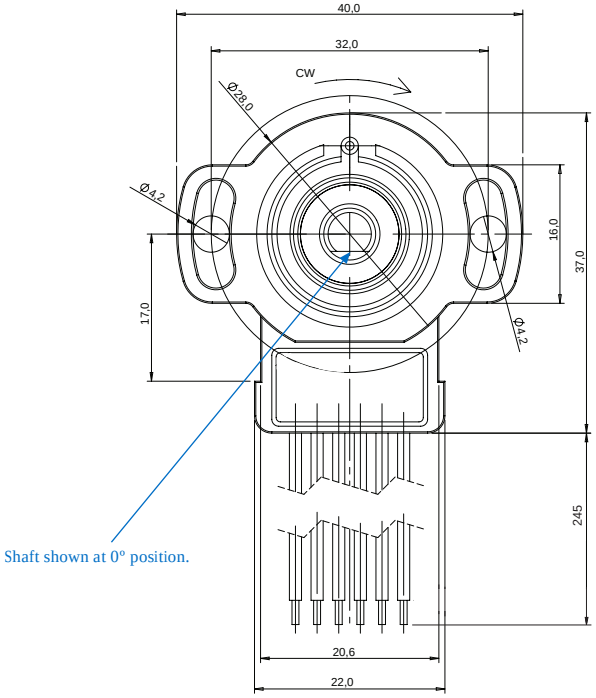

Shaft shown at 0° position.

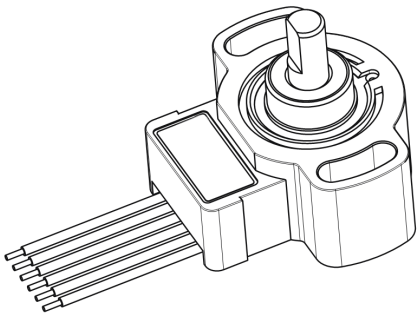

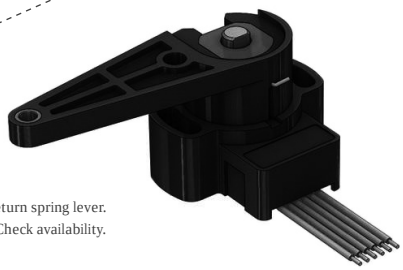

Special version with return spring lever.
Check availability.

Magnetic rotary angle and position sensor-control

Contactless sensor
PSC-360

Mounting instructions

1.- Place the component on a flat surface.
2.- Fit the actuator onto the shaft avoiding any mechanical play/wobble.
3.- Fasten the two M4 screws (M4 washers are recommended).

Connections scheme

Simple analog output connection wiring scheme. Other versions available upon request.

- Brown = Power supply.
- Blue = Ground.
- Black = Signal output.
- White = Not used.
- Grey = Not used.

Fly leads with Wire: 0.35mm². TXL SAE J1128.
Check availabiity for the connector options.

Output

C0000

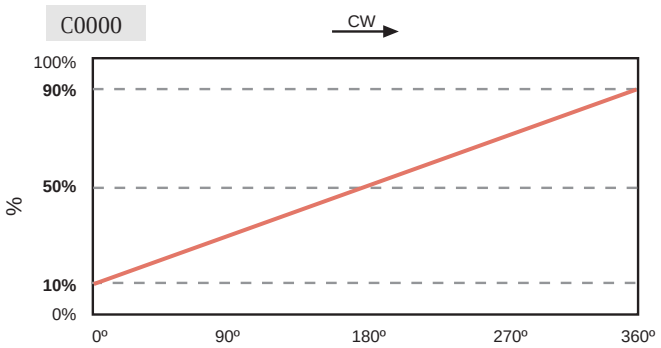

C0002 (redundancy)

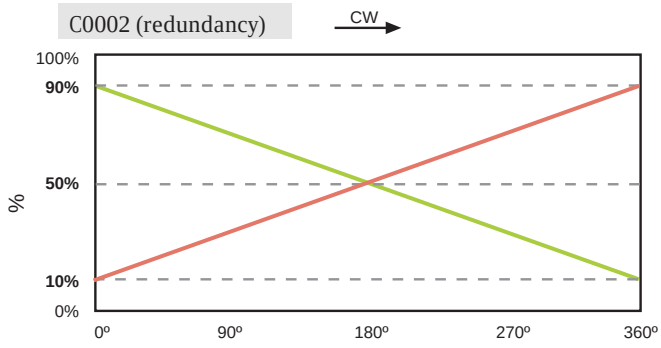

C0001

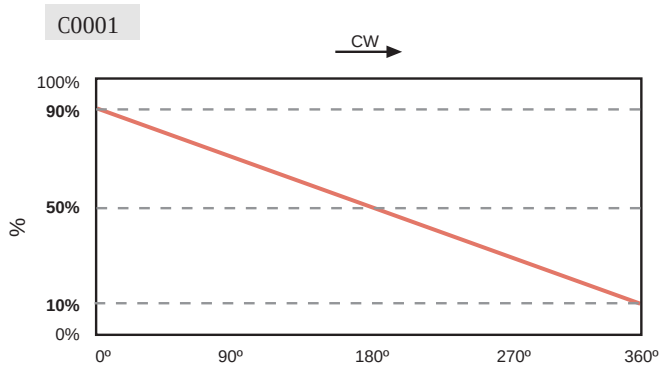

C0003 (redundancy)

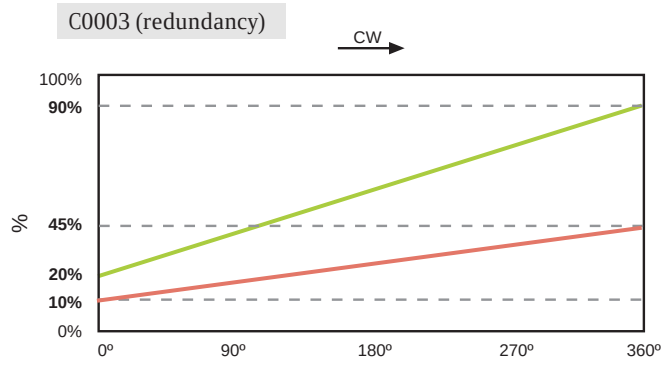

Others upon request.