■ Block Diagram

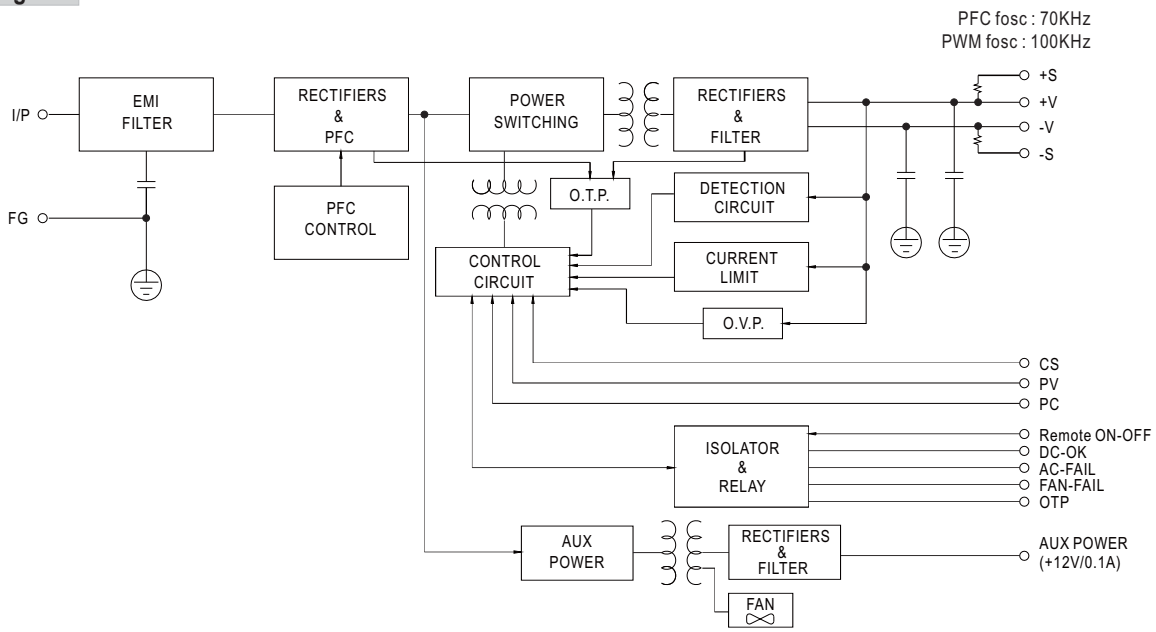

■ Derating Curve

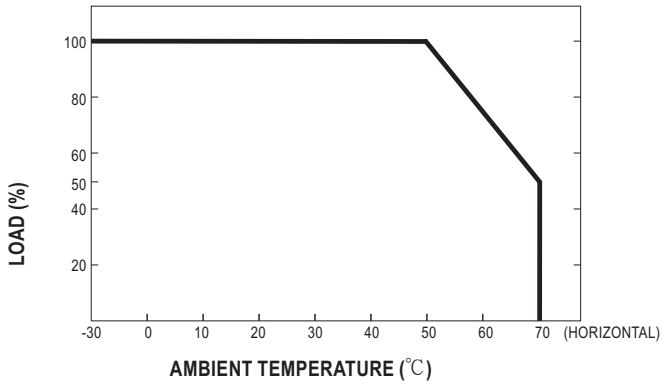

INPUT \ MODEL	24V	36V	48V
△196~305VAC 340~530VAC	9600W 400A	9936W 276A	10080W 210A

■ Static Characteristics

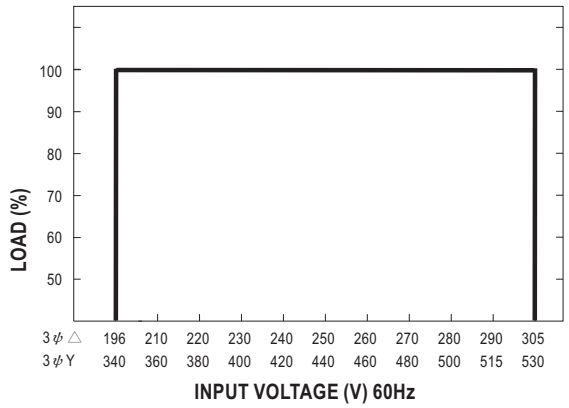

■ Efficiency vs Load (48V Model)

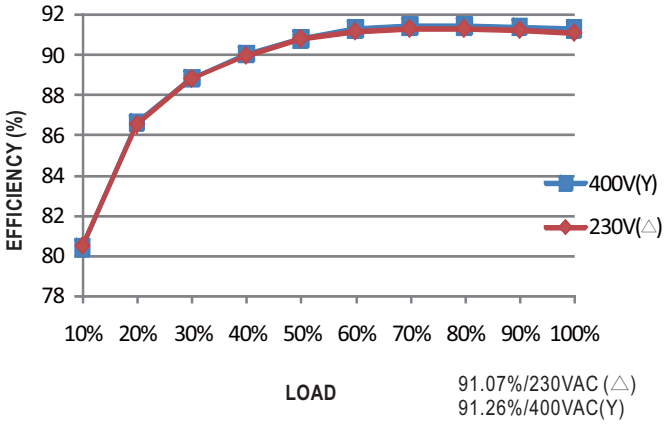

■ AC Power Connection

◎3 ψ 3 wire / △ 230VAC

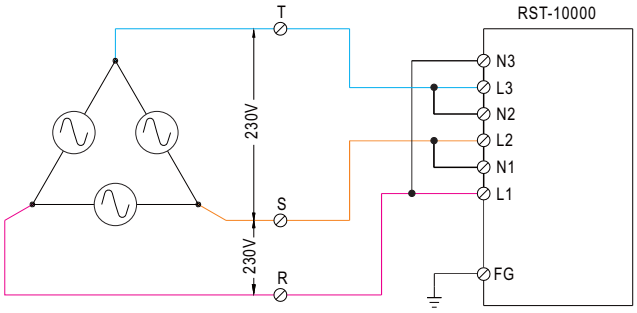

Fig 1.1

◎3 ψ 4 wire / Y 400VAC

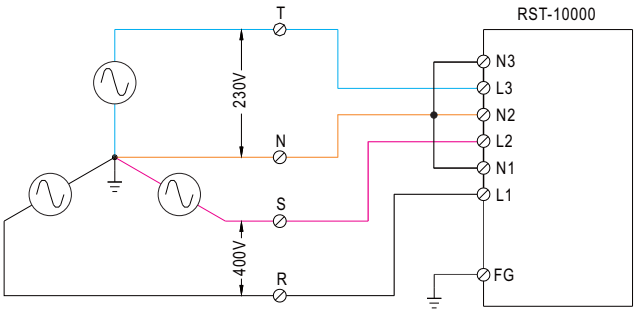

Fig 1.2

■ Function Manual

1.Remote Sense

※ The remote sense function compensates the voltage drop on the cable, between the power supply and the load, up to 0.3V.

※ If the remote sense function is not required,+S and +V of the output terminal, as well as -S and -V, need to be connected to be free from noise and interference. (+S and +V of the output terminal, -S and -V are connected as factory default setting)

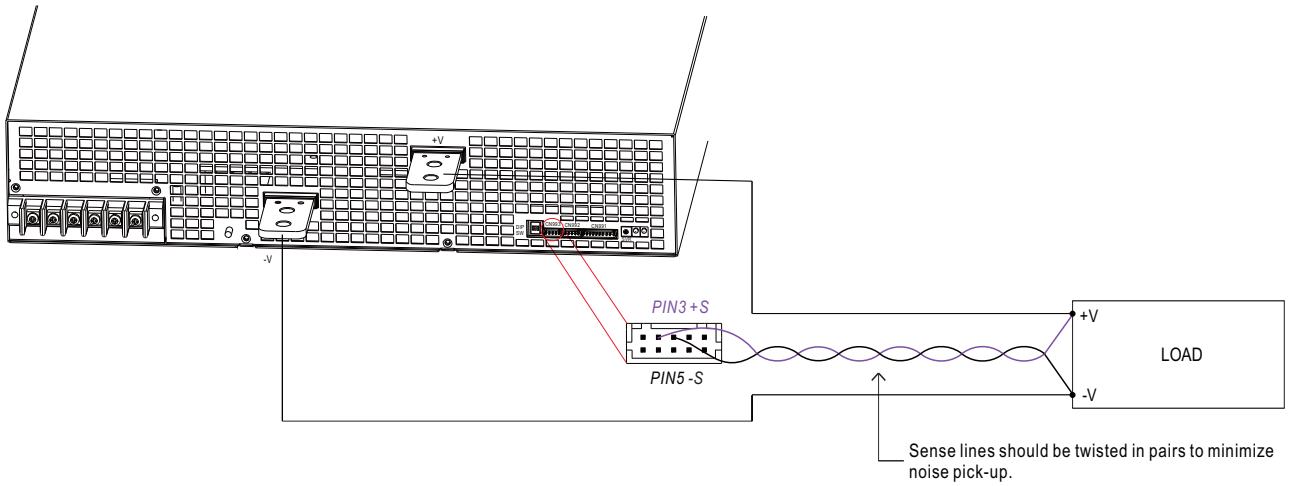

Fig 1.1