



Terminal Protection to IP20

43880

W. 17.5




Compact 17.5mm DIN rail housing

- Microprocessor based
- ☐ True R.M.S. monitoring measuring phase to phase (3-wire) or phase to neutral (4-wire) voltages
- Selectable nominal voltages to suit most popular 3-wire or 4-wire supply voltages
- Monitors own supply and detects if one or more phases exceed the set Under or Over voltage trip levels
- Detects incorrect phase sequence, phase loss and neutral loss¹
- Adjustments for Under and Over voltage trip levels
- Adjustment for Time delay
- □ Independent relay outputs Under voltage monitoring (RLY2) / Over voltage monitoring (RLY1)
- 2 x SPDT relay output 5A
- Green LED indication for supply status
- Individual Red LED indication for both relay statuses

¹Only when 4-wire monitoring selected



• FUNCTION DIAGRAM Under and Over Voltage Monitoring Monitored 3- Supply L1 Hyst.

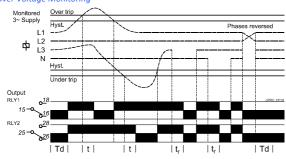

INSTALLATION AND SETTING

Installation work must be carried out by qualified personnel.

- BEFORE INSTALLATION, ISOLATE THE SUPPLY.
- Connect the unit as required. The Connection Diagram below shows a typical installation, whereby the supply to
 a load is being monitored by the Phase monitoring relay. If a fault should occur (i.e. fuse blowing), the relay will
 de-energise and assuming control of the external Contactor, de-energise the Contactor as well.
- Only connect the Neutral if available and 4-wire monitoring is required.

Applying power.

- Set the "Nominal (Un)" voltage selector to match that of the voltage being monitored.
- Apply power and the green "Power supply" 1 LED will illuminate. Both the red "RLY1" 2 / "RLY2" 3 LED's will illuminate and corresponding RLY1 and RLY2 relays energise after the short Power on delay (Td).
- Refer to the Troubleshooting table if the unit fails to operate correctly.

Setting the unit (with power applied).


- Set the "Over %" and the "Under %" adjustments to give the required monitoring range.
- If large supply variations are anticipated, the adjustments should be set further from the nominal voltage.
- Set the "Delay (t)" adjustment as required. (Note that the delay is only effective should the supply increase
 above or drop below the set trip levels. However, if during an under voltage condition the supply drops below
 the 2nd under voltage trip level, any set time delay is automatically cancelled and both relays de-energise
 immediately).


Troubleshooting


The table below shows the status of the unit during a particular fault condition.


Supply fault	Green LED	Red LED	Red LED	Relay RLY1	Relay RLY2
Phase or neutral missing	Flashing ¹	Off	Flashing ¹	De-energised	De-energised
Phases reversed (no delay)	Flashing	Off	Off	De-energised	De-energised
Under voltage condition (during timing)	On	On	Flashing	Energised	En for delay (t)
Under voltage condition (after timing)	On	Off	Off	Energised	De-energised
Over voltage condition (during timing)	On	Flashing	On	En for delay (t)	Energised
Over voltage condition (after timing)	On	Off	On	De-energised	Energised
Phases < fixed under trip level [2]	On	Off	Off	De-energised	De-energised

¹ Green and Red LED's alternate in this fault condition

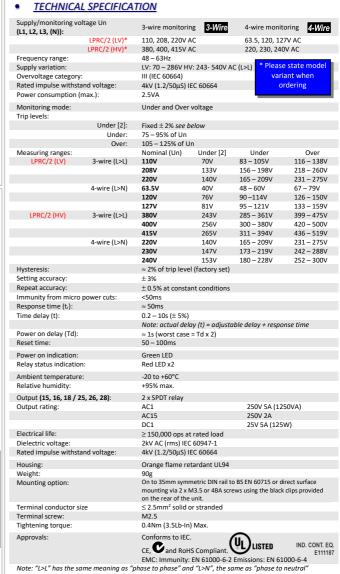

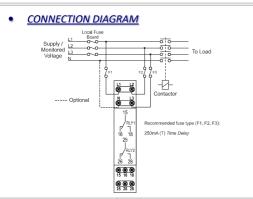

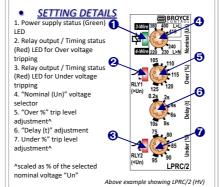

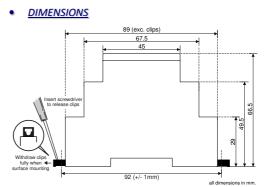

Broyce Control Ltd., Pool Street, Wolverhampton, West Midlands WV2 4HN. England