


Mitsubishi Programmable Controllers
MELSEC-A/QnA (Large Type) Upgrade Catalog



From the MELSEC-A/QnA Series to the
MELSEC-AnS/Q Series

AQ / AnS
QnAS

Offering a Variety of Flexible Upgrade Options!

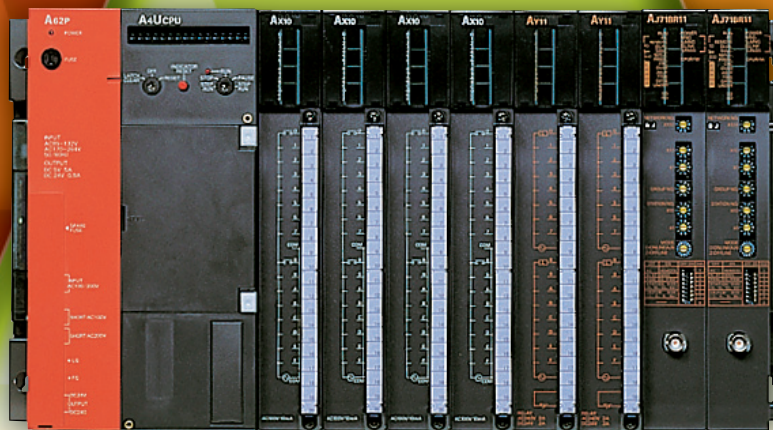

Mitsubishi Electric Corporation Nagoya Works is a factory certified for ISO14001 (standards for environmental management systems) and ISO9001 (standards for quality assurance management systems)



From the MELSEC-A/QnA Series
 → The MELSEC-AnS/Q Series

Offering a Variety of Flexible Upgrade Options!

Technical Bulletin

| Large type A Series/Large type QnA Series | Production discontinuation | Technical Bulletin |
|--|--|----------------------|
| A/QnA(Large type) ● CPU module ● I/O module ● Special function module ● Data link module (MELSECNET(II)/B module and others) | End of Sep., 2006 | T99-0050 |
| A2C Series A2C ● CPU module ● A2C I/O module ● Special function module and others | End of Sep., 2006 End of Sep., 2008 | T99-0050 T99-0070 |
| PC interface boards MELSECNET (II) , /B ● MELSECNET(II)/B Interface board | End of Sep., 2008 | T99-0049 |
| Small type AnS Series MELSECNET (II) , /B*1 ● Remote I/O module | End of Sep., 2008 | T99-0049 |
| MELSECNET/MINI-S3 ● Small type A Series master module ● I/O module | End of Sep., 2008 | T99-0070 |
| A0J2(H) Series A0J2 (H) ● CPU module ● Power supply module ● I/O module ● Special function module and others | End of Sep., 2008 | T99-0069 |

*1 : Production of AnS Series master/local station data link modules (A1SJ71AP21, A1SJ71AR21, and A1SJ71AT21B) will be continued.

Replacement Handbooks

| |
|--|
| Transition from MELSEC-A/QnA (Large Type) Series to Q Series Handbook (Fundamentals) L(NA)-08043ENG-C |
| Transition from MELSEC-A/QnA (Large Type) Series to Q Series Handbook (Intelligent Function Modules) L(NA)-08046ENG-B |
| Transition from MELSEC-A/QnA (Large Type) Series to Q Series Handbook (Network Modules) L(NA)-08048ENG-B |
| Transition from MELSEC-A/QnA (Large Type) Series to Q Series Handbook (Communication Modules) L(NA)-08050ENG-C |
| Transition from MELSEC-A0J2H Series to Q Series Handbook L(NA)-08060ENG-A |
| Transition from MELSECNET/MINI-S3, A2C(I/O) to CC-Link Handbook L(NA)-08061ENG-A |
| Transition from MELSEC-I/OLINK to CC-Link/LT Handbook L(NA)-08062ENG-A |
| Transition from MELSEC-A/QnA (Large Type) Series to AnS/Q2AS (Small Type) Series Handbook L(NA)-08064ENG-A |

Upgrade Options

Reusing existing programs when changing the PLC type.

P3

→ A/QnA → Q Conversion Support Tool

A→Q MELSOFT

Replacing the CPU module with the Q Series model without changing the existing modules.

P7

→ QA65B-E/QA68B-E Extension Base Unit

A→Q

Replacing with the AnS (Small type) module when module additions are required during modifications.

P8

→ A-A1S Module Conversion Adapter (A1ADP-XY: For I/O Module, A1ADP-SP: For Special Function Module)

Modification

Linking the A (Large type) Series and Q Series with MELSECNET (II)/B.

P9

→ AnS (Small type) local station dedicated module
 → MELSECNET (II), MELSECNET/10 gateway set G6KT-NETGW-□□
 → MELSECNET/10 Network Module (Production continues)

Network

Replacing the A0J2 (H) CPU with the Q Series model using existing wiring.

P12

→ A0J2(H) Interface Terminal

A→Q

Replacing MELSECNET/MINI with CC-LINK using existing wiring.

P13

→ MELSECNET/MINI-S3 I/O Module Wiring Conversion Adapter

CC-Link

Replacing with the Q Series base unit without changing existing wiring.

P14

→ Upgrade Tool (Manufactured by Mitsubishi Electric Engineering Co., Ltd.)

A→Q

Additional support

P15

→ Global FA Centers
 → Related Catalog
 → Production Discontinuation Schedule
 → Models to be discontinued
 → Exceptions


Support

A/QnA→Q Conversion Support tool

2 Review Information List

Detailed information is displayed hierarchically in Internet Explorer. Furthermore, information on differences between two programs and the review list are linked together.

(Example 1) Special function module processes which need to be reviewed

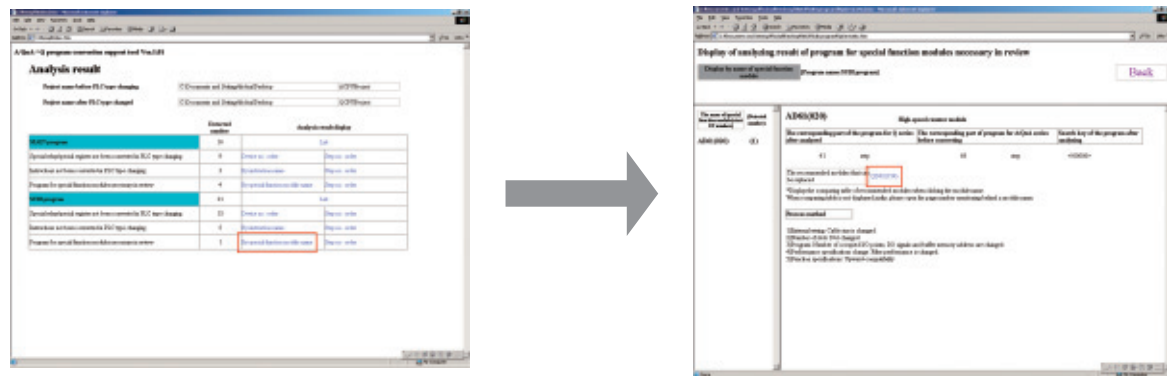


Click "By special function module name" in the "Programs for special function modules necessary in review" row.


Click the recommended module name next to "The recommended modules that can be replaced".

| QIBADV | QIBADH | Compatibility | Precautions for replacement | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|--|--------------------------------|---|--------------------------------|--|--------------------------------|--------------------------------|--------------------------------|--------------------------------|----------|-----------|-------|------------|---------|----------|-----------|--------|-----------|----------|---------|-----------|-------|------------|---------|--|--------------------|------------------------|-----------------|----------------------|---------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--|--------------------|------------------------|-------|----------------------|----------|----------------------|--------------------|----------------------|--------------------|-----------|-----------|-------|------------|--------|-----------|--------------|-----|---------------|--------|---------------------|--------------|--------|-----------------|--------|---|--|
| -10 to 10V/DC (Input resistance value: 1MΩ) | 0 to 20mA/DC (Input resistance value: 250Ω) | A | The voltage/current cannot be mixed for one module. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 16-bit, signed binary (Normal resolution mode: -4096 to 4095, High resolution mode: -12288 to 12287, -16384 to 16383) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1"> <thead> <tr> <th rowspan="2">Analog input range</th> <th colspan="2">Normal resolution mode</th> <th colspan="2">High resolution mode</th> </tr> <tr> <th>Digital output value</th> <th>Maximum resolution</th> <th>Digital output value</th> <th>Maximum resolution</th> </tr> </thead> <tbody> <tr> <td>0 to 10V</td> <td>0 to 4000</td> <td>2.5mV</td> <td>0 to 16000</td> <td>0.625mV</td> </tr> <tr> <td>0 to 5V</td> <td>0 to 2000</td> <td>1.25mV</td> <td>0 to 8000</td> <td>0.3125mV</td> </tr> <tr> <td>1 to 5V</td> <td>0 to 2000</td> <td>1.0mV</td> <td>0 to 12000</td> <td>0.333mV</td> </tr> <tr> <td>-10 to 10V</td> <td>4000 to 8000</td> <td>2.5mV</td> <td>-16000 to 16000</td> <td>0.625mV</td> </tr> <tr> <td>User range settings</td> <td>4000</td> <td>0.375mV</td> <td>-12000 to 12000</td> <td>0.333mV</td> </tr> </tbody> </table> | Analog input range | Normal resolution mode | | High resolution mode | | Digital output value | Maximum resolution | Digital output value | Maximum resolution | 0 to 10V | 0 to 4000 | 2.5mV | 0 to 16000 | 0.625mV | 0 to 5V | 0 to 2000 | 1.25mV | 0 to 8000 | 0.3125mV | 1 to 5V | 0 to 2000 | 1.0mV | 0 to 12000 | 0.333mV | -10 to 10V | 4000 to 8000 | 2.5mV | -16000 to 16000 | 0.625mV | User range settings | 4000 | 0.375mV | -12000 to 12000 | 0.333mV | <table border="1"> <thead> <tr> <th rowspan="2">Analog input range</th> <th colspan="2">Normal resolution mode</th> <th colspan="2">High resolution mode</th> </tr> <tr> <th>Digital output value</th> <th>Maximum resolution</th> <th>Digital output value</th> <th>Maximum resolution</th> </tr> </thead> <tbody> <tr> <td>0 to 20mA</td> <td>0 to 4000</td> <td>5μA</td> <td>0 to 12000</td> <td>1.66μA</td> </tr> <tr> <td>4 to 20mA</td> <td>4000 to 8000</td> <td>4μA</td> <td>4000 to 12000</td> <td>1.33μA</td> </tr> <tr> <td>User range settings</td> <td>4000 to 8000</td> <td>1.37μA</td> <td>-12000 to 12000</td> <td>1.33μA</td> </tr> </tbody> </table> | Analog input range | Normal resolution mode | | High resolution mode | | Digital output value | Maximum resolution | Digital output value | Maximum resolution | 0 to 20mA | 0 to 4000 | 5μA | 0 to 12000 | 1.66μA | 4 to 20mA | 4000 to 8000 | 4μA | 4000 to 12000 | 1.33μA | User range settings | 4000 to 8000 | 1.37μA | -12000 to 12000 | 1.33μA | A | As concept of gain value is changed, refer to [Analog-Digital Converter Module User's Manual] and then, confirm the I/O characteristics. |
| Analog input range | | Normal resolution mode | | High resolution mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Digital output value | Maximum resolution | Digital output value | Maximum resolution | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 to 10V | 0 to 4000 | 2.5mV | 0 to 16000 | 0.625mV | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 to 5V | 0 to 2000 | 1.25mV | 0 to 8000 | 0.3125mV | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 to 5V | 0 to 2000 | 1.0mV | 0 to 12000 | 0.333mV | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| -10 to 10V | 4000 to 8000 | 2.5mV | -16000 to 16000 | 0.625mV | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| User range settings | 4000 | 0.375mV | -12000 to 12000 | 0.333mV | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Analog input range | Normal resolution mode | | High resolution mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Digital output value | Maximum resolution | Digital output value | Maximum resolution | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 to 20mA | 0 to 4000 | 5μA | 0 to 12000 | 1.66μA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 to 20mA | 4000 to 8000 | 4μA | 4000 to 12000 | 1.33μA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| User range settings | 4000 to 8000 | 1.37μA | -12000 to 12000 | 1.33μA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1"> <thead> <tr> <th rowspan="2">Analog input range</th> <th colspan="2">Normal resolution mode</th> <th colspan="2">High resolution mode</th> </tr> <tr> <th>Arbit. temperature (T to 15°C)</th> <th>Arbit. temperature (T to 15°C)</th> <th>Arbit. temperature (T to 15°C)</th> <th>Arbit. temperature (T to 15°C)</th> </tr> </thead> <tbody> <tr> <td>0 to 5V</td> <td>±0.2%</td> <td>±0.2%</td> <td>±0.2%</td> <td>±0.2%</td> </tr> <tr> <td>0 to 10V</td> <td>±0.2%</td> <td>±0.2%</td> <td>±0.2%</td> <td>±0.2%</td> </tr> <tr> <td>1 to 5V</td> <td>±0.2%</td> <td>±0.2%</td> <td>±0.2%</td> <td>±0.2%</td> </tr> </tbody> </table> | Analog input range | Normal resolution mode | | High resolution mode | | Arbit. temperature (T to 15°C) | Arbit. temperature (T to 15°C) | Arbit. temperature (T to 15°C) | Arbit. temperature (T to 15°C) | 0 to 5V | ±0.2% | ±0.2% | ±0.2% | ±0.2% | 0 to 10V | ±0.2% | ±0.2% | ±0.2% | ±0.2% | 1 to 5V | ±0.2% | ±0.2% | ±0.2% | ±0.2% | <table border="1"> <thead> <tr> <th rowspan="2">Analog input range</th> <th colspan="2">Normal resolution mode</th> <th colspan="2">High resolution mode</th> </tr> <tr> <th>Arbit. temperature (T to 15°C)</th> <th>Arbit. temperature (T to 15°C)</th> <th>Arbit. temperature (T to 15°C)</th> <th>Arbit. temperature (T to 15°C)</th> </tr> </thead> <tbody> <tr> <td>0 to 5V</td> <td>±0.2%</td> <td>±0.2%</td> <td>±0.2%</td> <td>±0.2%</td> </tr> <tr> <td>0 to 10V</td> <td>±0.2%</td> <td>±0.2%</td> <td>±0.2%</td> <td>±0.2%</td> </tr> <tr> <td>1 to 5V</td> <td>±0.2%</td> <td>±0.2%</td> <td>±0.2%</td> <td>±0.2%</td> </tr> </tbody> </table> | Analog input range | Normal resolution mode | | High resolution mode | | Arbit. temperature (T to 15°C) | Arbit. temperature (T to 15°C) | Arbit. temperature (T to 15°C) | Arbit. temperature (T to 15°C) | 0 to 5V | ±0.2% | ±0.2% | ±0.2% | ±0.2% | 0 to 10V | ±0.2% | ±0.2% | ±0.2% | ±0.2% | 1 to 5V | ±0.2% | ±0.2% | ±0.2% | ±0.2% | O | | | | | | | | | | | |
| Analog input range | | Normal resolution mode | | High resolution mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Arbit. temperature (T to 15°C) | Arbit. temperature (T to 15°C) | Arbit. temperature (T to 15°C) | Arbit. temperature (T to 15°C) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 to 5V | ±0.2% | ±0.2% | ±0.2% | ±0.2% | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 to 10V | ±0.2% | ±0.2% | ±0.2% | ±0.2% | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 to 5V | ±0.2% | ±0.2% | ±0.2% | ±0.2% | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Analog input range | Normal resolution mode | | High resolution mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Arbit. temperature (T to 15°C) | Arbit. temperature (T to 15°C) | Arbit. temperature (T to 15°C) | Arbit. temperature (T to 15°C) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 to 5V | ±0.2% | ±0.2% | ±0.2% | ±0.2% | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 to 10V | ±0.2% | ±0.2% | ±0.2% | ±0.2% | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 to 5V | ±0.2% | ±0.2% | ±0.2% | ±0.2% | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

(Example 2) Special relays and registers which are not converted to the Q program

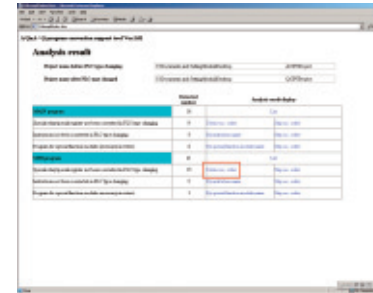

Click "Device no. order" in the "Special relay/special register not been converted in PLC type changing" row.

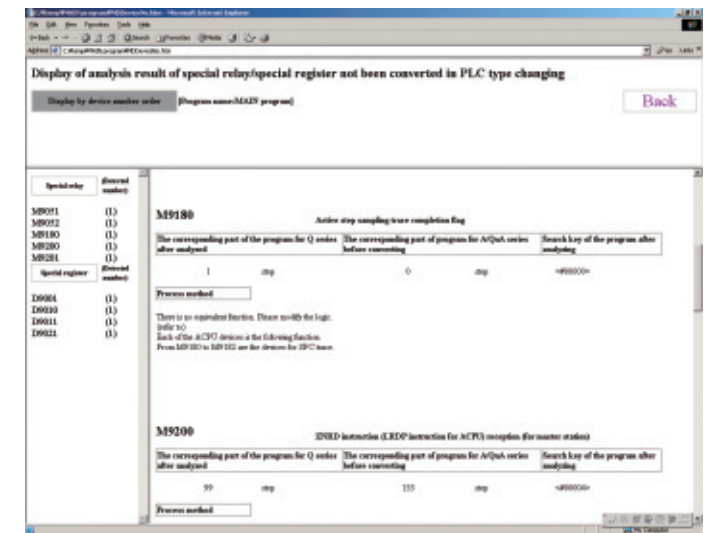

A → Q Conversion Support Tool for Motion Controller

Coming Soon

A support tool for motion controllers, which converts A Series sequence programs into Q Series sequence programs, will be available soon.

1. Displays statements of unconvertible dedicated motion commands

For automatically unconvertible dedicated motion commands such as SVST and CHGA, the original and converted commands are displayed as shown below. The commands contained in the circuit block are displayed one line at a time. [E.g.] %O0001 [SVST J1 KO] → OUT SM1255 ("%O0001" is a search keyword in the review information list.)

2. Displays statements of dedicated motion devices

For dedicated motion devices such as start receipt flag M2001, a message requesting review is displayed.

3. Converts SW3RN-LADDERP format comment files to GX Developer format

For A/QnA Large Type Series


NEW

QA65B-E/QA68B-E Extension Base Unit

Replacing the CPU with a QCPU while using existing modules.

The A (Large type) Series can be replaced with the Q Series step by Step.

●The QA6□B-E type extension base units enable to utilize existing A (large type) Series modules. Just mounting the existing modules on the extension base unit and connecting it to the Q Series, a new system controlled by Q Series CPU can be constructed! Also, the modules can be replaced step by step depending on your needs. As shown in the Step 2, you can have the complete Q Series system configuration eventually.

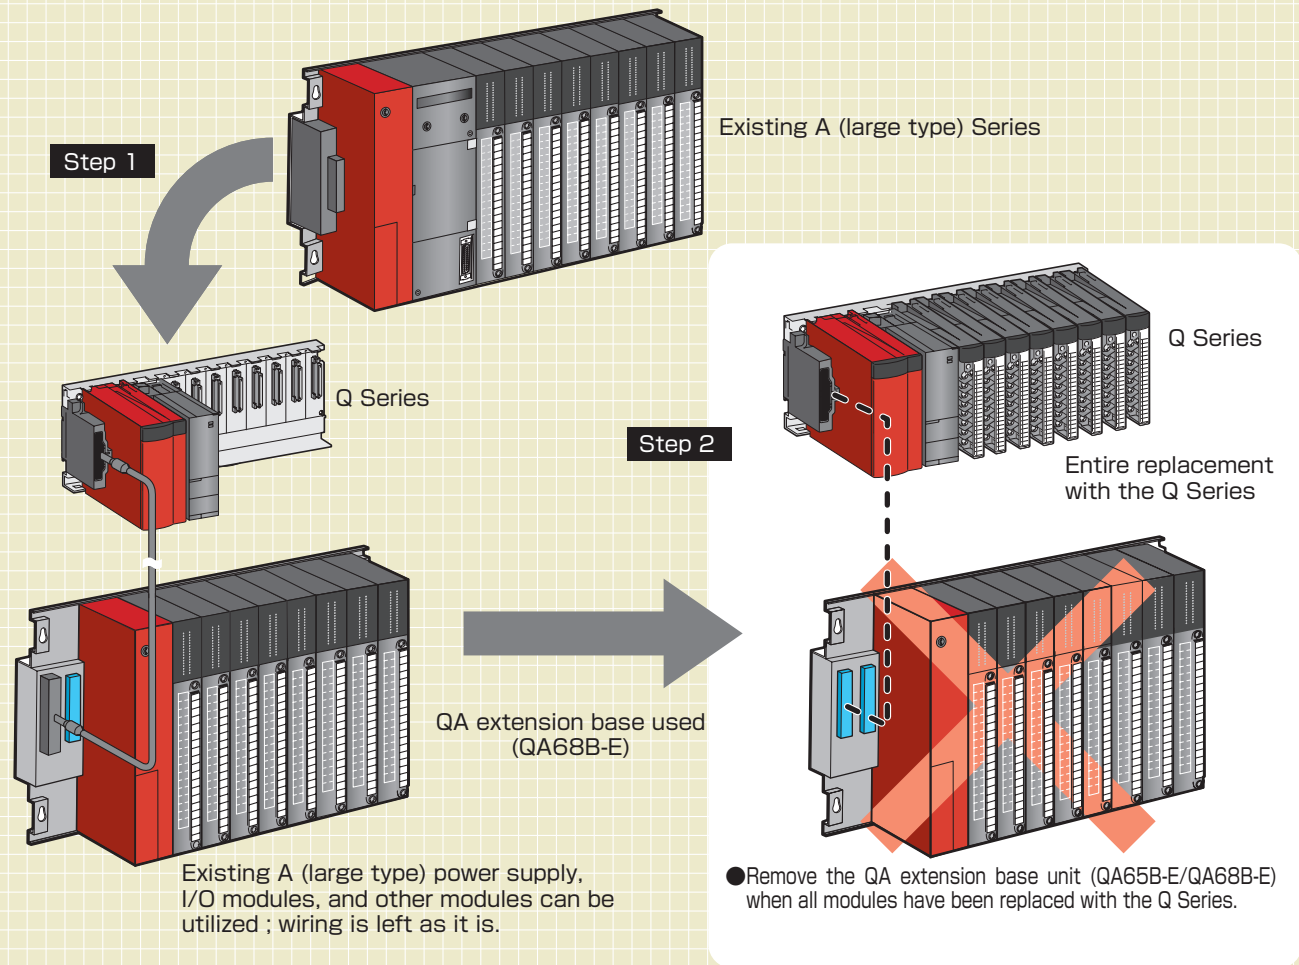

- The QA6□B-E type extension base units are compatible with High-performance CPUs only. Basic model CPUs, Process CPUs, and Redundant CPUs do not have compatibility.
- Please refer to the "QA65B/QA68B Extension Base Unit User's Manual (IB-0800158)" for details of modules that can be mounted on the QA6□B-E type extension base unit.

For AnS/Q2AS Small Type Series **QA1S65B-E/QA1S68B-E Extension Base Unit**

Now Available

- The AnS/Q2AS small type Series modules can also be used by connecting as a QCPU extension base.
- These extension base units can be used with QA65B-E and QA68B-E type units.


For A/QnA Large Type Series

NEW

A-A1S Module Conversion Adapter (A1ADP-XY: For I/O Module, A1ADP-SP: For Special Function Module)

Using small type modules when additional modules are required for A/QnA System modifications.


If only small number of I/O points are to be added, and there are empty slots on the base unit:

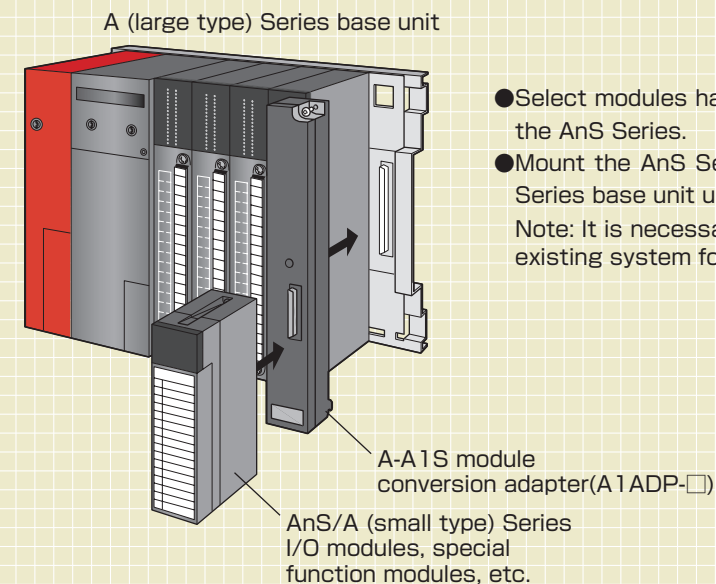

- Select modules having necessary functions for the modifications from the AnS Series.
 - Mount the AnS Series module on an empty slot of the A (large type) Series base unit using the A-A1S module conversion adapter.
- Note: It is necessary to have empty slots and enough I/O points in the existing system for the modifications.

If large number of I/O points are to be added, or there are no empty slots on the base unit:

- Select modules having necessary functions for the modifications from the CC-Link lineup.
- Remove one/or some existing modules from A (large type) Series base unit to mount the AnS Series CC-Link system master/local station modules.
- Mount the AnS Series CC-Link system master/local station module on the empty slot of the A (large type) Series base unit using the A-A1S module conversion adapter.
- To replace functions of the removed modules, add modules on the CC-Link remote I/O.

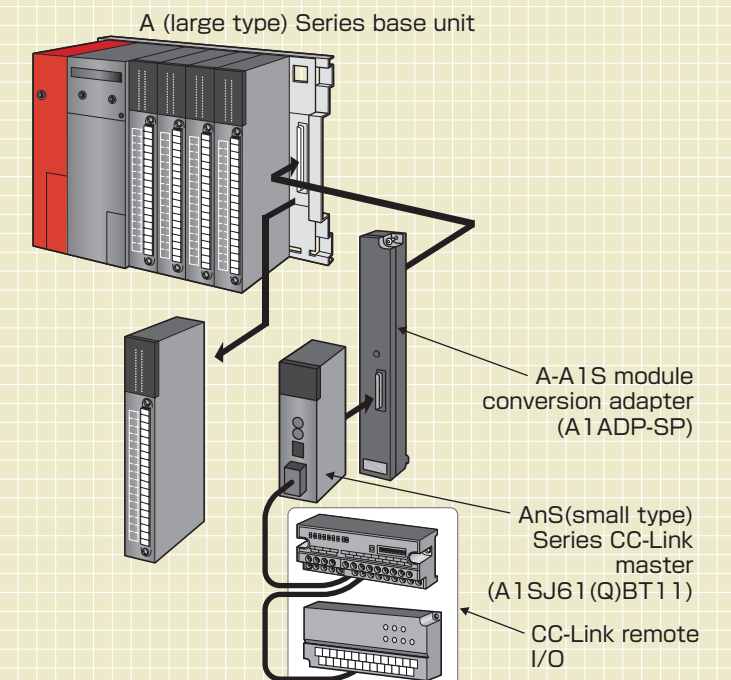


AnS (Small type) local station dedicated module Spring, 2007 Available


Q Series can be added to the existing MELSECNET (II), enabling to share link data.

The Q Series can be added to the existing MELSECNET (II) as a local station.

Mount the AnS local station dedicated module on the Q Series QA1S6□B-E extension base unit to connect to the MELSECNET(II) system.
(The QA1S6□B-E type extension base unit are compatible with High-performance CPUs, Process CPUs, Redundant CPUs do not have compatibility.)

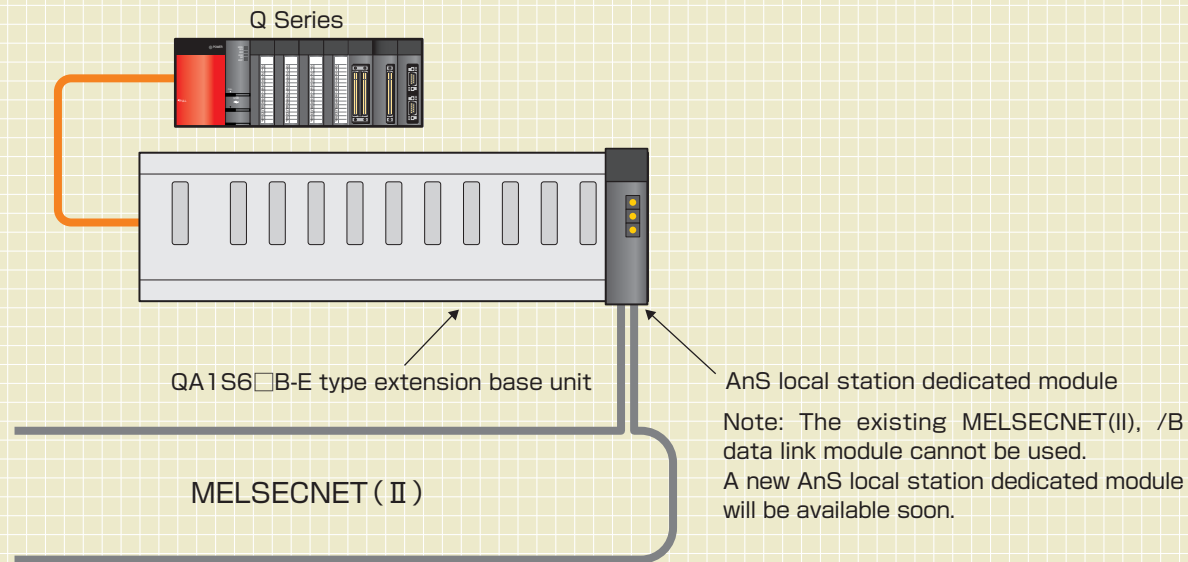

Example of MELSECNET (II) configuration incorporating the Q Series

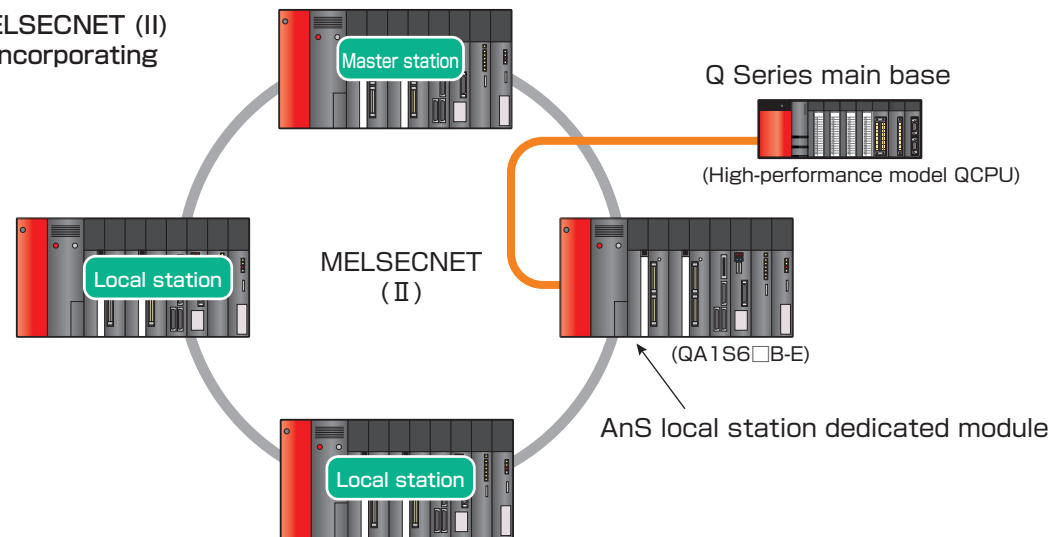


MELSECNET(II), MELSECNET/10 gateway set Q6KT-NETGW-□□ Fall, 2006 Available


Replacing the existing MELSECNET (II) with the Q Series MELSECNET/10 step by step.

Part of the existing MELSECNET (II) can be replaced with the Q Series MELSECNET/10, and data is shared via a gateway station.

(Example) Partial replacement of MELSECNET (II), from A (large type) Series PLCs to Q Series PLCs

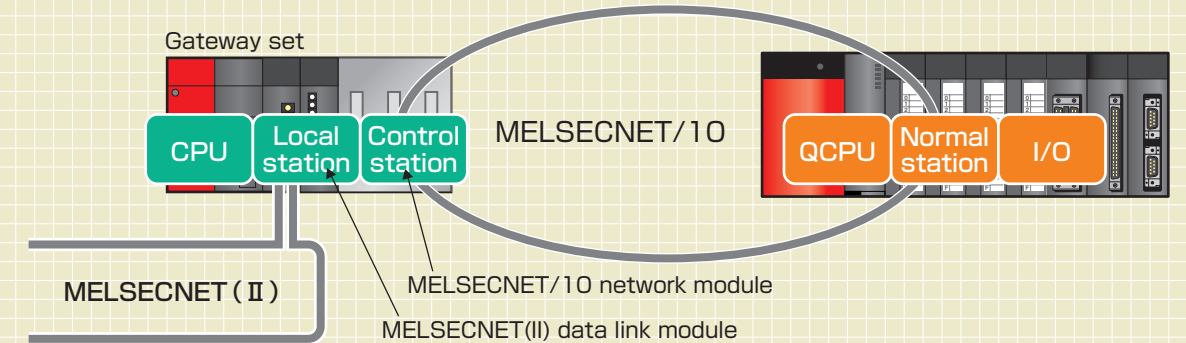

Step-by-step replacement with the Q Series

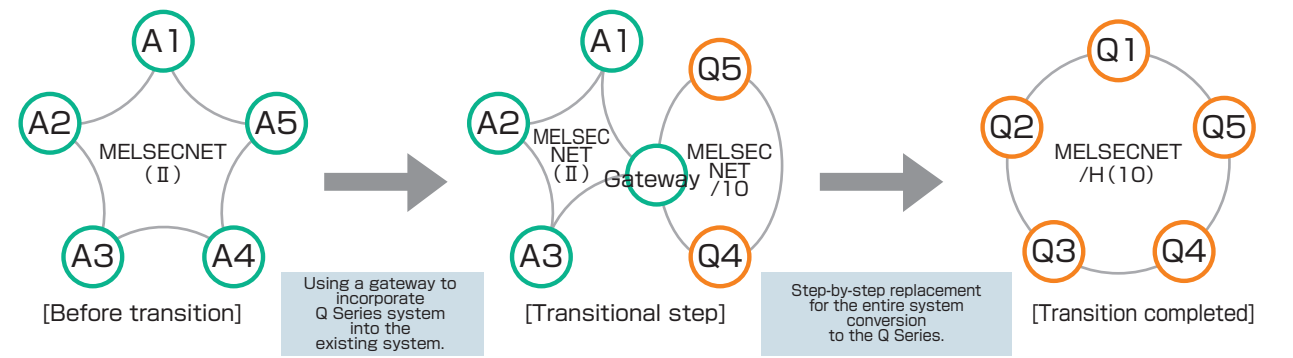

Please check the cautions and restrictions for the relay station network parameters, etc. in the related manuals.

Gateway set model list

| Set model name | Main part | | | NET (II)/B part | NET/10 part |
|----------------|-----------|---------|---------|-----------------|-------------|
| Q6KT-NETGW-SS | A1S35B | A1S61PN | Q2ASCPU | A1SJ71AP21 | A1SJ71QLP21 |
| Q6KT-NETGW-GS | | | | A1SJ71AP21-S3 | A1SJ71QLP21 |
| Q6KT-NETGW-RS | | | | A1SJ71AR21 | A1SJ71QLP21 |
| Q6KT-NETGW-RB | | | | | A1SJ71QBR11 |
| Q6KT-NETGW-TS | | | | | A1SJ71QLP21 |
| Q6KT-NETGW-TB | | | | | A1SJ71QBR11 |


| | | | | |
|------------------------|------------------------------|-----|--|---|
| Reading the model name | Q6KT-NETGW-□□ Gateway Set | ① ② | ① Network type: MELSECNET(II) | ② Network type: MELSECNET/10 |
| | | | S: SI optical fiber cable (double loop) | S: SI optical fiber cable (double loop) |
| | | | G: GI-50/125 optical fiber cable (double loop) | B: Coaxial cable (bus) |
| | | | R: Coaxial cable (double loop) | |
| | | | T: Twisted pair cable (bus) | |

MELSECNET/10 Network Module (Production continues)

Replacing with the MELSECNET/10 system all at once using existing wiring for MELSECNET (II) system.

Step-by-step transition to the Q Series system, mixing A Series and Q Series systems.

The entire MELSECNET(II) system is replaced with a MELSECNET/10 system while using existing wiring. Then the ACPUs can be replaced with the QCPUs step by step.
 Note: The MELSECNET/B system cannot be replaced because it uses twisted pair cables.

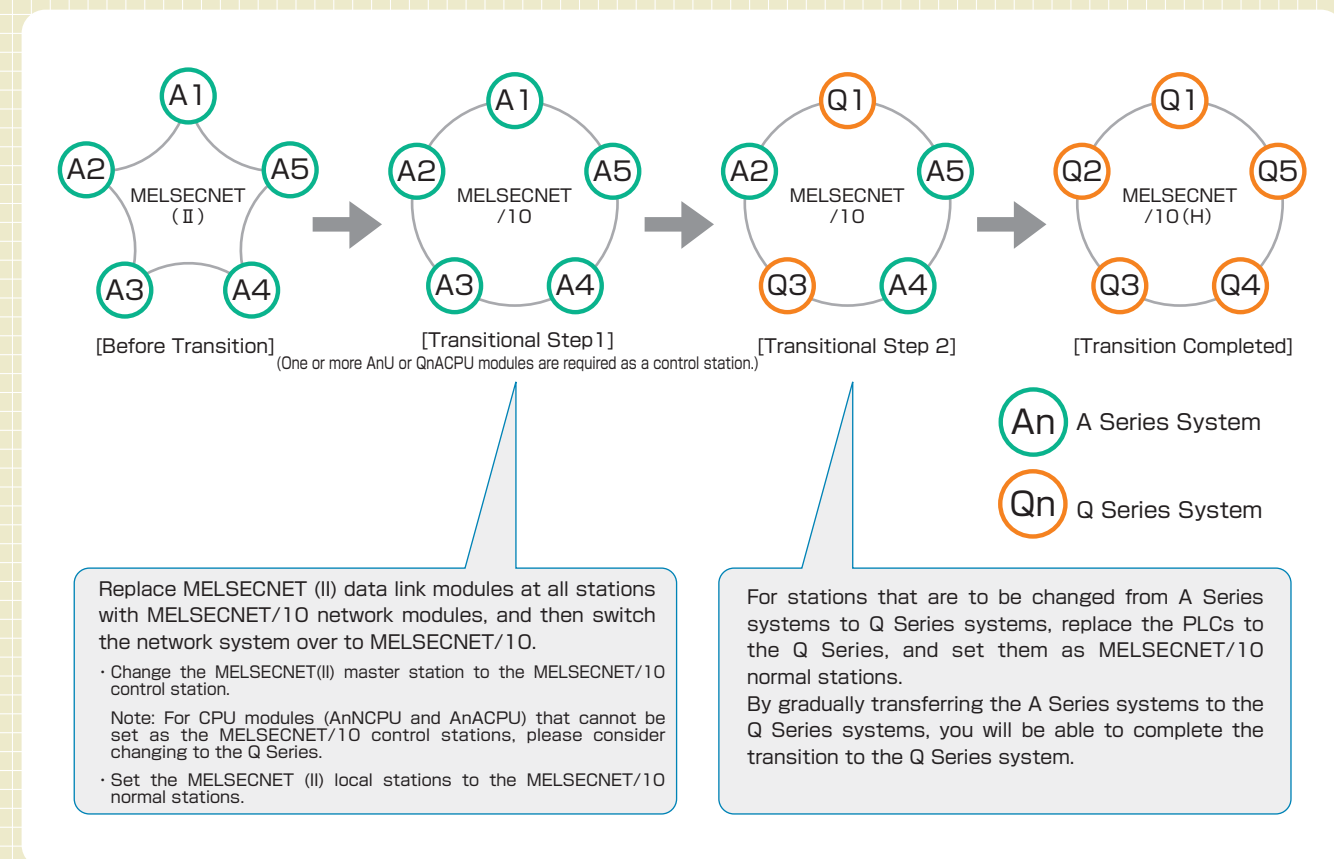


Production of A/QnA (Large type) CPU compatible MELSECNET/10 network modules will be continued. Please refer to the "Additional Support" section on page 15 for details.

Available Soon TBA(To be announced)

A0J2(H) Interface Terminal

Replacing only the CPU module with the QCPU using existing wiring.

- Interface terminal allowing the use of the A0J2(H) Series I/O module wiring
 At the replacement with the Q Series system, existing wiring can be used for the interface terminal without modification.
- Interface terminal
 The interface terminal contains internal relays and has functions for converting DC output to relay output and AC input to DC input. Therefore, it can be replaced in combination with a Q Series FCN connector type DC I/O module. To connect the interface terminal and an alternative module, use a cable for connection between MIL and FCN connectors.

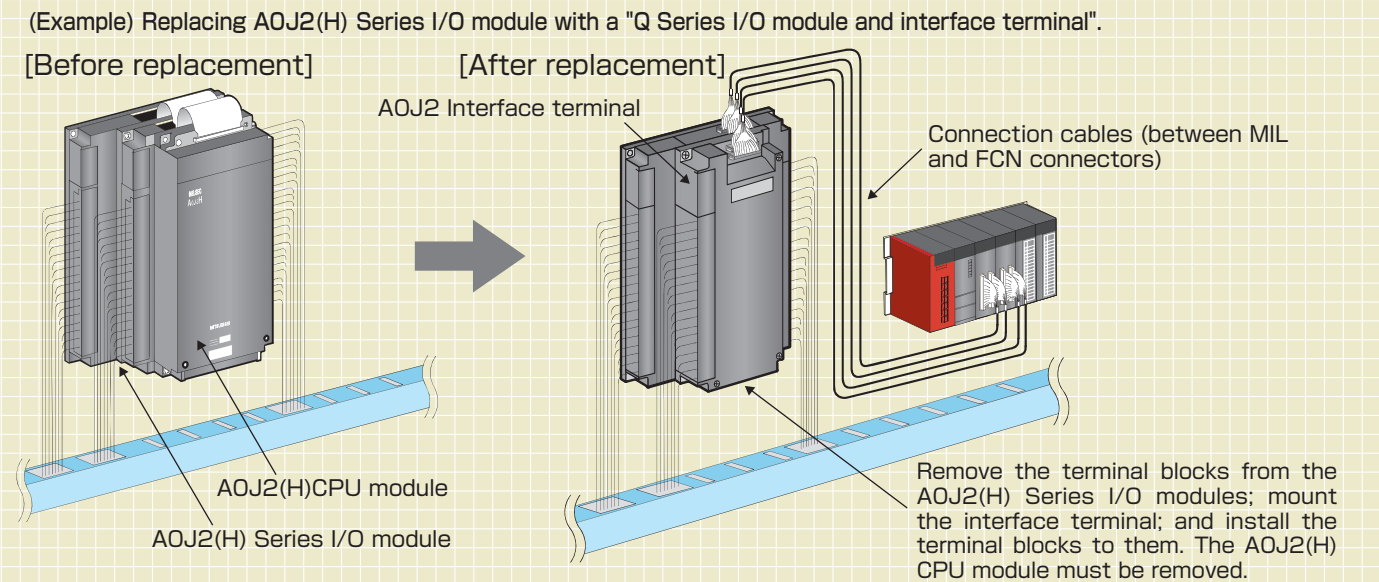

- Replacing with AnS and CC-Link is also possible.
 In addition to the Q Series, it is also possible to replace with the AnS (small type) Series and CC-Link FCN connector type DC I/O module.

Model list

| Discontinued model | | Alternative model | | Discontinued model | | Alternative model | | | | | | | | | | |
|--------------------|---------------|--------------------|-------------------------|--------------------|------------|-------------------------------|-------------------------|-------------------------------|---------------|-------------------------|------------|-------------------------|------------|-------------------------------|------------|-------------------------|
| Product | Model | Alternative module | Interface terminal | Product | Model | Alternative module | Interface terminal | | | | | | | | | |
| Output module | A0J2-E24R | QY41P | 24R interface terminal | I/O module | A0J2-E56AR | QX41+QY41P | 56AR interface terminal | | | | | | | | | |
| | | AJ65SBTCF1-32T | | | | AJ65SBTCF1-32D+AJ65SBTCF1-32T | | | | | | | | | | |
| | | A1SY41 | | | | A1SX41+A1SY41 | | | | | | | | | | |
| I/O module | A0J2-E28DR | QX41+QY41P | 28DR interface terminal | | | A0J2-E56DR | | AJ65SBTCF1-32D+AJ65SBTCF1-32T | A1SH42 | 56DR interface terminal | | | | | | |
| | | QH42P | | | | | | | A1SX41+A1SY41 | | | | | | | |
| | | A1SH42 | | | | | | | A1SH42 | | | | | | | |
| | | A1SH42 | | | | | | | A1SH42 | | | | | | | |
| | | I/O module | | | | | | | A0J2-E28DT | | QX41+QY41P | 28DT interface terminal | A0J2-E56DT | AJ65SBTCF1-32D+AJ65SBTCF1-32T | QX41+QY41P | 56DT interface terminal |
| | | | | | | | | | | | QH42P | | | | QH42P | |
| A1SX41+A1SY41 | A1SX41+A1SY41 | | | | | | | | | | | | | | | |
| A1SH42 | A1SH42 | | | | | | | | | | | | | | | |


MELSECNET/MINI-S3 I/O Module Wiring Conversion Adapter

Available Soon TBA(To be announced)

Replacing with the CC-Link system using existing MELSECNET/MINI-S3 I/O wiring.

Install the wiring terminal block on the CC-Link module to eliminate the need for rewiring.

(Example) Replacing AJ35TB2-16D with AJ65BTB2-16D using a 34-pin conversion adapter

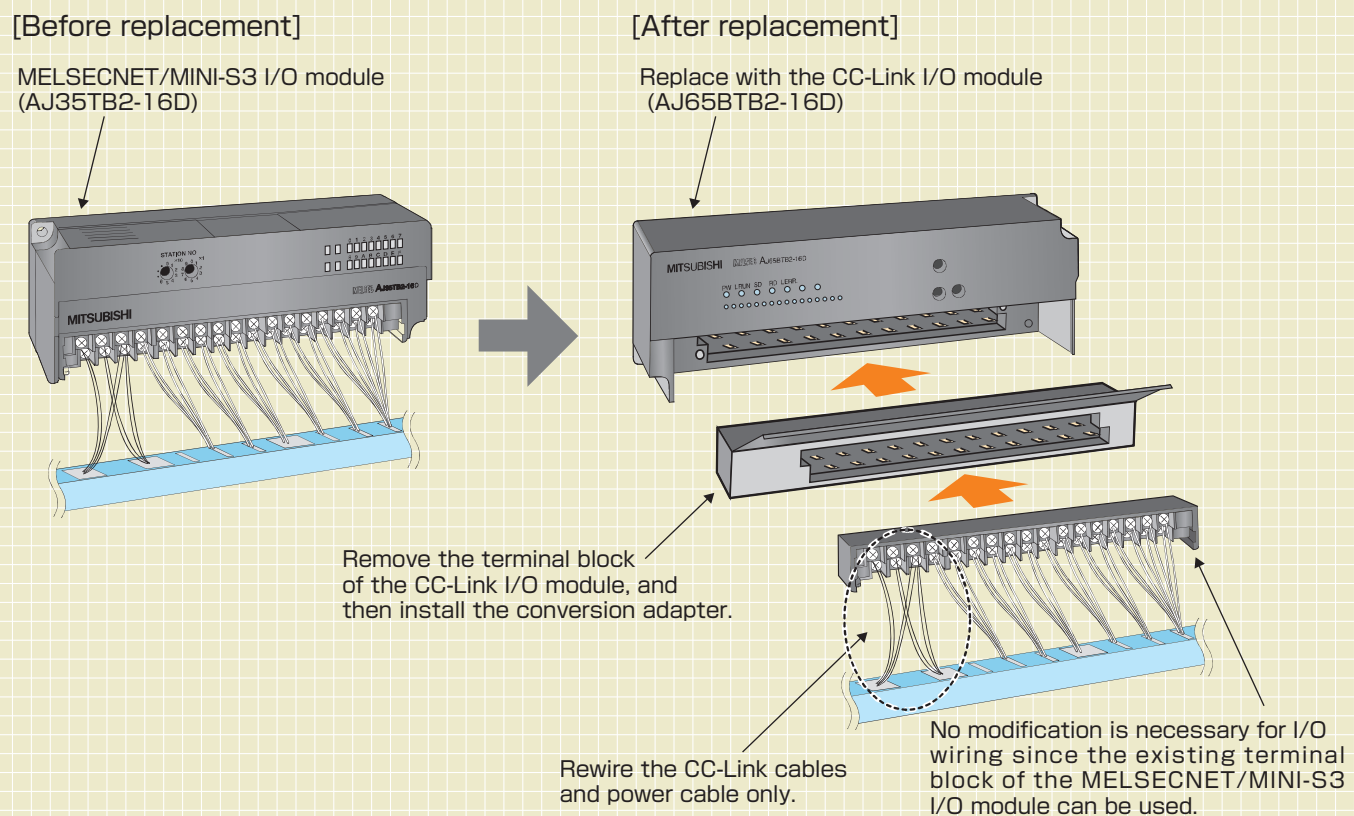

Model list

| Product | Model | Alternative model | | Remarks (Restrictions) |
|---------------|-------------|--------------------|---------------------------------|---|
| | | Alternative module | Conversion adapter | |
| Input module | AJ35TB1-16D | AJ65BTB1-16D | 26-pin conversion adapter*1 | *1 The total size is increased due to addition of the adapter to the alternative module. *2 Additional wiring to CTL+(External power supply for output) is required. |
| | AJ35TB2-16D | AJ65BTB2-16D | 34-pin conversion adapter*1 | |
| Output module | AJ35TB1-16T | AJ65BTB1-16T | 26-pin conversion adapter *1.*2 | |


Upgrade Tool

(Manufactured by Mitsubishi Electric Engineering Co., Ltd.)

Replacing with the Q Series base unit using existing wiring.

The upgrade tool consists of two parts: a conversion adapter to connect existing wiring of A (large type) Series I/O modules to Q Series I/O modules; and a base adapter to mount Q Series base unit, including a supporting part to secure the bottom of the conversion adapters.

- Remove the entire A (large type) Series base unit and mount the base adapter in the same position. The existing mounting holes for the A (large type) Series base unit can be used to mount the base adapter, without having to make new installation holes.
- Mount a Q Series base unit on the base adapter.
- Attach the conversion adapters to the Q Series I/O modules.
- Remove the terminal blocks from the existing A(large type) Series I/O modules and mount the terminal blocks on the conversion adapters. (The existing wiring can be used without modification.)

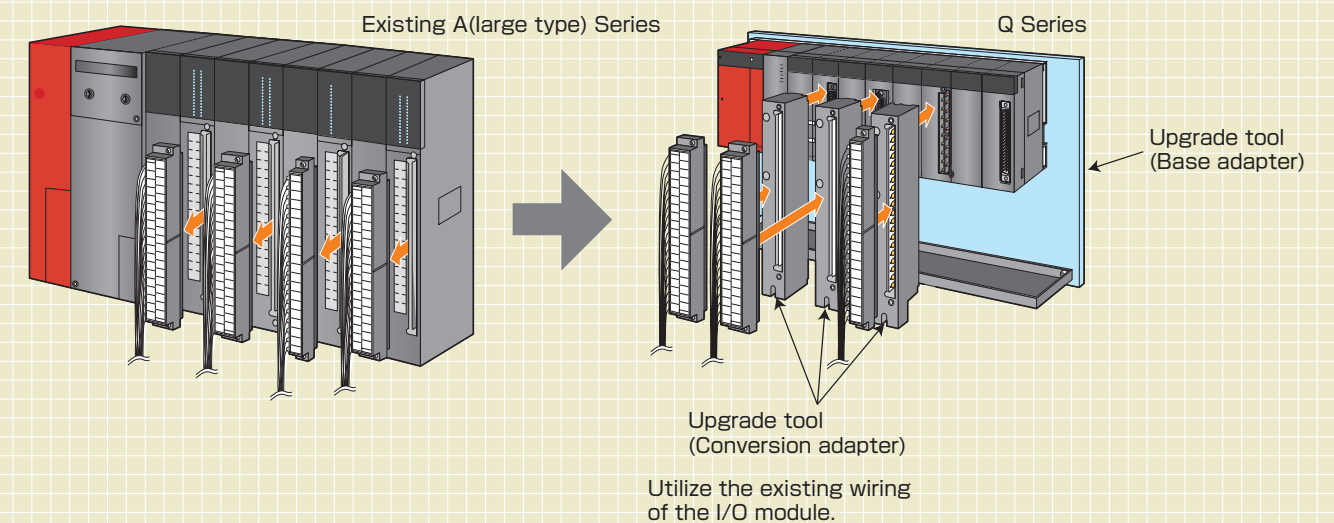

Please refer to the "Related Catalog" under the "Additional support" section on page 16 for details.

Additional Support

Offering a variety of replacement support

Global FA Centers

"Mitsubishi Global FA Centers" are located throughout North America, Europe, and Asia to develop products complying with international standards and to provide attentive services.



North American FA Center
MITSUBISHI ELECTRIC AUTOMATION, INC.
500 Corporate Woods Parkway, Vernon Hills, IL60061 U.S.A.
Telephone +1-847-478-2100/Fax +1-847-478-2396
Area covered: North America, Mexico



Shanghai FA Center
MITSUBISHI ELECTRIC AUTOMATION (SHANGHAI)LTD.
1-3F Block5, 103
Cao Bao Road, Shanghai 200233, China
Telephone +86-21-6121-2460/Fax +86-21-6121-2424
Area covered: China



European FA Center
MITSUBISHI ELECTRIC EUROPE B.V. GERMAN BRANCH
(Industrial Automation Division)
Gothaer Strasse 8, D-40880 Ratingen, Germany
Telephone +49-2102-486-0/Fax +49-2102-486-7170
Area covered: Europe



Beijing FA Center
MITSUBISHI ELECTRIC AUTOMATION (SHANGHAI)LTD.,
BEIJING OFFICE
Unit917-918, 9/F Office Tower 1, Hensudon Center, 18
Jianguomennei Dajie, Dongcheng District, Beijing 100005, China
Telephone +86-10-6518-8830/Fax +86-10-6518-8030
Area covered: China



UK FA Center
MITSUBISHI ELECTRIC EUROPE B.V. UK BRANCH
(Customer Technology Center)
Travellers Lane, Hatfield, Hertfordshire, AL10 8XB, UK
Telephone +44-1707-276100/Fax 44-1707-278992
Area covered: UK, Ireland



Taipei FA Center
SETSUYO ENTERPRISE CO.,LTD.
6F No.105 Wu-Kung 3rd RD, Wu-ku Hsiang, Taipei Hsiene, Taiwan
Telephone +886-2-2299-2499/Fax +866-2-2299-2509
Area covered: Taiwan



Korean FA Center
MITSUBISHI ELECTRIC AUTOMATION KOREA CO.,LTD.
Dong Seo Game Channel Building 2F,
660-11 Deungchon-Dong, Kangseo-Ku, Seoul 157-030, Korea
Telephone +82-2-3660-9607/Fax +82-2-3663-0475
Area covered: Korea



Taichung FA Center
SETSUYO ENTERPRISE CO.,LTD.
7F-7, No.77, Zheng Bei 1 st RD, Taichung City, Taiwan
Telephone +886-4-2258-1027/Fax +866-4-2252-0967
Area covered: Taiwan




Hong Kong FA Center
MITSUBISHI ELECTRIC AUTOMATION (HONG KONG)LTD.
10/F., Manulife Tower, 169 Electric Road, North Point,
Hong Kong
Telephone +852-2887-8870/Fax +852-2887-7984
Area covered: China



ASEAN FA Center
MITSUBISHI ELECTRIC ASIA PTE,LTD.
307 Alexandra Road #05-01/02
Mitsubishi Electric Building Singapore, 159943
Telephone +65-6470-2480/Fax +65-6476-7439
Area covered: Southeast Asia, India



Tianjin FA Center
MITSUBISHI ELECTRIC AUTOMATION (SHANGHAI)LTD.
TIANJIN OFFICE
Room No.909,Great Ocean Building,
No.200 Shi Zi Lin Avenue,
He Bei District, Tianjin 300143 China
Telephone +86-22-26359090/Fax +86-22-26359050
Area covered: China

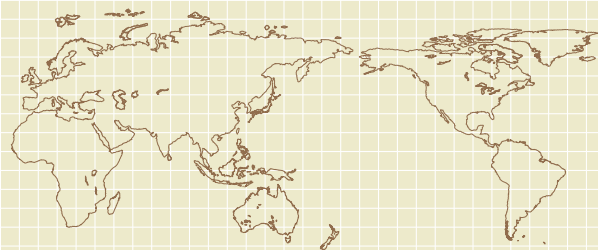

Related Catalog




Upgrade Tool

Convenient tool for upgrading the MELSEC-A Series to the MELSEC-Q Series

- Easy replacement with the MELSEC-Q Series
- Greatly reduced time and cost for wiring to I/O modules
- Existing PLC programs can be reused.
- Also helpful for upgrading as a total system

Additional Support

Production Discontinuation Schedule

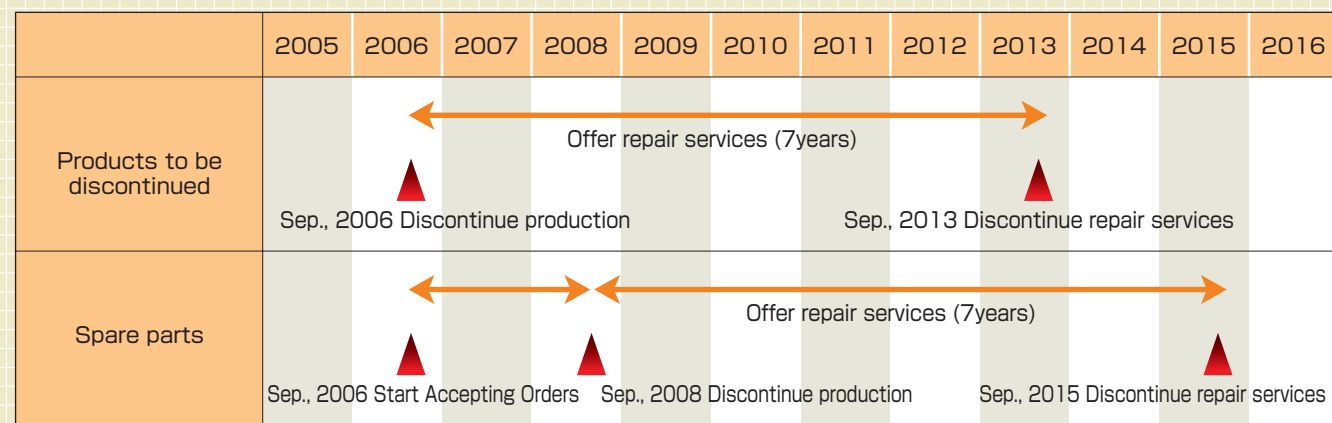

Models to be discontinued

| Models to be discontinued | | | Production discontinuation |
|---|----------------------|---|----------------------------|
| Large type A Series/ Large type QnA Series | A/QnA (Large type) | ● CPU module ● I/O module ● Special function module ● Data link module (MELSECNET (II), / B module etc.) | End of Sep. 2006 |
| A2C Series | A2C | ● CPU module | End of Sep. 2006 |
| | | ● A2C I/O module ● Special function module etc. | End of Sep. 2008 |
| PC interface boards | MELSECNET (II), /B | ● MELSECNET (II), / B interface board | End of Sep. 2008 |
| Small type AnS Series | MELSECNET (II), /B*1 | ● Remote I/O module | End of Sep. 2008 |
| | MELSECNET/MINI-S3 | ● AnS (Small type) master module ● I/O module | End of Sep. 2008 |
| AOJ2 (H) Series | AOJ2 (H) | ● CPU module ● Power supply module ● I/O module ● Special function module etc. | End of Sep. 2008 |

*1 : Production of AnS Series master/local station data link modules (A1SJ71AP21, A1SJ71AR21, and A1SJ71AT21B) will be continued.

Exceptions

Models to be continued

Although most of the A/QnA (Large type) Series products are discontinued in September, 2006, production of the following modules will be continued.

Note: In accordance with the continuation of production, model names may be changed.

Power supply module

| Product Name | Model Name |
|---|-------------------|
| A/QnA (Large type) Series power supply module | A61P, A63P, A61RP |

If using power supplies other than the above, please purchase spare parts or consider switching over to one of the above models.

MELSECNET/10 network module

| Product Name | Model Name | |
|--|--|--|
| | Control/Normal Station | Remote I/O Station |
| A/QnA (Large type) Series MELSECNET/10 network module | AJ71BR11 AJ71LP21 AJ71LP21G AJ71LR21 AJ71QBR11 AJ71QLP21 AJ71QLP21G AJ71QLP21S AJ71QLR21 | AJ72BR15 AJ72LP25 AJ72LP25G AJ72LR25 AJ72QBR15 AJ72QLP25 AJ72QLP25G AJ72QLR25 |

Spare parts

Production of certain models as spare parts will be extended until the end of September, 2008. Please refer to the Technical Bulletin (T99-0050F) for more information.

Note: In accordance with the continuation of production, model names may be changed.

Mitsubishi PLC MELSEC-A/QnA (Large Type) Upgrade Catalog

Precautions for Choosing the Products

This catalog explains the typical features and functions of the Q series PLCs and does not provide restrictions and other information on usage and module combinations. When choosing the products, always check the detailed specifications, restrictions, etc. of the products in the Q series data book. When using the products, always read the user's manuals of the products.

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

⚠ For safe use

- To use the products given in this catalog properly, always read the "manuals" before starting to use them.
- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi.
- This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

| Country/Region | Sales office | Tel/Fax |
|----------------|---|--|
| U.S.A | Mitsubishi Electric Automation Inc. 500 Corporate Woods Parkway Vernon Hills, IL 60061 | Tel : +1-847-478-2100 Fax : +1-847-478-2396 |
| Brazil | MELCO-TEC Rep. Com.e Assessoria Tecnica Ltda. Rua Correia Dias, 184, Edificio Paraiso Trade Center-8 andar Paraiso, Sao Paulo, SP Brazil | Tel : +55-11-5908-8331 Fax : +55-11-5574-5296 |
| Germany | Mitsubishi Electric Europe B.V. German Branch Gothaer Strasse 8 D-40880 Ratingen, GERMANY | Tel : +49-2102-486-0 Fax : +49-2102-486-7170 |
| U.K | Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, Hatfield, Herts., AL10 8XB,UK | Tel : +44-1707-276100 Fax : +44-1707-278992 |
| Italy | Mitsubishi Electric Europe B.V. Italian Branch VIALE COLLEONI 7-20041 Agrate Brianza(Milano),Italy | Tel : +39-039-60531 Fax : +39-039-6053312 |
| Spain | Mitsubishi Electric Europe B.V. Spanish Branch Carretera de Rubi 76-80 E-08190 Sant Cugat del Valles(Barcelona), Spain | Tel : +34-93-565-3131 Fax : +34-93-589-2948 |
| France | Mitsubishi Electric Europe B.V. French Branch 25 Boulevard des Bouvets, F-92741 Nanterre Cedex, France | Tel : +33-1-5568-5568 Fax : +33-1-5568-5685 |
| South Africa | Circuit Breaker Industries LTD Private Bag 2016, 1600 Isando, Tripswitch Drive, Elandsfontein Gauteng, South Africa | Tel : +27-11-928-2000 Fax : +27-11-392-2354 |
| Hong Kong | Mitsubishi Electric Automation (Hong Kong) Ltd. 10th Floor, Manulife Tower, 169 Electric Road, North Point, HongKong | Tel : +852-2887-8870 Fax : +852-2887-7984 |
| China | Mitsubishi Electric Automation (Shanghai) Ltd. 4/F Zhi Fu Plazz, No.80 Xin Chang Road, Shanghai 200003 CHINA | Tel : +86-21-6120-0808 Fax : +86-21-6121-2424 |
| Taiwan | Setsuyo Enterprise Co., Ltd. 6F., No.105 Wu-Kung 3rd.RD, Wu-Ku Hsiang, Taipei Hsine, Taiwan | Tel : +886-2-2299-2499 Fax : +886-2-2299-2509 |
| Korea | Mitsubishi Electric Automation Korea Co., Ltd. B1F, 2F, 1480-6, Deungchon-Dong, Kangseo-Ku, Seoul, 157-200, Korea | Tel : +82-2-3660-9552 Fax : +82-2-3664-8372 |
| Singapore | Mitsubishi Electric Asia Pte, Ltd. 307 Alexandra Road #05-01/02, Mitsubishi Electric Bulding Singapore 159943 | Tel : +65-6470-2480 Fax : +65-6476-7439 |
| Thailand | F.A.Tech Co., Ltd. 896/19, 20, 21, 22,S.V. City Building, office Tower1, Floor 12 Rama III Rd, Bangpongpan, Yannawa, Bangkok 10120 | Tel : +66-2-682-6522 Fax : +66-2-682-6020 |
| Indonesia | Indonesia P.T. Autoteknindo SUMBER MAKMUR Muara Karang Selatan Block A/Utara No.1 Kav. No.11 Kawasan Industri/Pergudangan Jakarta-Utara 14440 | Tel : +62-21-663-0833 Fax : +62-21-663-0832 |
| India | Messung Systems Pvt, Ltd. Electronic Sadan NO: III Unit No15, M.I.D.C Bhosari, Pune-411026, India | Tel : +91-20-2712-3130 Fax : +91-20-2712-8180 |
| Australia | Mitsubishi Electric Australia Pty. Ltd. 348 Victoria Road, Rydalmere, N.S.W 2116, Australia | Tel : +61-2-9684-7777 Fax : +61-2-9684-7245 |



HEAD OFFICE: TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS: 1-14,YADA-MINAMI 5,HIGASHI-KU,NAGOYA,JAPAN

When exported from Japan, this manual does not require application to the Ministry of International Trade and Industry for service transaction permission.